

# PILOT'S OPERATING HANDBOOK

AND

## FAA APPROVED AIRPLANE FLIGHT MANUAL **MOONEY** **M20J**

THIS HANDBOOK INCLUDES THE MATERIAL REQUIRED TO BE FURNISHED TO THE PILOT BY THE FEDERAL AVIATION REGULATIONS, AND CONSTITUTES THE FAA APPROVED AIRPLANE FLIGHT MANUAL.  
**THIS DOCUMENT MUST BE CARRIED IN THE AIRCRAFT AT ALL TIMES.**

MOONEY AIRCRAFT CORPORATION  
LOUIS SCHREINER FIELD  
KERRVILLE, TEXAS 78028

SERIAL NUMBER: \_\_\_\_\_

REGISTRATION NUMBER: \_\_\_\_\_

FAA APPROVED:

*Michele M Owsley 1/16/96*

Michele M. Owsley,  
Manager, Airplane Certification Office  
FEDERAL AVIATION ADMINISTRATION  
Fort Worth, Texas  
76193-0150

FAA APPROVED in Normal Category based on CAR PART 3; applicable to Model M20J S/N listed above only.

ISSUED 1 - 96  
Revision A 5 - 97  
Revision B 10 - 97

MANUAL NUMBER 3203



## **CONGRATULATIONS**

WELCOME TO MOONEY'S NEW DIMENSION IN SPEED AND ECONOMY. YOUR DECISION TO SELECT A MOONEY HAS PLACED YOU IN AN ELITE AND DISTINCTIVE CLASS OF AIRCRAFT OWNERS. WE HOPE THAT YOU FIND YOUR MOONEY A UNIQUE FLYING EXPERIENCE, WHETHER FOR BUSINESS OR PLEASURE, THE MOST PROFITABLE EVER.

### **- NOTICE -**

This manual is provided as an operating guide for the Mooney Model M20J. It is important that you—regardless of your previous experience—carefully read the handbook from cover to cover and review it frequently.

All information and illustrations in the manual are based on the latest product information available at the time of publication approval and all sections including attached supplements are mandatory for proper operation of the aircraft. The right is reserved to make changes at any time without notice. Every effort has been made to present the material in a clear and convenient manner to enable you to use the manual as a reference. Your cooperation in reporting presentation and content recommendations is solicited.

### **REVISING THE MANUAL**

The "i" pages of this manual contain a "List of Effective Pages" containing a complete current listing of all pages i.e., Original or Revised. Also, in the lower right corner of the outlined portion, is a box which denotes the manual number and issue or revision of the manual. It will be advanced one letter, alphabetically, per revision. With each revision to the manual a new "List of Effective Pages" showing all applicable revisions with dates of approval and a "Log of Revisions" page(s) with only the latest revision shown, will be provided to replace the previous ones.

This handbook will be kept current by Mooney Aircraft Corporation when the yellow information card in front of this handbook has been completed and mailed to Mooney Aircraft Corporation, Attn: Service Parts Department, Louis Schreiner Field, Kerrville, TX 78028.



**LIST OF EFFECTIVE PAGES**

ORIGINAL	1 - 96
Revision A	5 - 97
Revision B	10 - 97

Always destroy superseded pages when inserting revised pages.

PAGE	REVISION
TITLE PAGE	B
"A" page	Original
i thru vi	B
1-1 thru 1-3	Original
1-4	A
1-5 thru 1-10	Original
2-1 thru 2-18	Original
3-1 thru 3-16	Original
4-1 thru 4-14	Original
5-1 thru 5-5	Original
5-6	A
5-7 thru 5-14	Original
5-15	A
5-16 thru 5-22	Original
5-23	A
5-24 thru 5-36	Original
6-1 thru 6-6	Original
6-7	B
6-8 thru 6-13	Original
6-14	A
6-15 thru 6-19	Original
6-20	A
6-21	B
6-22, 6-23	Original
6-24	B
6-25	Original
6-26	B
6-27, 6-28	Original
7-1 thru 7-3	Original
7-4	B
7-5, 7-6	Original
7-7	B
7-8	Original
7-9	B
7-10 thru 7-20	Original
7-21	A
7-22 thru 7-28	Original
8-1 thru 8-5	Original
8-6	A
8-7 thru 8-8	Original

**POH/AFM NUMBER - 3203 (B)**

This POH/AFM effective M20J S/N 24-3374 THRU 24-TBA

**LIST OF EFFECTIVE PAGES (con't.)**

PAGE . . . . .	REVISION
9-1 thru 9-4 . . . . .	Original
10-1 thru 10-10 . . . . .	Original

**POH/AFM NUMBER - 3203 (B)**

This POH/AFM effective M20J S/N 24-3374 THRU 24-TBA.

**LOG OF REVISIONS**

REVISION NUMBER	REVISED PAGES	DESCRIPTION OF REVISIONS	FAA APPROVED	DATE
B	6-7	Revised Table		
	6-21	Added Data		
	6-24	Revised Data		
	6-26	Removed Data		
	7-4, 7-7, 7-9	Revised & Added Data	MMOwsley	10.8.97
The revised portions of affected page are indicated by vertical black lines in the margin.				
			No.	3203 (B)

LOG OF REVISIONS (con't.)

REVISION NUMBER	REVISED PAGES	DESCRIPTION OF REVISIONS	FAA APPROVED	DATE

The revised portions of affected page are indicated by vertical black lines in the margin.

No. 3203 ( B )



**CONTENTS**

<b>TITLE . . . . .</b>	<b>SECTION</b>
<b>GENERAL . . . . .</b>	<b>I</b>
<b>LIMITATIONS . . . . .</b>	<b>II</b>
<b>EMERGENCY PROCEDURES . . . . .</b>	<b>III</b>
<b>NORMAL PROCEDURES . . . . .</b>	<b>IV</b>
<b>PERFORMANCE . . . . .</b>	<b>V</b>
<b>WEIGHT &amp; BALANCE . . . . .</b>	<b>VI</b>
<b>AIRPLANE &amp; SYSTEM DESCRIPTIONS . . . . .</b>	<b>VII</b>
<b>HANDLING, SERVICE &amp; MAINTENANCE . . . . .</b>	<b>VIII</b>
<b>SUPPLEMENTAL DATA . . . . .</b>	<b>IX</b>
<b>SAFETY &amp; OPERATIONAL TIPS . . . . .</b>	<b>X</b>

BLANK

TABLE OF CONTENTS

TITLE . . . . .	PAGE
THREE VIEW . . . . .	1-2
INTRODUCTION . . . . .	1-3
DESCRIPTIVE DATA . . . . .	1-3
ENGINE . . . . .	1-3
PROPELLER . . . . .	1-3
FUEL . . . . .	1-4
OIL . . . . .	1-4
LANDING GEAR . . . . .	1-4
MAXIMUM CERTIFICATED WEIGHTS . . . . .	1-4
STANDARD AIRPLANE WEIGHTS . . . . .	1-4
CABIN & ENTRY DIMENSIONS . . . . .	1-5
BAGGAGE SPACE AND ENTRY DIMENSION . . . . .	1-5
SPECIFIC LOADINGS . . . . .	1-5
IDENTIFICATION PLATE . . . . .	1-5
SYMBOLS, ABBREVIATIONS & TERMINOLOGY . . . . .	1-5
GENERAL AIRSPEED TERMINOLOGY & SYMBOLS . . . . .	1-5
ENGINE POWER TERMINOLOGY . . . . .	1-6
AIRPLANE PERFORMANCE & FLIGHT PLANNING TERMINOLOGY . . . . .	1-6
ENGINE CONTROLS & INSTRUMENTS TERMINOLOGY . . . . .	1-7
METEOROLOGICAL TERMINOLOGY . . . . .	1-7
WEIGHT & BALANCE TERMINOLOGY . . . . .	1-8
MEASUREMENT CONVERSION TABLES . . . . .	1-9

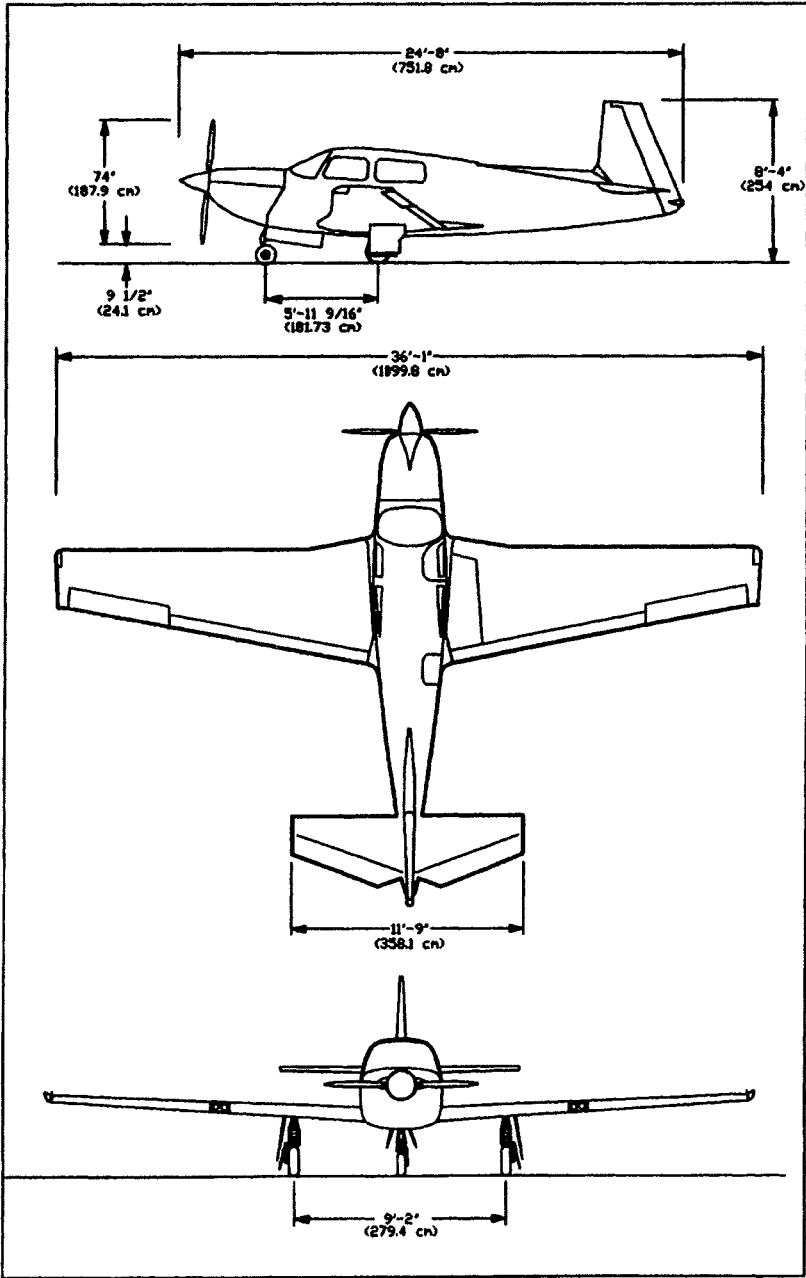


FIGURE 1 - 1 THREE VIEW - M20J

**INTRODUCTION**

This Pilot's Operating Handbook conforms to GAMA Specification No. 1 and includes both manufacturers material and FAA APPROVED material required to be furnished to the pilot by the applicable Federal Aviation Regulations. SECTION IX contains supplemental data supplied by Mooney Aircraft Corporation.

SECTION I contains information of general interest to the pilot. It also contains definitions of the terminology used in this Operators Manual.

This Pilot's Operating Handbook is not designed as a substitute for adequate and competent flight instruction, knowledge of current airworthiness directives, applicable federal air regulations or advisory circulars. It is not intended to be a guide for basic flight instruction or a training manual and should not be used for operational purposes unless kept in an up to date status.

All limitations, procedures, safety practices, servicing and maintenance requirements published in this POH/AFM are considered mandatory for the Continued Airworthiness of this airplane in a condition equal to that of its original manufacture.

**THIS SECTION DOES NOT REQUIRE FAA APPROVAL****DESCRIPTIVE DATA****ENGINE**

Number of engines	1
Engine Manufacturer	TEXTRON-Lycoming
Model	IO-360-A3B6 *
Recommended TBO	2000 Hours
Type	Reciprocating, aircooled, fuel injected.
Number of cylinders	4, Horizontally opposed
Displacement	361 Cu. in. (5915.7 cc)
Bore	5.125 in. (13.02 cm)
Stroke	4.375 in. (11.11 cm)
Compression ratio	8.7:1

**Fuel System**

Type	Fuel Injection Flow
Make	Bendix, RSA-5-AD1
Fuel - Aviation Gasoline	100 Octane or 100LL (min. grade)

**Accessories**

Magnetos (2)	Slick- L/H - 4372, R/H - 4370 *
Spark Plugs	18 MM X .750-20 Thd. Connection
Alternator	Prestolite 28V, 70A
Starter	Prestolite 24 Volts

\* IO-360-A3B6D engines will be installed on S/N 24-3375 and 24-3376, and will have Bendix D4LN series magnetos installed.

**Ratings:**

Maximum Continuous Sea Level-BHP/RPM	200/2700
--------------------------------------	----------

**PROPELLER**

Number	1
Manufacturer	McCaughey*
Model Number	B2D34C214/90DHB-16E*
Number of Blades	2
Diameter Max.	74.0 in. (187.9 cm)*
Min.	73.0 in. (185.4 cm)*

Type Governing . . . . . Constant Speed  
Hydraulically controlled by engine oil

Blade Angles @ 30 in. Sta.(76.2 cm):

Low . . . . . 13.9 degrees + /- .2 degrees\*  
High . . . . . 33.0 degrees + /- .5 degrees\*

\* OPTION: Hartzell HC-C2YK-1BF/F7666A-3Q  
73.0" (185.42 cm) (No cutoff allowed)  
Blade Angles: @30 in. sta.(75 cm)  
Low: 14.1 degrees + /- .1 degree  
High: 29.3 degrees to 31.1 degrees  
Spinner: Hartzell No. A2295

### FUEL

Minimum Fuel Grade (Color) . . . . . 100 Octane (Green)/100 LL (Blue)  
Total Capacity . . . . . 66.5 U.S. Gal.  
(251.7 Liters)(55.4 Imp. Gal.)  
Usable . . . . . 64.0 U.S. Gal.  
(242.3 Liters)(53.3 Imp. Gal.)

### OIL

Total Oil Capacity . . . . . 8 Qts. (7.57 Liters)  
Oil Capacity Minimum for Flight . . . . . 5 Qts. (4.73 Liters)  
Oil Filter (Champion CH48103) . . . . . Full Flow

Oil grades, specifications and changing recommendations are contained in SECTION VIII.

### LANDING GEAR

TYPE: Electrically operated, fully retractable tricycle gear with rubber shock discs. The main wheels have hydraulically operated disc brakes. The nose wheel is fully steerable 14° left or right of center.

Wheel Base . . . . . 71 9/16 in. (181.8 cm)  
Wheel Track . . . . . 110 in. (279.4 cm)  
Tire Size:  
Nose . . . . . 5.00 x 5 (6 ply)Type III  
Main . . . . . 6.00 x 6 (6 ply)Type III

Tire Pressure:  
Nose . . . . . 49 PSI  
Main (@ reduced GW) . . . . . 30 PSI  
Main (@ max. GW) . . . . . 42 PSI  
Min. Turning Radius (Mult. by 2 for Wing Tip Clearance Distance)  
(No brakes applied) . . . . . 41 ft. (12.5 m)

### MAXIMUM CERTIFICATED WEIGHTS

Gross Weight . . . . . 2900 Lbs. (1315 Kg)  
Baggage Area . . . . . 120 Lbs. (54.4 Kg)  
Hat Rack . . . . . 10 Lbs. (4.54 Kg)  
Cargo (Rear Seats Folded Down) . . . . . 340 Lbs. (154.2 Kg)

### STANDARD AIRPLANE WEIGHTS

Basic Empty Weight . . . . . See Page 1-10  
Useful Load . . . . . Varies with installed equipment  
See SECTION VI for specific airplane weight.

### CABIN AND ENTRY DIMENSIONS

Cabin Width	(Maximum)	43.5 in. (110.5 cm)
Cabin Length	(Maximum)	114 in. (290 cm)
Cabin Height	(Maximum)	44.5 in. (113 cm)
Entry Width	(Minimum)	29.0 in. (73.6 cm)
Entry Height	(Minimum)	35.0 in. (88.9 cm)

### BAGGAGE SPACE AND ENTRY DIMENSIONS

Compartment Width	24 in. (60.9 cm)
Compartment Length	35 in. (88.9 cm)
Compartment Height	35 in. (88.9 cm)
Compartment Volume	15.3 Cu. Ft.
	(.433 cubic meters)
Cargo Area (with rear seats folded down)	33.0 Cu. Ft.
	(.934 cubic meters)
Entry Height (Minimum)	20.5 in. (52.1 cm)
Entry Width	17.0 in. (43.2 cm)
Ground to Bottom of Sill	46.0 in. (116.8 cm)

### SPECIFIC LOADINGS

Wing Loading @ Maximum Gross Weight	18.59 Lbs./Sq. Ft. (81 Kg/Sq. m)
Power Loading @ Maximum Gross Weight	14.5 Lbs./HP (6.57 Kg/HP)

### IDENTIFICATION PLATE

All correspondence regarding your airplane should include the Serial Number as depicted on the identification plate. The identification plate is located on the left hand side, aft end of the tail cone, below the horizontal stabilizer leading edge. The aircraft Serial Number and type certificate are shown.

## **SYMBOLS, ABBREVIATIONS & TERMINOLOGY**

### GENERAL AIRSPEED TERMINOLOGY & SYMBOLS

GS	GROUND SPEED - Speed of an airplane relative to the ground.
KCAS	KNOTS CALIBRATED AIRSPEED - The indicated speed of an aircraft, corrected for position and instrument error. Calibrated airspeed is equal to true airspeed in standard atmosphere at sea level.
KIAS	KNOTS INDICATED AIRSPEED - The speed of an aircraft as shown on its airspeed indicator. IAS values published in this handbook assume zero instrument error.
KTAS	KNOTS TRUE AIRSPEED - The airspeed of an airplane relative to undisturbed air which is the KCAS corrected for altitude and temperature.
V <sub>a</sub>	MANEUVERING SPEED - The maximum speed at which application of full available aerodynamic control will not overstress the airplane.
V <sub>fe</sub>	MAXIMUM FLAP EXTENDED SPEED - The highest speed permissible with wing flaps in a prescribed extended position.
V <sub>le</sub>	MAXIMUM LANDING GEAR EXTENDED SPEED - The maximum speed at which an aircraft can be safely flown with the landing gear extended.

**GENERAL AIRSPEED TERMINOLOGY & SYMBOLS (con't.)**

$V_{lo}$	MAXIMUM LANDING GEAR OPERATING SPEED - The maximum speed at which the landing gear can be safely extended or retracted.
$V_{ne}$	NEVER EXCEED SPEED - The speed limit that may not be exceeded at any time.
$V_{no}$	MAXIMUM STRUCTURAL CRUISING SPEED - The speed that should not be exceeded except in smooth air and then only with caution.
$V_s$	STALLING SPEED - The minimum steady flight speed at which the airplane is controllable.
$V_{so}$	STALLING SPEED - The minimum steady flight speed at which the airplane is controllable in the landing configuration.
$V_x$	BEST ANGLE-OF-CLIMB SPEED - The airspeed which delivers the greatest gain of altitude in the shortest possible horizontal distance.
$V_y$	BEST RATE-OF-CLIMB SPEED - The airspeed which delivers the greatest gain in altitude in the shortest possible time with gear and flaps up.

**ENGINE POWER TERMINOLOGY**

BHP	BRAKE HORSEPOWER - The power developed by the engine.
CHT	CYLINDER HEAD TEMPERATURE - Operating temperature of engine cylinder(s) being monitored by a sensor unit. Expressed in °F.
EGT	EXHAUST GAS TEMPERATURE - Temperature of the exhaust gas fuel/air mixture during engine operation.
MCP	MAXIMUM CONTINUOUS POWER - The maximum power for takeoff, normal, abnormal or emergency operations.
MP	MANIFOLD PRESSURE - Pressure measured in the engine's induction system and is expressed in inches of mercury (Hg).
RPM	REVOLUTIONS PER MINUTE - Engine speed.

**AIRPLANE PERFORMANCE AND FLIGHT PLANNING TERMINOLOGY**

Demonstrated Crosswind Velocity	The velocity of the crosswind component for which adequate control of the airplane during takeoff and landing test was actually demonstrated during certification. The value shown is NOT considered to be limiting.
g	Acceleration due to gravity.
Service Ceiling	The maximum altitude at which aircraft at gross weight has the capability of climbing at the rate of 100 ft/min.



**ENGINE CONTROLS & INSTRUMENTS TERMINOLOGY**

Propeller Control	The control used to select engine speed.
Throttle Control	The control used to select engine power by controlling MP.
Mixture Control	Provides a mechanical linkage to the fuel injector mixture control to control the size of the fuel feed aperture, and therefore the air/fuel mixture. It is the primary method to shut engine down.
CHT Gauge	Cylinder head temperature indicator used to determine that engine operating temperature is within manufacturers specifications.
EGT Gauge	Exhaust gas temperature indicator used to identify correct lean fuel flow mixtures for various power settings.
Tachometer	An instrument that indicates rotational speed of the engine. The speed is shown as propeller revolutions per minute (RPM).
Propeller Governor	The device that regulates the RPM of the engine/propeller by increasing or decreasing the propeller pitch, through a pitch change mechanism in the propeller hub.

**METEOROLOGICAL TERMINOLOGY**

AGL	Above ground level.
Density Altitude	Altitude as determined by pressure altitude and existing ambient temperature. In standard atmosphere (ISA) density and pressure altitude are equal. For a given pressure altitude, the higher the temperature, the higher the density altitude.
Indicated Altitude	The altitude actually read from an altimeter when, and only when, the barometric subscale has been set to Station Pressure.
ISA	INTERNATIONAL STANDARD ATMOSPHERE assumes that (1) The air is a dry perfect gas; (2) The temperature at sea level is 15 ° Celsius (59 ° F); (3) The pressure at sea level is 29.92 inches Hg (1013.2 mb); (4) The temperature gradient from sea level to the altitude at which the temperature is -56.5 ° C (-69.7 ° F) is -0.00198 ° C (-0.003564 ° F) per foot.
OAT	OUTSIDE AIR TEMPERATURE - The free air static temperature, obtained either from inflight temperature indications or ground meteorological sources. It is expressed in degrees Celsius.
Pressure Altitude	The altitude indicated when Kollsman Window is set to 29.92 in. Hg. or 1013.2 MB. In this handbook, altimeter instrument errors are assumed to be zero.
Station Pressure	Actual atmospheric pressure at field elevation.

**WEIGHT AND BALANCE TERMINOLOGY**

Arm	The horizontal distance from the reference datum to the center of gravity (C.G.) of an item.
Basic Empty Weight	The actual weight of the airplane and includes all operating equipment (including optional equipment) that has a fixed location and is actually installed in the aircraft. It includes the weight of unusable fuel and full oil.
Center of Gravity (C.G.)	The point at which an airplane would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the airplane.
C.G. Arm	The arm obtained by adding the airplane's individual moments and dividing the sum by the total weight.
C.G. in percent MAC	Center of Gravity expressed in percent of mean aerodynamic chord.
C.G. Limits	The extreme center of gravity locations within which the airplane must be operated at a given weight.
MAC	Mean Aerodynamic Chord.
Maximum Weight	The maximum authorized weight of the aircraft and its contents as listed in the aircraft specifications.
Moment	The product of the weight of an item multiplied by its arm. (Moment divided by a constant is used to simplify balance calculations by reducing the number of digits.)
Reference Datum	An imaginary vertical plane from which all horizontal distances are measured for balance purposes.
Station	A location along the airplane fuselage usually given in terms of distance from the reference datum.
Tare	The weight of chocks, blocks, stands, etc. used when weighing an airplane, and is included in the scale readings. Tare is deducted from the scale reading to obtain the actual (net) airplane weight.
Unusable Fuel	Fuel remaining after a runout test has been completed in accordance with governmental regulations.
Usable Fuel	Fuel available for airplane propulsion.
Useful Load	The basic empty weight subtracted from the maximum weight of the aircraft. This load consists of the pilot, crew if applicable, fuel, passengers, and baggage.

**MEASUREMENT CONVERSION TABLES**

**LENGTH**

U. S. Customary Unit	Metric Equivalents
1 inch	2.54 centimeters
1 inch	25.4 millimeters
1 foot	0.3048 meter
1 yard	0.9144 meter
1 mile (statute, land)	1,609 meters
1 mile (nautical, international)	1,852 meters

**AREA**

U. S. Customary Unit	Metric Equivalents
1 square inch	6.4516 sq. centimeters
1 square foot	929.030 sq. centimeters
1 square yard	0.836 sq. meter

**VOLUME OR CAPACITY**

U. S. Customary Unit	Metric Equivalents
1 cubic inch	16.387 cubic centimeters
1 cubic foot	0.028 cubic meter
1 cubic yard	0.765 cubic meter

U.S. Customary Liquid Measure	Metric Equivalents
1 fluid ounce	29.573 milliliters
1 pint	0.473 liter
1 quart	0.946 liter
1 gallon	3.785 liters

U.S. Customary Dry Measure	Metric Equivalents
1 pint	0.551 liter
1 quart	1.101 liters

British Imperial Liquid and Dry Measure	U. S. Equivalents	Metric Equivalents
1 fluid ounce	0.961 U.S. fluid ounce, 1.734 cubic inches	28.412 milliliters
1 pint	1.032 U.S. dry pints, 1.201 U.S. liquid pts. 34.678 cubic inches	568.26 milliliters

**SECTION I  
GENERAL**

**MOONEY  
M20J**

**VOLUME OR CAPACITY (con't.)**

1 quart	1.032 U.S. dry quarts 1.201 U.S. liquid qts. 69.354 cubic inches	1.136 liters
1 gallon	1.201 U.S., 277.420 cubic inches	4.546 liters

**WEIGHT**

U. S. Customary Unit (Avoirdupois)	Metric Equivalents
1 grain	64.79891 milligrams
1 dram	1.772 grams
1 ounce	28.350 grams
1 pound	453.59237 grams

**PRESSURE**

U.S. Customary Unit	Metric Equivalents
1 PSIG	6.895 KPA
1 Inch Hg	3.388 KPA
1 Inch Hg	25.40 mm Hg

**TABLE OF CONTENTS**

<b>TITLE . . . . .</b>	<b>PAGE</b>
INTRODUCTION . . . . .	2-2
NOISE LIMITS . . . . .	2-2
AIRSPPEED LIMITATIONS . . . . .	2-3
AIRSPPEED INDICATOR MARKINGS . . . . .	2-4
POWER PLANT LIMITATIONS . . . . .	2-5
POWER PLANT INSTRUMENT MARKINGS . . . . .	2-6
FUEL LIMITATIONS . . . . .	2-6
WEIGHT LIMITS . . . . .	2-7
CENTER OF GRAVITY LIMITS (GEAR DOWN) . . . . .	2-7
MANEUVER LIMITS . . . . .	2-7
FLIGHT LOAD FACTOR LIMITS . . . . .	2-8
FLIGHT CREW . . . . .	2-8
OPERATING LIMITATIONS . . . . .	2-8
KINDS OF OPERATION LIMITS . . . . .	2-8
KINDS OF OPERATION EQUIPMENT LIST . . . . .	2-8
DECALS & PLACARDS . . . . .	2-11
CABIN INTERIOR . . . . .	2-11
FUSELAGE INTERIOR . . . . .	2-16
EXTERIOR . . . . .	2-17

## INTRODUCTION

SECTION II includes operating limitations, instrument markings, and basic placards necessary for the safe operation of the airplane, its engine, standard systems and standard equipment.

The limitations included in this section have been approved by the Federal Aviation Administration.

When applicable, limitations associated with optional systems or equipment such as autopilots are included in SECTION IX.

### NOTE

The airspeeds listed in the Airspeed Limitations chart (Figure 2-1) and the Airspeed Indicator Markings chart (Figure 2-2) are based on Airspeed Calibration data shown in SECTION V with the normal static source. If the alternate static source is being used, ample margins should be observed to allow for the airspeed calibration variations between the normal and alternate static sources as shown in SECTION V.

Your Mooney is certificated under FAA Type Certificate No. 2A3 as a Mooney M20J.

## NOISE LIMITS

The certificated noise level for the M20J at 2900 lbs. (1315 Kg.) maximum weight is 80.64 dB(A). No determination has been made by the Federal Aviation Administration that the noise levels of this airplane are or should be acceptable or unacceptable for operation at, into, or out of, any airport.

**AIRSPEED LIMITATIONS**

Airspeed limitations and their operational significance are shown in Figure 2-1.  
This calibration assumes zero instrument error.

=====			
SPEED		KCAS/KIAS	REMARKS
V <sub>NE</sub>	Never Exceed Speed	195/196	Do not exceed this speed in any operation.
V <sub>NO</sub>	Maximum Structural Cruising Speed	174/174	Do not exceed this speed except in smooth air, and then only with caution.
V <sub>A</sub>	Maneuvering Speed at: lb./Kg. 2250/1021 2470/1120 2740/1243 2900/1315	103/104 108/109 114/115 117/118	Do not make full or abrupt control movements above this speed.
V <sub>FE</sub>	Maximum Flap Extended Speed	109/112	Do not exceed this speed with flaps in full down position.
V <sub>LE</sub>	Maximum Landing Gear Extended Speed	130/132	Maximum speed at which the aircraft can be safely flown with the landing gear extended.
V <sub>LO</sub> (EXT)	Max. Speed for Gear Extension	130/132	Max. speed at which the landing gear can be safely extended.
V <sub>LO</sub> (RET)	Max. Speed for Gear Retraction	104/107	Maximum speed at which the landing gear can be safely retracted.
	Maximum Pilot Window Open Speed	130/132	Do not exceed this speed with pilot window open.
=====			

FIGURE 2-1 AIRSPEED LIMITATIONS

**AIRSPEED INDICATOR MARKINGS**

Airspeed indicator markings, their color code and operational significance are shown in Figure 2-2.

=====

MARKING	IAS VALUE or RANGE (KIAS)	SIGNIFICANCE
White Arc (Full Flap Operating Range)	58-112	Lower limit is maximum weight $V_{SO}$ in landing configuration. Upper limit is maximum speed permissible with flaps extended.
Green Arc (Normal Operating Range)	62-174	Lower limit is maximum weight $V_S$ with flaps retracted. Upper limit is maximum structural cruising speed.
Yellow Arc (Caution Range)	174-196	Operations must be conducted with caution and only in smooth air.
Radial Red Line	196	Maximum speed for all operations.

=====

**FIGURE 2-2    AIRSPEED INDICATOR MARKINGS**



**POWER PLANT LIMITATIONS**

Number of Engines	1
Engine Manufacturer	TEXTRON-Lycoming
Engine Model Number	IO-360-A3B6 *

\* IO-360-A3B6D engines will be installed on S/N 24-3375 and 24-3376, and will have Bendix D4LN series magnetos installed.

**Engine Operating Limits for Takeoff and Continuous Operations:**

Maximum Continuous Power	200 BHP
Maximum Continuous RPM	2700 RPM
Transient Continuous RPM Limit	2970 RPM for 3 seconds or less
Max. Cylinder Head Temperature	475 ° F (246 ° C)
Maximum Oil Temperature	245 ° F (118 ° C)

**Oil Pressure**

Normal Operating	60-90-PSI
Minimum (IDLE ONLY)	25 PSI
Maximum (cold oil)	100 PSI

**Oil Specification**

MIL-L-22851

**Fuel Pressure**

Minimum	14 PSI
Maximum	30 PSI

Fuel Grade (Color) 100 Octane (Green)/100LL (Blue)\*\*

Number of Propellers	1
Propeller Manufacturer	McCaughey***
Propeller Model Number	B2D34C214/90DHB-16E***
Propeller Diameter:	
Min.	73.0 in. (185.4 cm)***
Max.	74.0 in. (187.9 cm)***
Propeller Blade Angles @ 30 in. sta.:	
Low	13.9 ° + / - .2 °***
High	33.0 ° + / - .5 °***
Propeller Operating Limits	2700 RPM

\*\* 100LL fuel is calibrated at 5.82 lb/gal. (.69 Kg/liter)  
100 octane fuel is calibrated at 6.0 lb/gal. (.72 Kg/liter)

\*\*\* OPTION: Hartzell HC-C2YK-1BF/F7666A-3Q  
73.0 in. (185.4 cm) (No Cutoff Allowed)  
Low: 14.1 ° + / - .1 °  
High: 29.3 ° to 31.3 °

**| NOTE |**

No cutoff allowed on propeller when de-ice boots are installed.

**POWER PLANT INSTRUMENT MARKINGS**

INSTRUMENT	REDLINE MINIMUM LIMIT	GREEN ARC (NORMAL OPERATING)	YELLOW ARC (CAUTION RANGE)	REDLINE (MAXIMUM LIMIT)
Tachometer		1950 - 2700	1500 - 1950	2700 RPM
Cylinder Head Temperature		300 - 475° F (149 - 248° C)		475° F (248° C)
Oil Temperature		150 - 245° F (65 - 118° C)		245° F (118° C)
Oil Pressure	25 PSI	60 - 90 PSI	(IDLE ONLY) 25 - 60 PSI	100 PSI
Fuel Pressure	Radial Red Line Min. 14 PSI	14 - 30 PSI		30 PSI
* Yellow arc (starting and warm - up range) . . . . . 90-100 PSI				
<b>  NOTE  </b>				
Refer to <b>TEXTRON-Lycoming Engine Maintenance and Operators Manual</b> Section on <b>Engine Specifications and Operating Limits</b> for recommended cruise power and temperature limitations.				

**FIGURE 2-3 POWERPLANT INSTRUMENT MARKINGS**

**FUEL LIMITATIONS**

**| NOTE |**

A reduced fuel quantity indicator is installed in each tank filler neck. The bottom tip of these indicators shows the 25 U.S. gallon (94.7 liters) (20.8 IMP. Gal.) usable fuel level in each tank.

**| NOTE |**

An optional visual fuel quantity gauge may be installed on top of each tank and is to be used as a reference for refueling the tanks only.

Standard Tanks: (2) . . . . . 33.25 U.S. Gal. each  
(128 Liters)(27.7 Imp. Gal.)

Total Fuel: . . . . . 66.5 U.S. Gal  
(251.7 Liters)(55.4 Imp. Gal.)

Usable Fuel: . . . . . 64.0 U.S. Gal  
(242.4 Liters)(53.3 Imp. Gal.)

Unusable Fuel: . . . . . 2.5 U.S. Gal  
(9.5 Liters)(2.1 Imp. Gal.)

Fuel Grade (and Color): . . . . . minimum grade aviation fuel (green).  
100 Octane . . . . . (low lead) aviation fuel (blue) with a lead  
100LL . . . . . content limited to 2 cc per gallon is also approved.

~~~~~  
~ CAUTION ~  
~~~~~

To reduce the possibility of ice formation within the aircraft or engine fuel system it is permissible to add ISO-PROPYL alcohol to the fuel supply in quantities NOT TO EXCEED 1% of the total fuel volume per tank. DO NOT add other additives to the fuel system due to potential deteriorating effects within the fuel system.

**WEIGHT LIMITS**

Maximum Weight (takeoff and landing)	2900 lbs. (1315 Kg.)
Maximum Weight in Baggage Compartment	120 lb. (54.4 Kg.) @ Fuse. Sta. 95.5
Maximum Weight in Hatrack	10 lb. (4.54 Kg.) @ Fuse. Sta. 119.0
Maximum Weight in Cargo Area (Rear seats folded down)	340 lbs. (154.2 Kg.) @ Fuse. Sta. 70.7

**CENTER OF GRAVITY LIMITS (GEAR DOWN)**

Most Forward	Fuse. Sta. 41.0 IN.(104 cm) @ 2250 lbs. (1020 Kg). 13.3% MAC
Intermediate Forward	Fuse. Sta. 41.8 IN.(106 cm) @ 2470 lbs. (1120 Kg) 14.7% MAC
Forward Gross	Fuse. Sta. 45.0 IN.(114 cm) @ 2900 lbs (1315 Kg) 20.1% MAC
Aft Gross	Fuse. Sta. 50.1 IN.(127 cm) @ 2900 lbs. (1315 Kg.) 28.7% MAC
MAC (at Wing Sta. 93.83)(238 cm)	59.18 IN. (150 cm)

Datum (station zero) is 5 inches (12.7 cm) aft of the center line of the nose gear attaching bolts, and 33 inches (84 cm) forward of the wing leading edge at wing station 59.25 (150 cm).

**MANEUVER LIMITS**

This airplane must be operated as a Normal Category airplane. Aerobatic maneuvers, including spins, are prohibited.

/////////  
//WARNING//  
/////////

Takeoff maneuvers, prolonged sideslips or steep descents when the selected fuel tank contains less than 8 gallons (48.0 lbs., 30.3 liters, 6.7 IMP. Gal.) of fuel have not been demonstrated and may cause loss of power.

**[ NOTE ]**

Up to 400 foot altitude loss may occur during stalls at maximum weight.

Use slow throttle movement. Rapid throttle movement may result in momentary propeller RPM overspeed.

**FLIGHT LOAD FACTOR LIMITS**

Maximum Positive Load Factor									
Flaps Up	.	.	.	.	.	.	.	.	+ 3.8 g.
Flaps Down (33 °)	.	.	.	.	.	.	.	.	+ 2.0 g.
Maximum Negative Load Factor									
Flaps Up	.	.	.	.	.	.	.	.	-1.5 g.
Flaps Down	.	.	.	.	.	.	.	.	0.0 g.

**FLIGHT CREW**

Pilot	.	.	.	.	.	.	.	.	.	1
Maximum Passenger seating configuration	.	.	.	.	.	.	.	.	.	3

**OPERATING LIMITATIONS**

If this airplane is not equipped with an approved oxygen system and flight operations above 12,500 feet are desired, this airplane must be, (1) equipped with supplemental oxygen in accordance with FAR 23.1441, (2) operated in accordance with FAR 91.32 and (3) equipped with avionics in accordance with FAR 91 or FAR 135.

**KINDS OF OPERATION LIMITS**

This is a Normal Category airplane approved for VFR/IFR day or night operations when equipped in accordance with FAR 91.

**DO NOT OPERATE IN KNOWN ICING CONDITIONS.**

**TAKEOFFS WITH OPTIONAL ELECTRIC COWL FLAPS INOPERATIVE ARE PROHIBITED.**

Autopilot Limitations - See SECTION IX.

**KINDS OF OPERATION EQUIPMENT LIST**

The following equipment was approved during Type Certification and must be installed and operable for each kind of operation as specified.

**| NOTE |**

The KINDS OF OPERATION EQUIPMENT list may not include all the equipment as required by applicable operating rules.

**SEE NEXT PAGE FOR LISTINGS.**

**KINDS OF OPERATION EQUIPMENT LIST**

SYSTEM or COMPONENT	VFR DAY *			
	VFR NIGHT			
	IFR DAY			
	IFR NIGHT			
AIRSPPEED INDICATOR	1	1	1	1
ALTIMETER, SENSITIVE	1	1	1	1
MAGNETIC DIRECTION INDICATOR	1	1	1	1
MANIFOLD PRESSURE GAUGE	1	1	1	1
TACHOMETER	1	1	1	1
FUEL QUANTITY INDICATOR	2	2	2	2
FUEL PRESSURE INDICATOR	1	1	1	1
OIL PRESSURE INDICATOR	1	1	1	1
OIL TEMPERATURE INDICATOR	1	1	1	1
CYLINDER HEAD TEMPERATURE INDICATOR	1	1	1	1
ALTERNATOR LOAD METER (AMMETER)	1	1	1	1
ALTERNATOR	1	1	1	1
BATTERY	1	1	1	1
LANDING GEAR POSITION INDICATOR	1	1	1	1
SEAT BELT/SHOULDER HARNESS				
FOR EACH OCCUPANT **	1	1	1	1
OXYGEN MASK FOR EACH OCCUPANT ***	1	1	1	1
FUEL BOOST PUMP	1	1	1	1
PILOT'S OPERATING HANDBOOK				
& AIRPLANE FLIGHT MANUAL	1	1	1	1
POSITION LIGHTS		3		3
STROBE LIGHTS (anti-collision)		3		3
GYRO HORIZON		1	1	1
DIRECTIONAL GYRO		1	1	1
TURN COORDINATOR or TURN & BANK INDICATOR		1	1	1
LANDING LIGHT ****		1		1
INSTRUMENT LIGHTS (INTERNAL or GLARESHIELD)		1		1
CLOCK (WITH SWEEP SECOND HAND or DIGITAL)			1	1
COMMUNICATION SYSTEM			1	1
NAVIGATION SYSTEM			1	1
(APPROPRIATE TO FACILITIES BEING USED)				
VACUUM SYSTEM/INDICATOR			1	1

\* Equipment must be installed and operable for all operations.

\*\* If inoperative for unoccupied seat(s), seat(s) must be placarded:  
"DO NOT OCCUPY"

\*\*\* Only required when the operating rules require use of oxygen.

\*\*\*\* When required by the appropriate regulations

KINDS OF OPERATION EQUIPMENT LIST (con't.)

SYSTEM or COMPONENT (con't.)	VFR DAY *	
	VFR NIGHT	
	IFR DAY	
	IFR NIGHT	
PITOT, HEATED ****	1	1
OAT GAUGE ****	1	1
VSI ****	1	1
ALTERNATE STATIC SOURCE ****	1	1

\* Equipment must be installed and operable for all operations.

\*\*\*\* When required by the appropriate regulations

**DECALS AND PLACARDS****CABIN INTERIOR**

The following placards must be installed inside the cabin at the locations specified.

<p style="text-align: center;"><b>OPERATIONAL LIMITATIONS</b></p> <p>THIS AIRPLANE MUST BE OPERATED AS A NORMAL CATEGORY AIRPLANE IN COMPLIANCE WITH THE OPERATING LIMITATIONS STATED IN THE FORM OF PLACARDS, MARKINGS AND MANUALS. NO AEROBATIC MANEUVERS, INCLUDING SPINS, ARE APPROVED. MAXIMUM SPEED WITH LANDING GEAR EXTENDED, 132 KIAS. MAXIMUM SPEED TO RETRACT GEAR, 107 KIAS. MAXIMUM SPEED TO EXTEND GEAR, 132 KIAS. MAXIMUM MANEUVERING FLIGHT LOAD FACTOR-FLAPS UP +3.8-1.5DN +2.0-0.</p>
<p style="text-align: center;"><b>EMERGENCY MANUAL GEAR EXTENSION</b></p> <ol style="list-style-type: none"><li>1. PULL LANDING GEAR CIRCUIT BREAKER.</li><li>2. PUT GEAR SWITCH IN GEAR DOWN POSITION.</li><li>3. PUSH RELEASE TAB FORWARD AND LIFT UP RED HANDLE.</li><li>4. PULL T-HANDLE STRAIGHT UP (12 TO 20 INCHES).</li><li>5. ALLOW T-HANDLE TO RETURN TO ORIGINAL POSITION.</li><li>6. REPEAT UNTIL GEAR DOWN LIGHT COMES ON (12 TO 20 PULLS). IF TOTAL ELECTRICAL FAILURE-SEE MECHANICAL INDICATOR.</li></ol>
<p style="text-align: center;"><b>CAUTION</b></p> <ol style="list-style-type: none"><li>1. TURN OFF STROBE LITES WHEN TAXIING NEAR OTHER ACFT OR WHEN FLYING IN FOG OR IN CLOUDS. STD. POSITION LITES MUST BE USED FOR ALL NIGHT OPERATIONS.</li><li>2. IN CASE OF FIRE TURN OFF CABIN HEAT.</li><li>3. DO NOT SCREW VERNIER CONTROLS CLOSER THAN 1/8" FROM NUT FACE.</li></ol>

**ON LEFT SIDE PANEL**

---

DEFROSTER PULL ON	CABIN HEAT PULL ON	CABIN VENT PULL ON
----------------------	-----------------------	-----------------------










<b>CHECK LIST</b>			
T A K E  D F F	CONTROLS FUEL INSTRUMENTS TRIM COWL FLAPS	RUN-UP PROP WING FLAPS SEAT LATCH BELT/HARNESS	DOOR WINDOW MIXTURE BOOST PUMP
CONDUCT TRIM CHECK PRIOR TO FLIGHT, SEE PILOT'S OPERATING HANDBOOK.			
L D G	BELT/HARNESS FUEL BOOST PUMP	MIXTURE WING FLAPS	GEAR PROP

**ON CONSOLE-BELOW CONTROLS**


J90DEC-1

SECTION II  
LIMITATIONS

MOONEY  
M20J

<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p style="text-align: center; margin: 0;"><b>PULL FOR ALTERNATE STATIC SOURCE</b></p> </div> <p style="text-align: center; margin-top: 5px;">-857</p> <p style="text-align: center;">ON LOWER LEFT INSTRUMENT PANEL</p>	<p style="text-align: center;">DO NOT OPEN ABOVE 132 KIAS</p> <p style="text-align: center;">-143</p> <p style="text-align: center;">ON PILOT'S WINDOW</p>
<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p style="text-align: center; margin: 0;">AVOID CONT. OPERATION BETWEEN 1500 &amp; 1950 RPM W/POWER SETTINGS BELOW 15" Hg. MANIFOLD PRESSURE.</p> </div> <p style="text-align: center; margin-top: 5px;">ON RIGHT INSTRUMENT PANEL ADJACENT TO TACHOMETER (McCAULEY PROPELLER ONLY)</p>	<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p style="text-align: center; margin: 0;">COWL FLAPS CLOSED</p> </div> <p style="text-align: center; margin-top: 5px;">ON CONSOLE ABOVE &amp; BELOW COWL FLAP SWITCH (UNDER MIXTURE CONTROL)</p> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p style="text-align: center; margin: 0;">COWL FLAPS OPEN</p> </div>
<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p style="text-align: center; margin: 0;">PARK BRAKE PULL ON</p> </div> <p style="text-align: center; margin-top: 5px;">ON LOWER CONSOLE BELOW CONTROLS</p>	<div style="display: flex; justify-content: space-around; align-items: center; margin: 10px 0;"> <div style="text-align: center;">  <p>MIKE</p> </div> <div style="text-align: center;">  <p>PHONE</p> </div> </div> <p style="text-align: center;">-213</p> <p style="text-align: center;">LOWER LEFT INSTRUMENT PANEL</p>
<div style="display: flex; align-items: center; margin: 10px 0;">  <div style="margin-left: 10px;"> <p style="font-size: 24px; margin: 0;">PUSH TO RELEASE</p> <p style="text-align: right; margin: 0;">-877</p> </div> </div> <p style="text-align: center; margin-top: 10px;">BETWEEN SEATS ON EMERGENCY GEAR EXTENSION RELEASE</p>	
<div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: 90%; text-align: center;"> <div style="display: flex; justify-content: space-around; font-weight: bold; font-size: 12px; margin-bottom: 10px;"> <span>NAV 2</span> <span>NAV 2 IND</span> <span>INTERCOM</span> <span>FUEL FLOW</span> <span>ISOLATE</span> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin: 0 auto; width: 80%;">       </div> </div> <p style="text-align: center; margin-top: 10px;">(LEGENDS MAY VARY WITH INSTALLED EQUIPMENT)</p> <p style="text-align: center; margin-top: 5px;">ELT PLACARD - TOP RIGHT INSTRUMENT PANEL</p>	



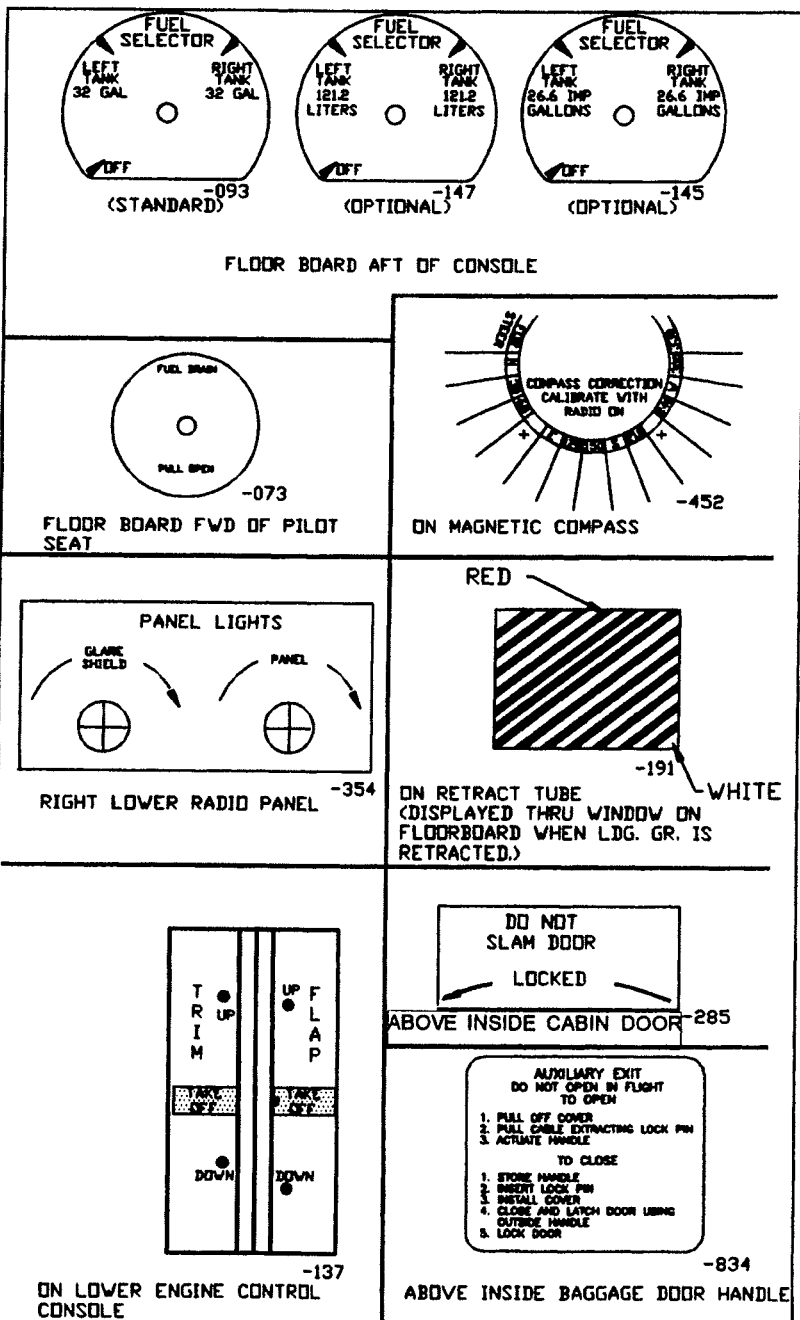


FLAPS UP

-381

FLAPS DN

-379

RIGHT CONSOLE ABOVE AND  
BELOW FLAP SWITCH

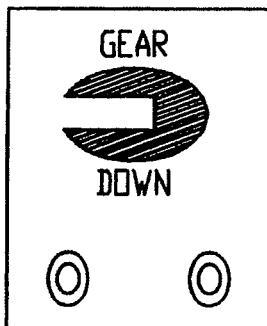

-369

(DISPLAYED THRU WINDOW IN  
FLOORBOARD WHEN LDG. GR.  
IS EXTENDED)

THROTTLE  
PUSH INCREASE

-383

PROP  
PUSH INCREASE

-385

MIXTURE  
PUSH RICH

-387

ABOVE EACH CONTROL ON LOWER INSTRUMENT PANEL


WARNING:

DO NOT EXCEED 10 LBS (4.5 Kg) IN THIS COMPARTMENT  
USE FOR STOWAGE OF LIGHT SOFT ARTICLES ONLY  
SEE AIRCRAFT LOADING SCHEDULE DATA  
FOR BAGGAGE COMPARTMENT ALLOWABLE



-155

ABOVE BAGGAGE COMPARTMENT ON HATRACK SHELF

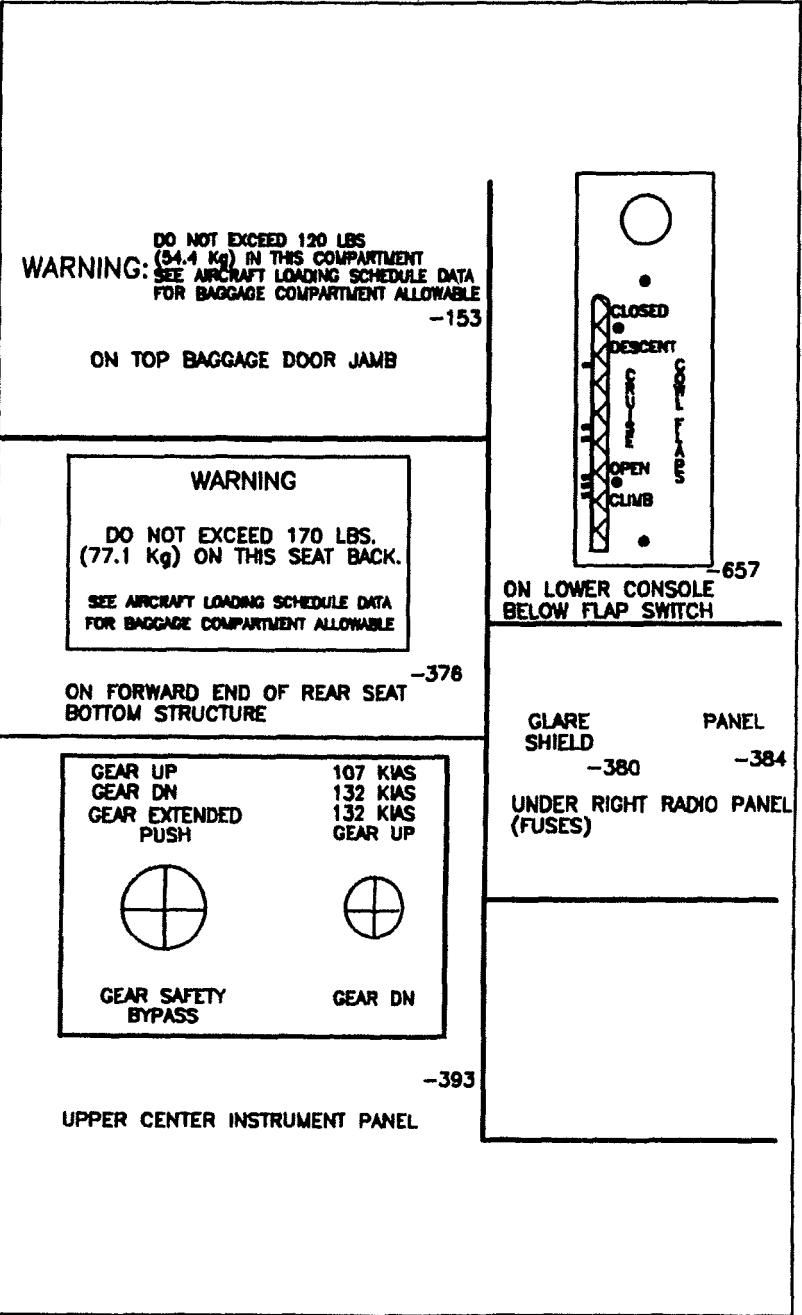

FUSELAGE INTERIOR (inside tailcone)

The following placards must be installed inside the tailcone at the locations specified.

MAINTAIN



LEVEL HERE

-071

ON HYDRAULIC BRAKE RESERVOIR

ENGINE OIL  
OIL INSTALLED IN THIS ENGINE IS:




NEXT OIL CHANGE IS DUE AT \_\_\_\_\_HRS.  
(USE GREASE PENCIL) TACH TIME

-750

ON OIL ACCESS/FILLER DOOR

EXTERIOR

The following placards must be installed on the exterior of the aircraft at the locations specified.

<p>TIRE PRESSURE 30 PSI (207 KPA) -761</p> <p><u>ON MAIN GEAR DOORS</u></p>	
<p>TIRE PRESSURE 49 PSI (338 KPA) -759</p> <p><u>ON NOSE GEAR DOOR</u></p>	
<p>FUEL-100 (GREEN) or 100LL (BLUE) MIN. OCT. 32 U.S. GAL</p> <p>STANDARD</p> <p><u>ON FUEL TANK CAPS</u></p>	<p>FUEL-100 (GREEN) or 100LL (BLUE) MIN. OCT. 121.2 LITERS USEABLE</p> <p>OPTIONAL</p> <p>FUEL-100 (GREEN) or 100LL (BLUE) MIN. OCT. 26.6 IMP GAL USEABLE</p> <p>OPTIONAL</p>
<p> TOWING LIMITS  -700</p> <p>WARNING</p> <p>DO NOT EXCEED TOWING LIMITS</p> <p> -701</p> <p><u>ON NOSE GEAR LEG</u></p>	<p>DO NOT PUSH -009</p> <p>ON LEADING EDGE OF HORIZONTAL STABILIZER AND TRAILING EDGE OF BOTH SIDES OF RUDDER</p>
<p>NO STEP -007</p> <p>ON INBOARD END OF FLAPS, WING LEADING EDGES AND WING AHEAD OF FLAPS</p>	

HOIST POINT  
-011

ON UNDERSIDE OF WINGS (2 PLCS)

FUEL DRAIN

UNDER EACH WING NEAR SUMP DRAINS

PITOT DRAIN

UNDER LEFT HAND WING LEADING EDGE  
NEAR FUSELAGE

GASCOLATOR  
DRAIN

UNDER FUSELAGE AFT OF  
NOSE WHEEL WELL

STATIC DRAIN

UNDER TAILCONE AFT OF WING  
TRAILING EDGE

J80DEC-8

**TABLE OF CONTENTS**

TITLE . . . . .	PAGE
INTRODUCTION . . . . .	3-3
AIRSPEEDS FOR EMERGENCY OPERATIONS . . . . .	3-4
ANNUNCIATOR PANEL WARNING LIGHTS . . . . .	3-5
ENGINE . . . . .	3-6
POWER LOSS-DURING TAKEOFF ROLL . . . . .	3-6
POWER LOSS-AFTER LIFTOFF . . . . .	3-6
POWER LOSS - IN FLIGHT (RESTART PROCEDURES) . . . . .	3-6
ENGINE ROUGHNESS . . . . .	3-6
ELECTRIC COWL FLAPS FAILURE - FULL CLOSED POSITION . . . . .	3-7
HIGH CYLINDER HEAD TEMPERATURE . . . . .	3-7
HIGH OIL TEMPERATURE . . . . .	3-7
LOW OIL PRESSURE . . . . .	3-7
ENGINE DRIVEN FUEL PUMP FAILURE . . . . .	3-7
FIRES . . . . .	3-8
ENGINE FIRE - DURING START ON GROUND . . . . .	3-8
ENGINE FIRE - IN FLIGHT . . . . .	3-8
ELECTRICAL FIRE - IN FLIGHT . . . . .	3-8
EMERGENCY DESCENT PROCEDURE . . . . .	3-9
GLIDE . . . . .	3-9
FORCED LANDING EMERGENCY . . . . .	3-10
GEAR RETRACTED OR EXTENDED . . . . .	3-10
SYSTEM EMERGENCIES . . . . .	3-10
PROPELLER . . . . .	3-10
FUEL . . . . .	3-10
ELECTRICAL . . . . .	3-10
LANDING GEAR . . . . .	3-11
OXYGEN . . . . .	3-12
ALTERNATE STATIC SOURCE . . . . .	3-12
UNLATCHED DOORS IN FLIGHT . . . . .	3-12
ICING . . . . .	3-13
SPINS . . . . .	3-14
EMERGENCY EXIT OF AIRCRAFT . . . . .	3-14
OTHER EMERGENCIES . . . . .	3-15

SECTION III  
EMERGENCY PROCEDURES

MOONEY  
M20J

**TABLE OF CONTENTS (con't.)**



### **INTRODUCTION**

This section provides the recommended procedures to follow during adverse flight conditions. The information is presented to enable you to form, in advance, a definite plan of action for coping with the most probable emergency situations which could occur in the operation of your airplane.

As it is not possible to have a procedure for all types of emergencies that may occur, it is the pilot's responsibility to use sound judgement based on experience and knowledge of the aircraft to determine the best course of action. Therefore, it is considered mandatory that the pilot read the entire manual, especially this section before flight.

When applicable, emergency procedures associated with optional equipment such as autopilots are included in SECTION IX.

### **| NOTE |**

**All airspeeds in this section are indicated (IAS) and assume zero instrument error unless stated otherwise.**

**AIRSPEEDS FOR EMERGENCY OPERATIONS**

**CONDITION . . . . . RECOMMENDED SPEED**

**ENGINE FAILURE AFTER TAKEOFF**

Wing Flaps UP . . . . .	85 KIAS
Wing Flaps DOWN . . . . .	75 KIAS

**MAXIMUM GLIDE SPEED**

2900 lb/1315 Kg . . . . .	93 KIAS
2740 lb/1243 kg . . . . .	90 KIAS
2500 lb/1134 kg . . . . .	87 KIAS
2300 lb/1043 kg . . . . .	84 KIAS

**MANEUVERING SPEED**

2900 lb/1315 Kg . . . . .	118 KIAS
2740 lb/1243 kg . . . . .	115 KIAS
2470 lb/1120 kg . . . . .	109 KIAS
2250 lb/1021 kg . . . . .	104 KIAS

**PRECAUTIONARY LANDING WITH ENGINE POWER,**

Flaps DOWN . . . . .	75 KIAS
----------------------	---------

**EMERGENCY DESCENT (GEAR UP)**

Smooth Air . . . . .	196 KIAS
Turbulent Air	
2900 lb/1315 Kg . . . . .	120 KIAS
2740 lb/1243 kg . . . . .	115 KIAS
2470 lb/1120 kg . . . . .	109 KIAS
2250 lb/1021 kg . . . . .	104 KIAS

**EMERGENCY DESCENT (GEAR DOWN)**

Smooth Air . . . . .	132 KIAS
Turbulent Air	
2900 lb/1315 Kg . . . . .	120 KIAS
2740 lb/1243 kg . . . . .	115 KIAS
2470 lb/1120 kg . . . . .	109 KIAS
2250 lb/1021 kg . . . . .	104 KIAS

**ANNUNCIATOR PANEL WARNING LIGHTS**

**WARNING LIGHT**

**FAULT & REMEDY**

**GEAR UNSAFE**

RED light indicates landing gear is not in fully extended or retracted position. Refer to "FAILURE OF LANDING GEAR TO EXTEND ELECTRICALLY" or "FAILURE OF LANDING GEAR TO RETRACT".

**LEFT or RIGHT FUEL**

RED light indicates 2 1/2 to 3 gallons (9.5 to 11.4 liters) of usable fuel remain in the respective tank. Switch to fuller tank.

**PROP DE-ICE**  
(if installed)

BLUE light indicates power applied to De-Ice boots.

**PITOT HEAT**

BLUE light indicates power applied to heater. (On some foreign A/C - AMBER light indicates power is NOT applied to Pitot Heat).

**SPEED BRAKE**  
(if installed)

Speedbrakes are extended.

**HI/LO VAC (Flashing)**

Suction is below 4.25 In. Hg. (RED)

**HI/LO VAC (Steady)**

Suction is above 5.5 In. Hg. (RED)

**| NOTE |**

**Attitude and directional gyros are unreliable when VAC light is illuminated (steady or flashing). Vacuum system should be checked and/or adjusted as soon as practicable.**

**ALT VOLTS**  
(Flashing)

RED light indicates alternator output is low. Refer to "ALTERNATOR OUTPUT LOW".

**ALT VOLTS**  
(Steady)

RED light indicates overvoltage and field C/B tripped or field switch is OFF. Refer to "ALTERNATOR OVERVOLTAGE".

**START POWER**

RED light indicates switch or relay is engaged and starter is energized. Flight should be terminated as soon as practicable. Engine & electrical system damage may result. This is normal indication during engine start.

**STBY VAC**  
(if installed)

AMBER light indicates stand-by vacuum system is ON.

**REMOTE RNAV**  
(if installed)

AMBER light indicates DME not slaved to RNAV.

**BOOST PUMP**

Fuel Boost Pump is ON.

SECTION III  
EMERGENCY PROCEDURES

MOONEY  
M20J

**ENGINE**

**POWER LOSS - DURING TAKEOFF ROLL**

Throttle	.....	CLOSED
Brakes	.....	AS REQUIRED
Fuel Selector	.....	OFF
Magneto/Starter Switch	.....	OFF
Master	.....	OFF

**POWER LOSS - AFTER TAKEOFF & IN FLIGHT (RESTART PROCEDURES)**

Airspeed	.....	85 KIAS
Fuel Selector	.....	SELECT OTHER TANK
Fuel Pressure	.....	Verify in GREEN ARC
Fuel Boost Pump	.....	ON (IF REQUIRED)
Throttle	.....	FULL FORWARD
Propeller	.....	FULL FORWARD
Mixture	.....	FULL FORWARD
Magneto Starter/Switch	.....	VERIFY on "BOTH"

If engine does not restart after initial attempts:

Mixture	.....	IDLE CUTOFF (Initially)
then advance slowly toward RICH until engine starts.		

If engine does not restart, establish best glide speed and proceed to:

**FORCED LANDING EMERGENCY.**

After engine restarts:

Throttle	.....	ADJUST as required
Propeller	.....	ADJUST as required
Mixture	.....	RE-LEAN as power is restored

LAND AS SOON AS PRACTICABLE; CORRECT MALFUNCTION PRIOR TO NEXT FLIGHT.

**ENGINE ROUGHNESS**

Engine Instruments	.....	CHECK
Fuel Selector	.....	OTHER TANK
Mixture	.....	READJUST for smooth operation
Magneto/Starter	.....	Select R or L or BOTH.

If roughness disappears on single magneto, monitor power and continue on selected magneto.

//////////  
// WARNING //  
//////////

The engine may quit completely when one magneto is switched off if other magneto is faulty. If this happens, close throttle to idle and mixture to idle cutoff before turning magnetos ON to prevent a severe afterfire. When magnetos have been turned back on, proceed to POWER LOSS - IN FLIGHT. Severe roughness may be sufficient to cause propeller separation. Do not continue to operate a rough engine unless there is no other alternative.

Throttle	.....	REDUCE
Check if a lesser throttle setting causes roughness to decrease.		
If severe engine roughness cannot be eliminated LAND AS SOON AS PRACTICABLE.		

**ELECTRIC COWL FLAPS FAILURE - FULL CLOSED POSITION**

Acceptable engine operating temperatures can always be maintained during flight with the cowl flaps failed in the full closed position using the following procedure:

Power	AS REQUIRED
Mixture	RICH
Airspeed	120 KIAS
Cylinder Head Oil Temperature	MONITOR - - NORMAL OPERATING RANGE

### HIGH CYLINDER HEAD TEMPERATURE

Mixture	ENRICH As Required
Cowl Flaps	OPEN as required
Airspeed	INCREASE As Required
Power	REDUCE

if temperature cannot be maintained within limits.

### HIGH OIL TEMPERATURE

#### | NOTE |

Prolonged high oil temperature indications will usually be accompanied by a drop in oil pressure. If oil pressure remains normal, then a high temperature indication may be caused by a faulty gauge or temperature probe.

Cowl Flaps	OPEN
Airspeed	INCREASE
Power	REDUCE

PREPARE FOR POSSIBLE ENGINE FAILURE IF TEMPERATURE CONTINUES HIGH.

### LOW OIL PRESSURE

Oil temperature and pressure	Monitor
Pressure below 25 PSI	EXPECT ENGINE FAILURE, proceed to FORCED LANDING EMERGENCY.

### ENGINE DRIVEN FUEL PUMP FAILURE

An engine driven fuel pump failure is probable when the engine will only operate with the boost pump ON. Operation of the engine with a failed engine driven fuel pump and the BOOST ON will require smooth operation of the engine controls and corresponding mixture change when the throttle is repositioned or the engine speed is changed. When retarding throttle or reducing engine speed lean the mixture to prevent engine power loss from an overrich condition. Enrich the mixture when opening the throttle or increasing engine speed to prevent engine power loss from a lean condition. Always lean to obtain a smooth running engine.

The following procedure should be followed when a failed engine driven fuel pump is suspected:

Mixture	IDLE CUTOFF
Throttle	CRUISE Position
Fuel Boost Pump	ON
Mixture	INCREASE

until engine starts and adjust for smooth engine operation.  
LAND AS SOON AS PRACTICABLE.

SECTION III  
EMERGENCY PROCEDURES

MOONEY  
M20J

**FIRES**

**ENGINE FIRE-DURING START ON GROUND**

Magneto/Starter Switch	CONTINUE cranking
<b>If engine starts:</b>	
Power	1500 RPM for several minutes or until fire is extinguished.
Engine	<b>SHUTDOWN - Inspect for damage</b>
<b>If engine does NOT start:</b>	
Magneto/Starter Switch	CONTINUE cranking
Mixture	IDLE CUTOFF
Throttle	FULL FORWARD
Fuel Selector Valve	OFF
Magneto/Starter Switch	OFF
Master Switch	OFF
Fire	EXTINGUISH with Fire Extinguisher

**ENGINE FIRE-IN FLIGHT**

Fuel Selector Valve	OFF
Throttle	CLOSED
Mixture	IDLE CUTOFF
Magneto/Starter Switch	OFF
Cabin Ventilation & Heating Controls	CLOSED
Cowl Flaps	CLOSED
Landing Gear	DOWN or UP, depending on terrain
Wing Flaps	EXTEND as necessary

**| NOTE |**

If fire is not extinguished, attempt to increase airflow over the engine by increasing glide speed and open cowl flaps. Proceed with **FORCED LANDING EMERGENCY**. Do not attempt an engine restart.

**ELECTRICAL FIRE- IN FLIGHT (Smoke in Cabin)**

Master Switch	OFF
---------------	-----

/////////  
//WARNING//  
/////////

Stall warning and gear warning are not available with Master Switch OFF.

Alternator Field Switch	OFF
All Electrical Switches	OFF
Cabin Ventilation	OPEN
Heating Controls	AS DESIRED
Circuit Breakers	CHECK to identify faulty circuit if possible.

If electrical power is essential for the flight, attempt to identify and isolate faulty circuit as follows:  
Master Switch ON  
Alternator Field Switch ON  
Select **ESSENTIAL** switches **ON** one at a time; permit a short time to elapse before activating an additional circuit.

LAND AS SOON AS POSSIBLE.

### EMERGENCY DESCENT PROCEDURE

In the event an emergency descent from high altitude is required, rates of descent of approximately 2,000 feet per minute or greater can be attained with the aircraft in two different configurations.

With the gear and flaps retracted and cowl flaps closed, an airspeed of 196 knots will be required for maximum rate of descent. With the gear extended, flaps retracted and cowl flaps closed, an airspeed of 132 knots will also give approximately the same maximum rate of descent. At 132 knots and the gear extended, the angle of descent will be greater, thus resulting in less horizontal distance traveled than a descent at 196 knots. Additionally, a descent at 132 knots will provide a smoother ride and a safer airspeed in the event air turbulence is encountered, resulting in less pilot workload.


Therefore: The following procedure should be used for an emergency descent:

Power	RETARD Initially
Airspeed	132 KIAS
Landing Gear	EXTEND
Wing Flaps	UP
Cowl Flaps	CLOSED
Power During Descent	AS REQUIRED

to maintain Cylinder Head Temperature 300° F (149° C) minimum.

### GLIDE

#### MAXIMUM GLIDE DISTANCE MODEL M20J

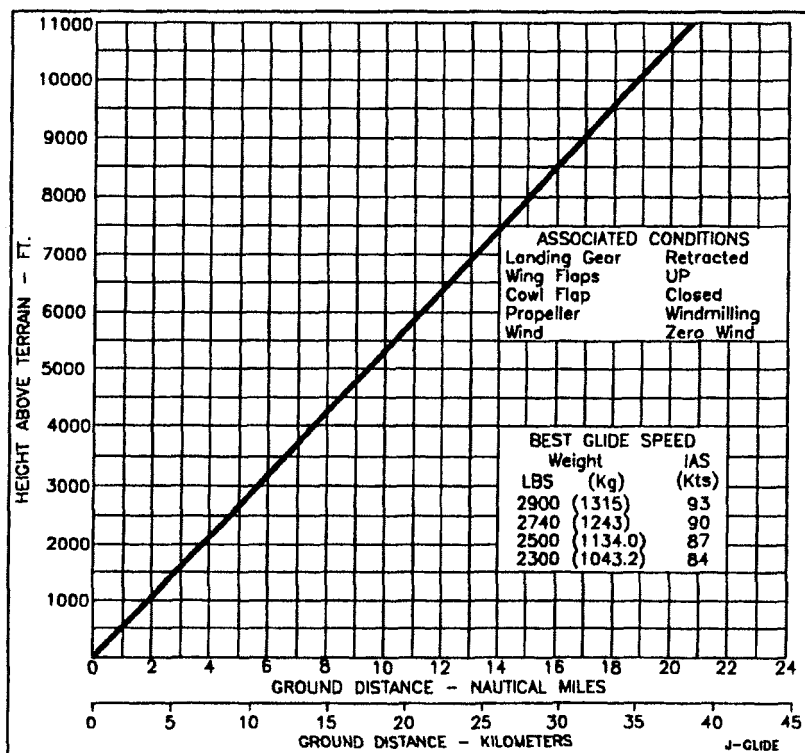

# SECTION III EMERGENCY PROCEDURES

MOONEY  
M20J

## FORCED LANDING EMERGENCY

### POWER OFF - GEAR RETRACTED OR EXTENDED

Emergency Locator Transmitter	ARMED
Seat Belts/Shoulder Harnesses	SECURE
Cabin Door	UNLATCHED
Fuel Selector	OFF
Mixture	IDLE CUTOFF
Magneto/Starter	OFF
Wing Flaps	Full DOWN (33 Degrees)
Landing Gear	DOWN or UP Depending on Terrain
Approach Speed	AS SLOW AS POSSIBLE
Master Switch	OFF, prior to landing
Landing	LEVEL, TAIL LOW ATTITUDE

## SYSTEMS EMERGENCIES

### PROPELLER

#### PROPELLER OVERSPEED

Throttle	RETARD
Oil Pressure	CHECK
Propeller	DECREASE, set if any control available
Airspeed	REDUCE
Throttle	AS REQUIRED to maintain RPM below 2700 RPM

### FUEL

#### LOW FUEL FLOW

Mixture	ENRICH
Fuel Selector	OPPOSITE (fullest) TANK
If condition persists, use Fuel Boost Pump as necessary and LANDING SHOULD BE MADE AS SOON AS PRACTICABLE.	

### ELECTRICAL

#### ALTERNATOR OVERVOLTAGE

(Voltage warning light illuminated steady and Alternator Field circuit breaker tripped.)

Avionics Master	OFF
Master	OFF, then ON

If Warning Light is still illuminated, the following steps are required:

Alternator Field Circuit Breaker

If circuit breaker will not reset, the following procedures are required:

1. Non-essential electrical equipment OFF to conserve battery power.
2. Land, when practical, to correct malfunction.

#### ALTERNATOR OUTPUT LOW

(Voltage warning light flashing; ammeter showing discharge)

1. Non-essential electrical equipment OFF to conserve battery power.
2. Land, when practical, to correct malfunction.

Battery endurance will depend upon battery condition and electrical load on the battery.

### | NOTE |

A tripped main alternator circuit breaker can only be caused by a shorted alternator circuit and cannot be corrected by resetting breaker. This should be verified by attempting to reset breaker not more than one time. If this fails, turn alternator field switch OFF. Turn OFF all non-essential electrical equipment and terminate flight as soon as practical. Repair malfunctioning alternator prior to next flight.



# LANDING GEAR

## FAILURE OF LANDING GEAR TO EXTEND ELECTRICALLY

Airspeed	132 KIAS or less
Landing Gear Actuator Circuit Breaker	PULL
Gear Switch	DOWN
Manual Gear Extension Mechanism	LATCH FORWARD/LEVER BACK to engage manual extension mechanism.

### [ NOTE ]

Slowly pull "T" handle 1 to 2 inches (2.5 to 5.1 cm) to rotate clutch mechanism and allow it to engage drive shaft.

T-Handle	PULL (12 to 20 times and RETURN until gear is down and locked, GEAR DOWN light illuminated; STOP when resistance is felt.
Visual Gear Down Indicator	CHECK ALIGNMENT by viewing from directly above the indicator.

### ~ CAUTION ~

Continuing to pull on T-Handle after GEAR DOWN light ON will bind actuator; electrical retraction MAY NOT be possible until binding is eliminated. Return lever to normal position and secure latch. Reset landing gear actuator C/B.

### ////// //WARNING// /////

Do not operate landing gear electrically with manual extension system engaged.

## FORCED LANDING EMERGENCY

### GEAR RETRACTED OR EXTENDED

Emergency Locator Transmitter	ARMED
Seat Belts and Shoulder Harnesses	SECURE
Cabin Door	UNLATCHED

When sure of making landing area:

Fuel Selector	OFF
Throttle	AS REQUIRED
Mixture	IDLE CUTOFF
Magneto/Starter	OFF
Wing Flaps	FULL DOWN (33°)
Landing Gear	UP or DOWN - DEPENDING ON TERRAIN
Master Switch	OFF
Approach Speed	As SLOW As Possible
Landing	LEVEL, TAIL LOW ATTITUDE

### FAILURE OF LANDING GEAR TO RETRACT

AIRSPEED	Below 107 KIAS
GEAR Switch	UP

IF GEAR FAILS TO RETRACT, GEAR HORN — SOUNDING, GEAR ANNUNCIATOR LIGHTS and GEAR SAFETY BY-PASS LIGHT — ILLUMINATED:

GR SAFETY BY PASS SWITCH	DEPRESS and HOLD until landing gear fully retracted
GEAR DOWN and GEAR UNSFE Lights	EXTINGUISHED
GEAR RELAYS Circuit Breaker	PULL (Warning horn and Gear By-Pass light will go OFF)

## SECTION III EMERGENCY PROCEDURES

MOONEY  
M20J

**IF GEAR FAILS TO RETRACT, GEAR HORN — DOES NOT SOUND, GEAR ANNUNCIATOR LIGHTS and GEAR BY-PASS LIGHT — NOT ILLUMINATED:**

EMERGENCY GEAR EXTENSION LEVER . . . . . Verify LATCHED in proper position.  
GEAR RELAYS Circuit Breaker . . . . . RESET

CONTINUE FLIGHT If desired.

**When ready to extend landing gear:**

AIRSPPEED . . . . . Below 132 KIAS  
GEAR RELAYS CIRCUIT BREAKER . . . . . RESET  
GEAR SWTCH . . . . . DOWN Position

If gear will not extend electrically, refer to FAILURE OF LANDING GEAR TO EXTEND ELECTRICALLY.

### OXYGEN

Refer to SECTION IX, if aircraft is equipped with oxygen.

### ALTERNATE STATIC SOURCE

The alternate static air source should be used whenever it is suspected that normal static air sources are blocked. Selecting Alternate Static Air changes the source of static air for altimeter, airspeed indicator and rate-of-climb from outside aircraft to cabin interior.

When alternate static air source is in use, adjust indicated airspeed and altimeter readings according to the appropriate alternate static source airspeed and altimeter calibration tables in SECTION V.

The static air source valve is located on lower left portion of pilot's flight panel above pilot's left knee.

### [ NOTE ]

**When using the alternate static source the pilots window and airvents  
MUST BE KEPT CLOSED**

Alternate Static Source . . . . . PULL ON  
Airspeed and Altimeter Readings . . . . . CHECK Calibrations Tables, SECTION V

## **UNLATCHED DOORS IN FLIGHT**

### CABIN DOOR

If cabin door is not properly closed it may come unlatched in flight. This may occur during or just after take-off. The door will trail in a position approximately 3 inches (7.6 cm) open, but flight characteristics of the airplane will not be affected. Return to the field in a normal manner. If practicable, secure door in some manner to prevent it from swinging open during landing.

If it is deemed impractical to return and land, the door can be closed in flight, after reaching a safe altitude, by the following procedures:

Airspeed . . . . . 95 KIAS  
Pilot's Storm Wndow . . . . . OPEN  
Aircraft . . . . . RIGHT SIDESLIP (Right bank  
with left rudder)  
Door . . . . . PULL SHUT & LATCH

### BAGGAGE DOOR

If baggage door is not properly closed, it may come unlatched in flight. This may occur during or after takeoff. The door may open to its full open position and then take an intermediate position depending upon speed of the aircraft. There will be considerable wind noise; loose, light objects may exit aircraft if in vicinity of open door. There is no way to shut and latch door from inside; fly aircraft in normal manner; LAND AS SOON AS POSSIBLE and secure baggage door.

Baggage Door latching mechanism . . . . . VERIFY PROPERLY ENGAGED  
(inside latching mechanism) then shut from the outside.

**ICING**

//////  
//WARNING//  
//////

**DO NOT OPERATE IN KNOWN ICING CONDITIONS.**

The Model M20J is **NOT APPROVED** for flight into known icing conditions and operation in that environment is prohibited. However, if those conditions are inadvertently encountered or if flight into heavy snow is unavoidable, the following procedures are recommended until further icing conditions can be avoided:

**INADVERTENT ICING ENCOUNTER**

Pitot Heat	ON
Propeller De-Ice	ON (if installed)
Alternate Static Source	ON (if required)
Cabin Heat & Defroster	ON

Turn back or change altitude to obtain an outside air temperature less conducive to icing.

Move propeller control to maximum RPM to minimize ice build-up on propeller blades. If ice builds up or sheds unevenly on propeller, vibration will occur. If excessive vibration is noted, momentarily reduce engine speed with propeller control to bottom of GREEN ARC, then rapidly move control FULL FORWARD.

**| NOTE |**

**Cycling RPM flexes propeller blades and high RPM increases centrifugal force which improves propeller capability to shed ice.**

As ice builds on the airframe, move elevator control fore and aft slightly to break any ice build-up that may have bridged gap between elevator horn and horizontal stabilizer.

Watch for signs of induction air filter blockage due to ice build-up; increase throttle setting to maintain manifold pressure.

**| NOTE |**

**If ice blocks induction air filter, alternate air system will open automatically.**

With ice accumulation of 1/4 inch or more on the airframe, be prepared for a significant increase in aircraft weight and drag. This will result in significantly reduced cruise and climb performance and higher stall speeds. Plan for higher approach speeds requiring higher power settings and longer landing rolls.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

**Stall warning system may be inoperative.**

The defroster may not clear ice from windshield. If necessary open pilot's storm window for visibility in landing approach and touchdown.

With ice accumulations of any amount, use no more than 15° flaps for approach and landing. Fly approach speeds at least 10 knots higher than normal, expect a higher stall speed resulting in higher touchdown speed with longer landing roll. Use normal flare and touchdown technique.

Missed approaches **SHOULD BE AVOIDED** whenever possible because of severely reduced climb performance. If a go-around is mandatory, apply **FULL POWER**, retract landing gear when obstacles are cleared; maintain 90 KIAS and retract wing flaps.

**SPINS**

//////////  
// **WARNING** //  
//////////

Up to 2000 feet altitude may be lost in a one turn spin and recovery;  
**STALLS AT LOW ALTITUDE ARE EXTREMELY CRITICAL**

**| NOTE |**

The best spin recovery technique is to avoid flight conditions conducive to spin entry. Low speed flight near stall should be approached with caution and excessive flight control movements in this flight regime should be avoided. Should an unintentional stall occur the aircraft should not be allowed to progress into a deep stall. Fast, but smooth stall recovery will minimize the risk of progressing into a spin. If an unusual post stall attitude develops and results in a spin, quick application of anti-spin procedures should shorten the recovery.

**INTENTIONAL SPINS ARE PROHIBITED.**

In the event of an inadvertent spin, the following recovery procedure should be used:

Throttle . . . . .	RETARD to IDLE
Ailerons . . . . .	NEUTRAL
Rudder . . . . .	Apply FULL RUDDER opposite the direction of spin
Control Wheel . . . . .	FORWARD of neutral in a brisk motion
Additional FORWARD elevator control may be required if the rotation does not stop	
<b>HOLD ANTI-SPIN CONTROLS UNTIL ROTATION STOPS.</b>	
Wing Flaps (If extended) . . . . .	RETRACT as soon as possible
Rudder . . . . .	NEUTRALIZE when spin stops
Control Wheel . . . . .	SMOOTHLY MOVE AFT
to bring the nose up to level flight attitude.	

**EMERGENCY EXIT OF AIRCRAFT**

**CABIN DOOR**

PULL latch handle AFT.  
OPEN door and exit aircraft.

**BAGGAGE COMPARTMENT DOOR (AUXILIARY EXIT)**

Release (PULL UP) rear seat back latches on Spar.  
Fold rear seat backs forward, CLIMB OVER.  
PULL off plastic cover.  
PULL latch pin.  
Lift red handle "UP".  
OPEN door and exit aircraft.

To **VERIFY RE-ENGAGEMENT** of baggage door outside latch mechanism:

Open outside handle fully  
Close inside RED handle to engage pin into cam slide of latch mechanism  
Place latch pin in hole to hold RED handle DOWN  
Replace cover.  
CHECK and operate outside handle in normal manner.

MOONEY  
M20J

SECTION III  
EMERGENCY PROCEDURES

**OTHER EMERGENCIES**

Refer to SECTION IX for EMERGENCY PROCEDURES of Optional Equipment.

**BLANK**

**TABLE OF CONTENTS**

<b>TITLE . . . . .</b>	<b>PAGE</b>
INTRODUCTION . . . . .	4-2
PREFLIGHT INSPECTION . . . . .	4-3
BEFORE STARTING CHECK . . . . .	4-5
ENGINE START . . . . .	4-6
FLOODED ENGINE START . . . . .	4-7
WARM ENGINE START . . . . .	4-7
BEFORE TAXI . . . . .	4-7
TAXI . . . . .	4-7
BEFORE TAKEOFF . . . . .	4-8
TAKEOFF . . . . .	4-8
CLIMB . . . . .	4-9
CLIMB (CRUISE) . . . . .	4-9
CLIMB (BEST RATE) . . . . .	4-9
CLIMB (BEST ANGLE) . . . . .	4-9
CRUISE . . . . .	4-10
FUEL TANK SELECTION . . . . .	4-11
DESCENT . . . . .	4-11
APPROACH FOR LANDING . . . . .	4-11
GO AROUND (BALKED LANDING) . . . . .	4-12
LANDING . . . . .	4-12
TAXI AFTER LANDING . . . . .	4-13
SHUTDOWN . . . . .	4-13
SECURING AIRCRAFT . . . . .	4-13

**INTRODUCTION**


This section describes the recommended procedures for the conduct of normal operations for the airplane. All of the required (FAA regulations) procedures and those necessary for operation of the airplane as determined by the operating and design features of the airplane are presented.

These procedures are provided to present a source of reference and review and to supply information on procedures which are the same for all aircraft. Pilots should familiarize themselves with the procedures given in this section in order to become proficient in the normal operations of the airplane.

Normal procedures associated with those optional systems and equipment which require handbook supplements are provided by SECTION IX (Supplemental Data).



## **PREFLIGHT INSPECTION**

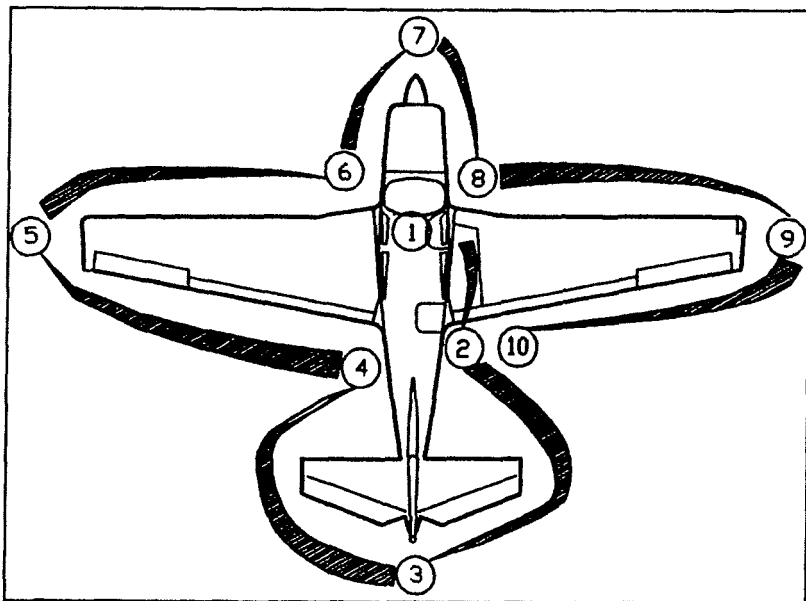

- [illegible]

- |  |              |
|--|--------------|
| 2. Right Fuselage/Tail Cone-Instrument Static Port | UNOBSTRUCTED |
| General Skin Condition                             | INSPECT      |
| Access Panels                                      | SECURED      |
| Tail Tie-down                                      | REMOVE       |

3. Empennage -  
Elevator and Rudder attach points and control linkage attachments . . . . . INSPECT  
General Skin Condition . . . . . INSPECT-Remove ice, snow, or frost.

- |                                    |                    |
|------------------------------------|--------------------|
| <b>4. Left Fuselage/Tail Cone-</b> |                    |
| Fresh Air Vent (on Dorsal Fin)     | CLEAR              |
| Instrument Static Port             | UNOBSTRUCTED       |
| General Skin Condition             | INSPECT            |
| Tailcone/Empennage Access Door     | SECURED            |
| Static System Drain Valve          | PUSH UP            |
|                                    | (Hold 3-5 Seconds) |

## SECTION IV NORMAL PROCEDURES

MOONEY  
M20J

<b>5. Left Wing -</b>	
General Skin Condition	INSPECT-Remove ice, snow, or frost.
Flap and attach points	INSPECT
Aileron and attach points	INSPECT
Control Linkages	INSPECT
Wing Tips, Lights and Lens	INSPECT
Pitot Tube	UNOBSTRUCTED
Landing/Taxi Lights	INSPECT lens/bulbs
Stall Warning Vane	UNOBSTRUCTED
Fuel Tank	CHECK QUANTITY-SECURE CAP

### [ NOTE ]

A reduced fuel indicator is located in the filler neck. This indicator is used to indicate useable fuel capacity of 25 U.S. gallons (94.7 liters) (20.8 IMP. Gal.)

### [ NOTE ]

The optional visual fuel quantity gauge is to be used for partial refueling purposes only; DO NOT use for preflight check.

Tiedown	REMOVE
Tank Vent	UNOBSTRUCTED
Wheel Chock	REMOVE
Left Main Gear, Shock Discs, Tire, Doors & Linkage	INSPECT
Fuel Tank Sump Drain	DRAIN Until Clear
Pitot System Drain Valve	PUSH UP
	(Hold for 3-5 seconds)
Gascolator Drain Valve	CLOSED (Check for drips)

<b>6. Left Cowl Area -</b>	
Windshield	CLEAN
Cabin Air Inlet	Unobstructed
Left Side Engine Cowl Fasteners	SECURED
Left Cowl Flap	INSPECT

<b>7. Propeller/Spinner &amp; Front Cowl -</b>	
Blades	INSPECT for nicks, cracks, oil leaks, rotational movement.
	INSPECT de-ice boots(if installed).
Spinner	INSPECT for security, cracks
Cooling Air and Induction Intake	UNOBSTRUCTED
Nose Gear, Shock Discs, Tire, Doors & Linkage	INSPECT
Wheel chock	REMOVE

<b>8. Right Cowl Area -</b>	
Right Side Engine Cowl Fasteners	SECURED
Engine Oil Level	CHECK
	(FULL for extended flight.(Max. 8 qts.)
	(Minimum qty. 6 qts.)
Exhaust Pipe	SECURED
Right Cowl Flap	INSPECT
Windshield	CLEAN
Cabin Air Inlet	UNOBSTRUCTED

<b>9. Right Wing -</b>	
Fuel Tank Sump Drain	DRAIN until clear
Right Main Gear, Shock Discs, Tire, Doors & Linkage	INSPECT
Wheel Chock	REMOVE
Tank Vent	UNOBSTRUCTED
Tiedown	REMOVE
Landing/Taxi lights	INSPECT lens/bulbs
Fuel Tank	CHECK QUANTITY-SECURE CAP

**[ NOTE ]**

The reduced fuel indicator is located in the filler neck. This indicator is used to indicate usable fuel capacity of 25 U.S. gallons (94.7 liters) (20.8 IMP. gal.)

**[ NOTE ]**

The optional visual fuel quantity gauge is to be used for partial refueling purposes only; DO NOT use for preflight check.

Wing Tip, Lights & Lens	INSPECT
Aileron and attach points	INSPECT
Flap and attach points	INSPECT
Control Linkages	INSPECT
General Skin Condition	INSPECT-REMOVE ice, snow or frost

10. Baggage Door . . . . . Verify SECURED  
Verify inside latch mechanism is properly secured.  
(Check outside handle operation)

11. Return to Cockpit  
Fuel Selector . . . . . R: PULL gascolator ring  
(5 seconds)  
Fuel Selector . . . . . L: PULL gascolator ring  
(5 seconds)  
Master Switch . . . . . VERIFY OFF

**BEFORE STARTING CHECK**

Preflight Inspection	COMPLETED
Seats, Seat Belts/Shoulder Harness (1 occupant per restraint)	ADJUST & SECURE
Magneto/Starter Switch	OFF
Master Switch	OFF
Alternator Field Switch	OFF
Radio Master Switch	OFF
Fuel Boost Pump	OFF
Alternate Static Source	Push OFF
Rocker Switches	OFF
Directional Gyro (slave/free switch)	SLAVED (if installed)
Circuit Breakers	CHECK
Emergency Locator Transmitter	ARM
Throttle	CLOSED
Propeller	HIGH RPM
Mixture	IDLE CUTOFF
Cowl Flaps (Check operation of Optional electric cowl flaps)	VERIFY OPEN
Parking Brake	SET
Wing Flap Switch	CENTERED(Flaps UP)
Cabin Vent	AS DESIRED
Cabin Heat	PUSH OFF
Defrost	PUSH OFF
Fuel Selector	FULLEST TANK
Radios	SET FREQUENCIES (Non-digital radios)
Landing Gear Switch	DOWN
RED Emergency Gear Handle	DOWN & LATCHED
Internal Lights	OFF
Passengers	Emergency/General information briefing

Refer to SECTION IX for Optional Equipment Checks.

Obtain local information prior to engine start.

**ENGINE START**

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

When battery will not start engine, inspection should be conducted to determine reason. If determination is made that battery voltage is low, servicing of the battery is essential and charging for at least one hour should be done before engine is started. The battery or other electrical circuits may be damaged if aircraft is operated with a low battery.

**| NOTE |**

When starting engine using an approved external power source no special starting procedure is necessary. Use normal starting procedures below. (Auxiliary Power Cable Adapter is available from Mooney Aircraft Corporation). Battery **SHOULD NOT BE COMPLETELY DEPLETED** when engine is to be started using an external power source.

Before Starting Checklist	COMPLETED
Throttle	1/4 OPEN
Cowl Flaps	OPEN
Propeller	FULL FORWARD
Mixture	FULL FORWARD
Master Switch	ON
Alternator Field Switch	ON
Annunciator Lights	PRESS TO TEST
Fuel Boost Pump	ON
	to Establish Pressure, then OFF
Mixture	IDLE-CUTOFF
Propeller Area	CLEAR
Magneto/Starter Switch	TURN and PUSH to START
	release to both when engine starts.

**| NOTE |**

"START POWER" warning light should illuminate when magneto/starter switch is in "START" position and **MUST** extinguish when starter switch is released.

**| NOTE |**

Cranking should be limited to 30 seconds and several minutes allowed between cranking periods to permit the starter to cool.

Mixture	Move slowly and smoothly to RICH
Throttle	Set at 1000 to 1200 RPM
* Engine Oil Pressure	CHECK GREEN ARC - if MINIMUM OIL PRESSURE is not indicated within 30 seconds, STOP ENGINE and determine problem.
* Ammeter	CHECK (Turn Ldg. Lt. ON; observe negative movement of needle)
* Internal/External Lights	As Desired
* Engine Instruments	CHECKED
* Fuel Flow Indicator	TEST/RESET (if desired)

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Do not operate engine at run-up speed unless the oil temperature is at least 75° F. (needle moves off White dot). Operation of the engine above 1200 RPM before reaching minimum oil temperature may cause engine damage due to insufficient oil flow for lubrication.

### FLOODED ENGINE START

Fuel Boost Pump	OFF
Throttle	FULL FORWARD
Mixture	IDLE CUTOFF
Magneto/Starter Switch	TURN and PUSH to start release to both when engine starts.
Mixture	FULL FORWARD
Throttle	Retard to 1200 RPM

\* REFER to remaining ENGINE START procedures above.

### WARM ENGINE START

Fuel Boost Pump	OFF
Throttle	Slightly open
Mixture	Full Aft (IDLE-CUTOFF)
Magneto/Starter Switch	TURN and PUSH to start release to both when engine starts.
Mixture	Move slowly and smoothly to RICH
Throttle	1000 to 1200 RPM

\* REFER to remaining ENGINE START procedures above.

### BEFORE TAXI

Engine Start Checklist	COMPLETED
Radio Master Switch	ON
Elevator Trim Switch	ON
Annunciator Panel	PRESS TO TEST
Internal/External Lights	As desired
Directional Gyro	SET or SLAVE SWITCH - ON
Instruments	Normal Indications
Radios	CHECK (Set Frequencies)
Altimeter	SET
Fuel Selector	Switch tanks verify engine runs on other tank
Cowl Flaps	CHECK OPERATION (FULL OPEN or AS REQUIRED)
Equipment Checks	Refer to SECTION IX

### NOTE

During cold weather, ground operations may be conducted with cowl flaps partially or fully closed to keep engine temperatures in normal operating ranges prior to takeoff. However, if cowl flaps are fully closed, monitor engine temperatures to avoid exceeding maximum allowable limits.

### TAXI

Before Taxi Checklist	COMPLETED
Parking Brake	Release
Brakes	Check during Taxi
Directional Gyro	Proper indication during turns
Turn Coordinator	Proper indication during turns
Artificial Horizon	Erect during turns
Throttle	Minimum power
Cowl Flaps	OPEN or As Desired
Propeller	FULL FWD

SECTION IV  
NORMAL PROCEDURES

MOONEY  
M20J

~~~~~  
~ CAUTION ~  
~~~~~

To prevent battery depletion in prolonged taxi or holding position before takeoff, increase RPM until "LOW VOLTAGE" light extinguishes.

**BEFORE TAKEOFF**

Taxi Checklist	COMPLETED
Parking Brake	SET
Fuel Selector	FULLEST TANK
Propeller	HIGH RPM
Mixture	Full Forward
Cowl Flaps	FULL OPEN or AS REQUIRED
Throttle	1900-2000 RPM
Magnetos	CHECK, Both to L, Both to R, Both
(Maximum 175 RPM drop each magneto, 50 RPM Difference)	

**| NOTE |**

An absence of RPM drop may be an indication of faulty magneto grounding or improper timing. If there is doubt concerning ignition system operation, RPM checks at a leaner mixture setting or higher engine speed will usually confirm whether a deficiency exists.

Propeller	CYCLE/return to high RPM (3 times)
Ammeter	CHECK positive charge indication
Annunciator Panel	CHECK ALT VOLTS & HI/LO VAC lights-OFF
Throttle	Retard to IDLE RPM
Trim	Takeoff setting
Wing Flaps	Check operation-SET TAKEOFF POSITION (15 degrees)
Flight Controls	Check free and correct movement
Cabin Door	CHECK SECURED
Seat Belts and Shoulder Harness	SECURED
Avionics and Auto Pilot	CHECK (Refer to SECTION IX)
Internal/External Light	As Desired
Rotating Beacon/Strobe Lights	ON
Pilots Window	CLOSED
Emergency Gear Extension (Red) Handle	DOWN and LATCHED
Annunciator Lights	CHECK PROPER INDICATION
Parking Brake	Release

**TAKEOFF**

Before Takeoff Checklist	COMPLETED
--------------------------	-----------

**| NOTE |**

Move the engine controls slowly and smoothly. In particular, avoid rapid opening and closing of the throttle as the engine is equipped with a counterweighted crank shaft and there is a possibility of detuning the counter-weights with subsequent engine damage.

Proper engine operation should be checked early in the takeoff roll. Any significant indication of rough or sluggish engine response is reason to discontinue the takeoff. When takeoff must be made over a gravel surface, it is important that the throttle be applied slowly. This will allow the aircraft to start rolling before a high RPM is developed, and gravel or loose material will be blown back from the propeller area instead of being pulled into it.

**TAKEOFF (NORMAL)**

Electric Fuel Boost Pump	ON at start of takeoff roll
Power	FULL THROTTLE (2700 RPM)
Mixture	FULL RICH (Lean for smooth operation at HIGH ALTITUDE)
Engine Instruments/Annunciator Panel	CHECK for proper indications
Liftoff/Climb Speed	As specified in SECTION V (Normal Takeoff Distance)
Landing Gear	RETRACT in Climb after clearing obstacles.
Wing Flaps	UP
Electric Fuel Boost Pump	OFF - CHECK Pressure

**CLIMB**

**| NOTE |**

If applicable, use noise abatement procedures as required.

**| NOTE |**

See SECTION V for rate of climb graph.

**CLIMB (CRUISE)**

Throttle	26" Hg Manifold Pressure
Propeller	2600 RPM
Mixture	RICH (Lean for Smooth Operation at high elevation)
Cowl Flaps	FULL OPEN or As Required
Airspeed	90 to 100 KIAS

Maintain these power settings and attitude to at least 3000 feet AGL or cruise altitude.

Manifold pressure will drop with increasing altitude at any throttle setting. Power can be restored by gradually opening the throttle.

**CLIMB (BEST RATE)(Vy)**

Power	FULL THROTTLE and 2700 RPM
Mixture	FULL RICH (Lean at higher altitudes for smooth operation)
Cowl Flaps	FULL OPEN
Airspeed	86 KIAS at sea level decreasing to 80 KIAS at 10,000 ft.

**CLIMB (BEST ANGLE)(Vx)**

Power	FULL THROTTLE and 2700 RPM
Mixture	FULL RICH (Lean at higher altitude for smooth operation)
Cowl Flaps	FULL OPEN
Airspeed	86 KIAS at sea level increasing approximately 1.0 KIAS for each 5000 feet altitude

**CRUISE**

Upon reaching cruise altitude, accelerate to cruise airspeed; retrim aircraft as necessary for level flight. Set manifold pressure and RPM for desired power setting per Cruise Power Chart in SECTION V and close cowl flaps.

**| NOTE |**

**Use recommended engine break-in procedures as published by engine manufacturer.**

**| NOTE |**

**Electric cowl flaps may be opened slightly in order to keep engine temperatures within green arc.**

When electric cowl flaps are OPEN during cruise, the following effects on cruise speed will result:

Cowl Flap's position indicator - 1/4 open (indicator positioned at 1st Index)	
Approximate loss in TAS	2 KTAS
Cowl Flap's position indicator - 1/2 open (indicator positioned at 2nd Index)	
Approximate loss in TAS	4 KTAS

When cruising at 75 % power or less, lean the mixture after cruise power is established in accordance with one of the following methods:

**A. Leaning with exhaust gas temperature gauge (EGT) installed.**

1. Lean the mixture until exhaust gas temperature peaks on the EGT indicator.

**ECONOMY CRUISE** - Enrich mixture (push mixture control forward) until EGT indicator drops 14° C (25° F) below peak.

**BEST POWER MIXTURE** - Enrich mixture until EGT indicator drops 55° C (100° F) below peak.

**| NOTE |**

**Compared to Economy Cruise, Best Power mixture will result in an increase in fuel flow and a reduction in range.**

2. Changes in altitude and power settings require peak EGT to be rechecked and mixture re-set.

**B. Leaning without exhaust gas temperature gauge (EGT) installed:**

1. Slowly move mixture control lever aft from "FULL RICH" position toward "LEAN" position.
2. Continue leaning until slight loss of power is noted (loss of power may or may not be accompanied by roughness).
3. Enrich until engine runs smoothly and power is regained.

When increasing power always return mixture to full rich, then increase RPM before increasing manifold pressure; when decreasing power decrease manifold pressure before reducing RPM. Always stay within the established operating limits, and always operate the controls slowly and smoothly.



### FUEL TANK SELECTION

Boost Pump Switch	ON
Fuel Selector	OPPOSITE TANK
Boost Pump Switch	OFF

(Observe fuel pressure gauge for proper pressure reading)

### DESCENT

Mixture	LEAN to 14° C (25° F) rich of peak EGT as required for smooth engine operation
Power	AS REQUIRED to keep CHT in Green Arc (300° F (149° C) minimum)

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Avoid continuous operation between 1500 and 1950 RPM with power settings below 15" Hg. manifold pressure.

#### [ NOTE ]

Exercise caution with power settings below 15" Hg manifold pressure at airspeeds between 70 - 115 KIAS to preclude continuous operation in the 1500 - 1950 RPM restricted range.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Avoid long high speed descents at low manifold pressure as the engine can cool excessively.

Cowl Flaps	CLOSED
------------	--------

#### [ NOTE ]

Plan descents to arrive at pattern altitude on downwind leg for maximum fuel efficiency and minimum aircraft noise.

### APPROACH FOR LANDING

Internal/External Lights	As desired
Seat Belts/Shoulder Harness	FASTENED
Landing Gear	EXTEND below 132 KIAS (Gear down light on - Check visual indicator on floor)
Mixture	FULL RICH
Propeller	HIGH RPM
Fuel Boost Pump	ON
Fuel Selector	FULLEST TANK
Wing Flaps	TAKE OFF POSITION FULL DOWN below 112 KIAS

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

To minimize control wheel forces when entering landing configuration, timely nose-up trimming is recommended to counteract nose-down pitching moment caused by reduction of power and/or flap extension.

Trim	As desired
Parking Brake	VERIFY OFF

MOONEY  
M20J

**The parking brake should be rechecked to preclude partially applied brakes during touchdown.**

~ ~ ~ ~ ~  
~ CAUTION~

Power	FULL THROTTLE/2700 RPM
Mixture	FULL RICH
Airspeed	85 KIAS
Wing Flaps	TAKEOFF position after climb established
Trim	NOSE DOWN (to reduce control force)
Airspeed	Accelerate to 78 KIAS
Landing Gear	RETRACT
Wing Flaps	RETRACT
Cowl Flaps	OPEN
Airspeed	Accelerate to 88 KIAS

Approach for landing checklist	COMPLETED
Approach Airspeed	As specified in SECTION V (Normal Landing Distances)
Touchdown	Main wheels first (aligned with runway)
Landing Roll	Lower nose wheel gently
Brakes	As required
Fuel Boost Pump	OFF after landing

**Landing information for reduced flap settings are not available.  
See SECTION V for landing Distance tables.**

**Crosswind landings may be accomplished by using above procedures except maintain approach speed approximately 10 KIAS above normal. Use 15° flaps for crosswinds below 10 Kts and flaps UP for crosswinds over 10 Kts. Allow aircraft to crab until short final, then set up sideslip (low wing into the wind). Accomplish touchdown in slight wing low sideslip and aircraft aligned with runway. During landing roll, position flight controls to counteract crosswind.**

**The landing gear may retract during landing roll if landing gear switch is inadvertently placed in the UP position.**

**TAXI AFTER LANDING**

Throttle . . . . .	1000 to 1200 RPM
Wing Flaps . . . . .	RETRACT
Cowl Flaps . . . . .	FULL OPEN
Trim . . . . .	RESET to Takeoff
Radios . . . . .	As required
Lighting . . . . .	As required

**SHUTDOWN**

Parking Brake . . . . .	SET
Throttle . . . . .	1000 to 1200 RPM
	(until cylinder head temperature starts to drop)
Radio Master . . . . .	OFF
Internal/External Lights . . . . .	OFF
Magneto/Starter Switch . . . . .	Grounding Check
Mixture . . . . .	IDLE CUTOFF
Magneto/Starter Switch . . . . .	OFF when propeller stops
Alternator Field Switch . . . . .	OFF
Master Switch . . . . .	OFF
Oxygen System (if equipped) . . . . .	OFF

**SECURING AIRCRAFT**

Magneto/Starter . . . . .	OFF/Key removed
Master Switch . . . . .	VERIFY OFF
Radio Master . . . . .	VERIFY OFF
Electrical Switches . . . . .	VERIFY OFF
Parking Brake . . . . .	RELEASE and install wheel chocks
For extended parking . . . . .	Control wheel - SECURED
	with seat belts; cabin vents CLOSED,

TIE DOWN aircraft at wing and tail points.

**BLANK**

**TABLE OF CONTENTS**

<b>TITLE</b>	<b>PAGE</b>
INTRODUCTION	5-3
VARIABLES	5-3
OPERATIONAL PROCEDURES FOR MAXIMUM FUEL EFFICIENCY	5-3
PERFORMANCE CONSIDERATIONS	5-3
RANGE ASSUMPTIONS	5-3
USE OF COWL FLAPS	5-4
MAIN LDG GEAR LOWER DOORS REMOVAL	5-4
OPERATIONAL CONSIDERATIONS	5-4

**— TABLES AND CHARTS —**

TEMPERATURE CONVERSION	5-5
CROSSWIND COMPONENT	5-6
AIRSPED CALIBRATION PRIMARY STATIC SYSTEM(GEAR UP)	5-7
AIRSPED CALIBRATION PRIMARY STATIC SYSTEM(GEAR DOWN)	5-8
AIRSPED CALIBRATION ALTERNATE STATIC SYSTEM	5-9
ALTIMETER CORRECTION PRIMARY STATIC SYSTEM (GEAR UP, FLAPS UP)	5-10
ALTIMETER CORRECTION PRIMARY STATIC SYSTEM (GEAR DN, FLAPS DN)	5-11
ALTIMETER CORRECTION ALTERNATE STATIC SYSTEM (1)	5-12
ALTIMETER CORRECTION ALTERNATE STATIC SYSTEM (2)	5-13
STALL SPEED VS ANGLE OF BANK	5-14
TAKEOFF DISTANCE - HARD SURFACE	5-15
TAKEOFF DISTANCE - GRASS SURFACE	5-16
RATE OF CLIMB - TAKEOFF (MAX)	5-17
RATE OF CLIMB - NORMAL (CRUISE)	5-18
BALKED LANDING CLIMB	5-19
TIME FUEL & DISTANCE TO CLIMB	5-20
CRUISE & RANGE DATA CONDITIONS	5-22
CRUISE POWER SCHEDULE	5-23
SPEED POWER VS ALTITUDE	5-25
RANGE 75% POWER	5-26
RANGE 65% POWER	5-27
RANGE 55% POWER	5-28
RANGE 45% POWER	5-29
ENDURANCE 75% POWER	5-30
ENDURANCE 65% POWER	5-31
ENDURANCE 55% POWER	5-32
ENDURANCE 45% POWER	5-33

**TABLE OF CONTENTS (con't.)**

TITLE . . . . .	PAGE
— TABLES AND CHARTS (con't.) —	
LANDING DISTANCE - HARD SURFACE . . . . .	5-34
LANDING DISTANCE - GRASS SURFACE . . . . .	5-35

## INTRODUCTION

The purpose of this section is to present the owner or operator with information needed to facilitate planning of flight with reasonable accuracy. The Performance Data and Charts presented are calculated based upon actual flight tests with airplane and engine in good condition and the engine power control system properly adjusted. The flight test data has been corrected to International Standard Atmosphere conditions and then expanded analytically to cover various airplane gross weights, operating altitudes and outside air temperatures.

## VARIABLES

It is not possible to make allowances in the charts for varying levels of pilot technique, proficiency or environmental conditions. Mechanical or aerodynamic changes are not authorized because they can affect performance or flight characteristics of the airplane. The effect of such things as soft runways, sloped runways, winds aloft or airplane configuration changes must be evaluated by the pilot. However, the performance data on the charts can be duplicated, by following the stated procedures, in a properly maintained, standard M20J.

Examples are given to show how each chart is used. The only charts with no example are those where such an example of use would be repetitive.

To obtain effect of altitude and OAT on aircraft performance:

1. Set altimeter to 29.92 in.Hg. and read "Pressure Altitude".
2. Using the OAT grid for the applicable chart, read corresponding effect of OAT on performance.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Be sure to return to local altimeter setting in calculating aircraft elevation above sea level.

## OPERATIONAL PROCEDURES FOR MAXIMUM FUEL EFFICIENCY

For maximum fuel efficiency in the M20J, proper mixture leaning during cruise flight must be accomplished. The IO-360-A3B6 (or IO-360-A3B6D) engine in the M20J has been designed to attain maximum fuel efficiency, at desired cruise power, at 14°C rich of peak EGT. EGT is usually a more accurate indication of engine operation and fuel burn than indicated fuel flow. Therefore it is recommended that the mixture be set using EGT as the primary reference instead of setting to a particular fuel flow.

The following procedure is recommended for setting cruise power and leaning to best economy at 75% power or less:

1. After leveling off, set the manifold pressure and RPM for the desired cruise power in accordance with the Cruise Power Schedule as shown in this SECTION. At this point, the mixture control is at full rich from the climb.
2. Next, slowly move the mixture control toward lean while observing the EGT indicator. If leaning the mixture causes the original manifold pressure setting to change, use the throttle to maintain that desired cruise manifold pressure and continue leaning until best economy setting is obtained.

## PERFORMANCE CONSIDERATIONS

### RANGE ASSUMPTIONS

Range data climb allowance is based on climbing at maximum continuous power to cruise altitude.

Range reserves of 45 minutes at cruise power have been allowed on Range Data. Other conditions used in the Ranges shown are listed on each chart.

**USE OF COWL FLAPS**

When in level cruise flight with outside air temperatures well above standard or when cruising at very high altitudes, it may be necessary to open cowl flaps to keep engine temperatures within normal operating range.

The electric cowl flaps are multi-position. Numerous open settings are available to keep cylinder head and oil temperatures within normal operating range under the most adverse conditions.

Using the electric cowl flap's position indicator as a reference, the following cowl flap's open positions are given to document their approximate effects on cruise speed:

Cowl flap's position indicator - 1/4 open, (Indicator positioned at first index);

(Approximate loss in TAS) . . . . . 2 Kts.

Cowl flap's position indicator - 1/2 open, (Indicator positioned at second index);

(Approximate loss in TAS) . . . . . 4 Kts.

An appropriate adjustment to the range data shown for the cowl flap's closed condition can be made based on the flight time planned with the cowl flap's partially open.

For example:

Using the above speed decrement for the cowl flap's 1/2 open position for a 5 hour flight will result in the following decrease in range:

5 hr. x 4 Kts. = 20 N.M. reduction in range

**MAIN LANDING GEAR LOWER DOORS REMOVAL**

If numerous takeoffs and landings are to be conducted on soft fields or in tall grass, or if ice and snow are likely to be present on runway and taxiway surfaces for extended periods, it may be advantageous to remove the lower doors (in the gear extended position) installed on each main landing gear. These doors can be damaged during operations in soft field conditions, or a heavy accumulation of packed snow or ice inside the doors could prevent proper landing gear operation.

If these small gear doors are removed, a decrease in cruise speed and range can be expected and should be considered in preflight planning. To be conservative, the following figures should be used:

- A. Decrease true airspeed at cruise by approximately 5 Kts.
- B. Decrease range by as much as 50 N.M.(82 Km) for 64.0 gallon (243 liters) fuel capacity.


**OPERATIONAL CONSIDERATIONS**


**| NOTE |**

Engine cooling has been satisfactorily demonstrated for an outside air temperature of 23°C (40°F) above standard. This is not an operating limitation. (See Powerplant Limitations in SECTION II.)



TEMPERATURE CONVERSION

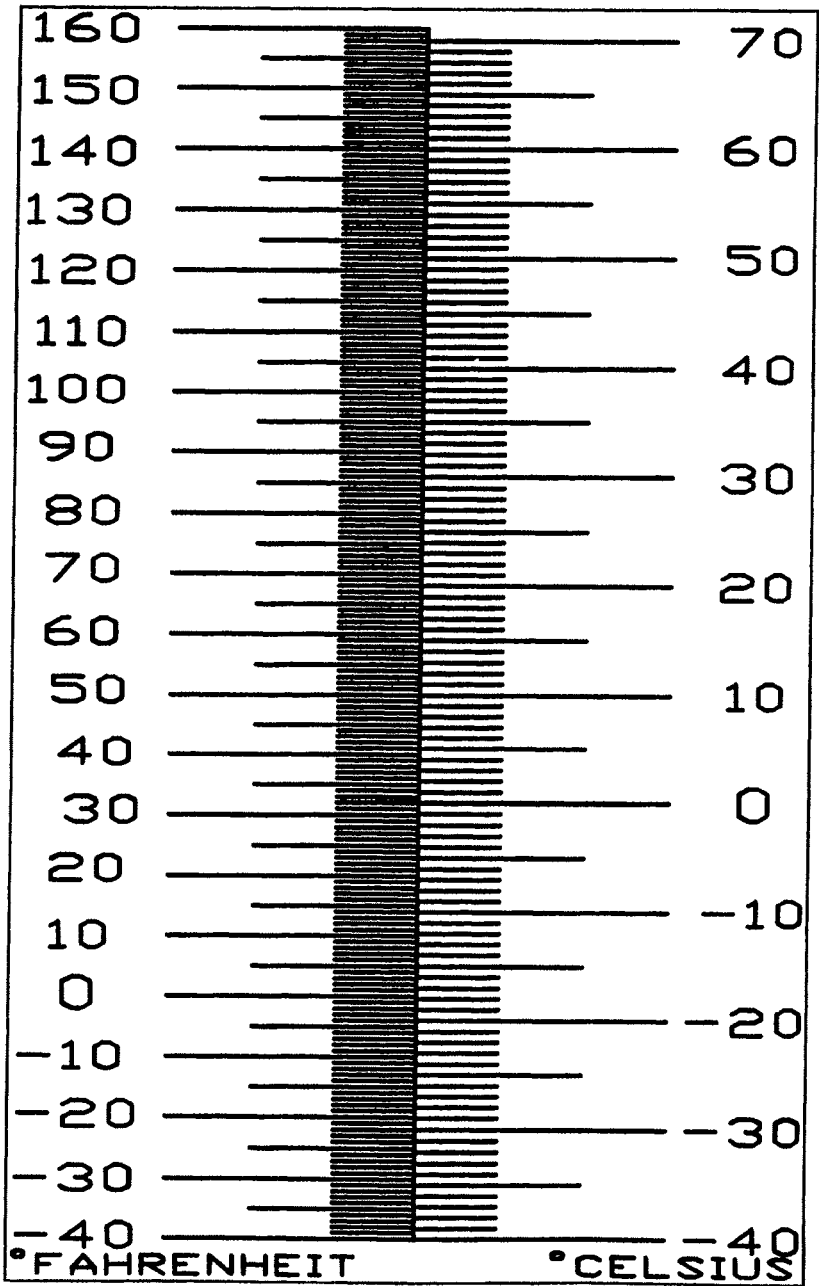

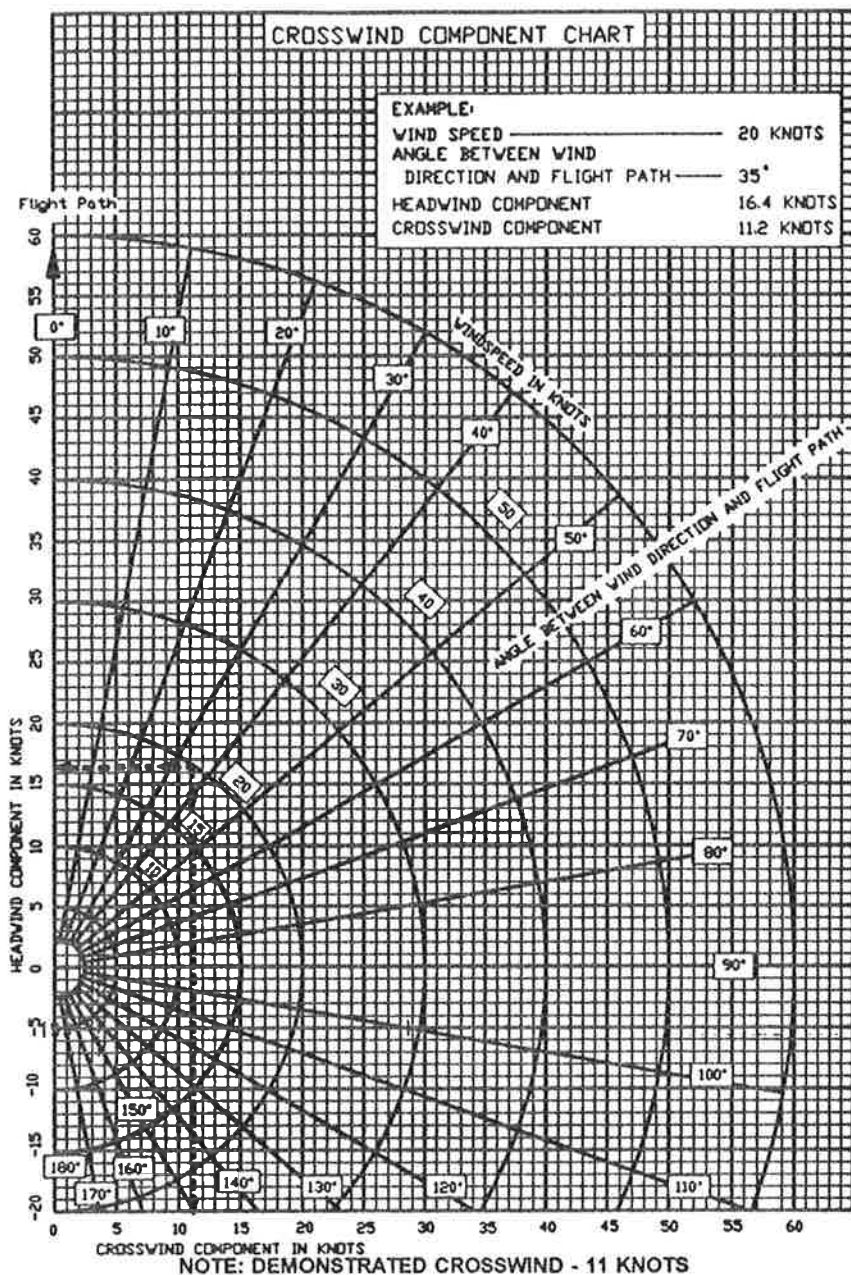

THIS IS NOT A LIMITATION


# AIRSPEED CALIBRATION PRIMARY STATIC SYSTEM (GEAR UP)

EXAMPLE:

GIVEN: --IAS 130 KNOTS  
FLAPS 0, GEAR UP

INDICATED AIRSPEED ASSUMES  
ZERO INSTRUMENT ERROR

FIND: --CAS = 128 KNOTS

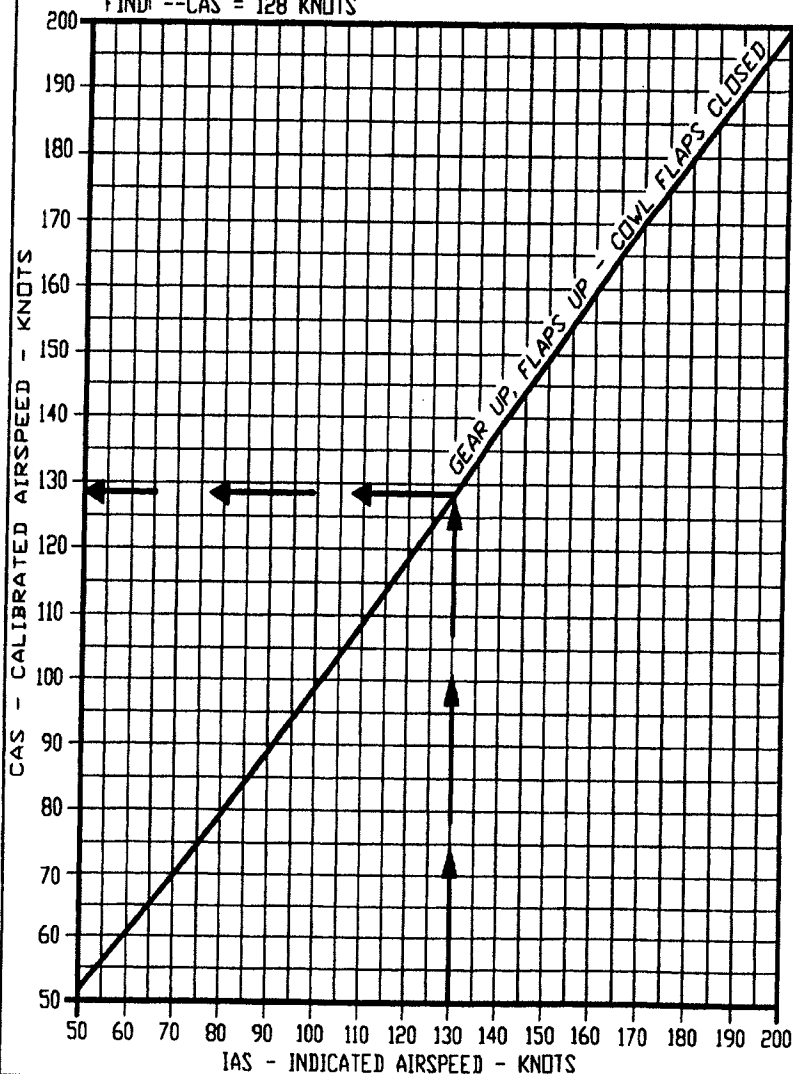


# AIRSPED CALIBRATION PRIMARY STATIC SYSTEM (GEAR DOWN)

TEXT: INDICATED AIRSPEED ASSUMES  
ZERO INSTRUMENT ERROR

EXAMPLE:

GIVEN: IAS 100 KNOTS  
GEAR DOWN, FLAPS 15°  
COWL FLAPS OPEN

FIND: CAS = 100 KNOTS

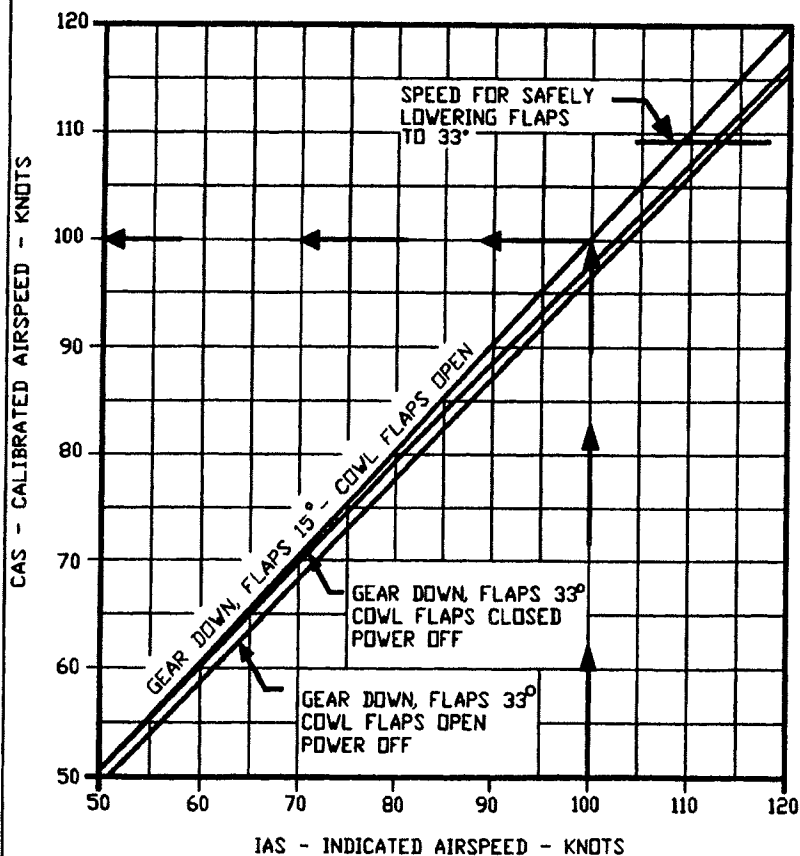


AIRSPEED CALIBRATION  
ALTERNATE STATIC SYSTEM


TEXT: INDICATED AIRSPEED ASSUMES  
ZERO INSTRUMENT ERROR  
VENT CLOSED, DEFROSTER ON  
COWL FLAPS CLOSED, POWER ON

**EXAMPLE:**

GIVEN: --IAS 130 KNOTS  
FLAPS 0, GEAR UP

FIND: --CAS = 126 KNOTS

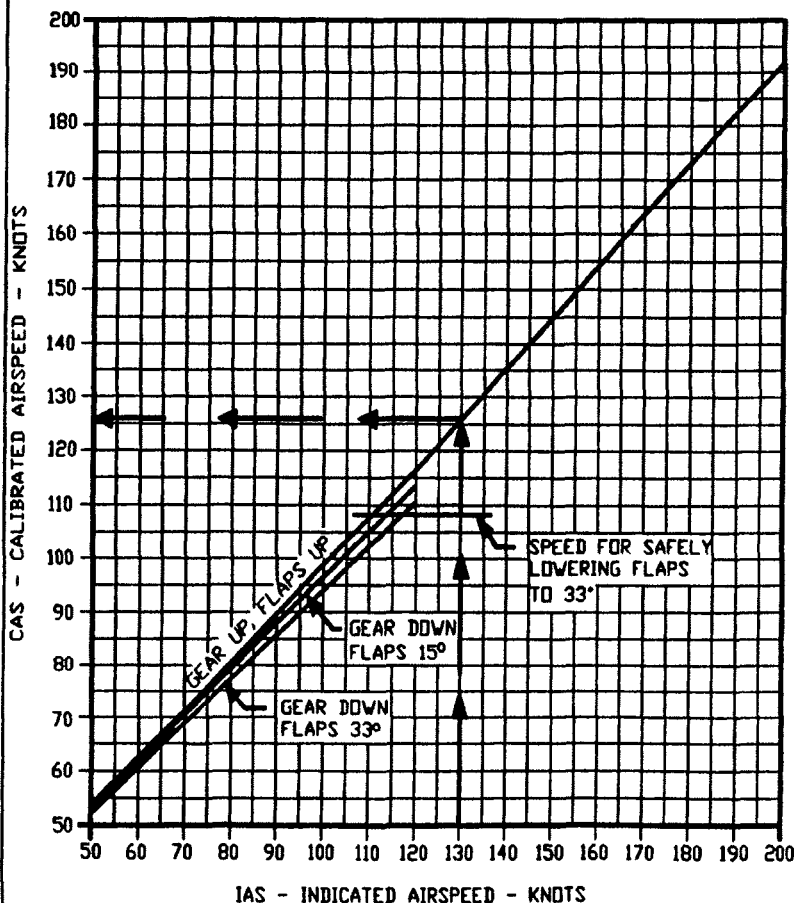

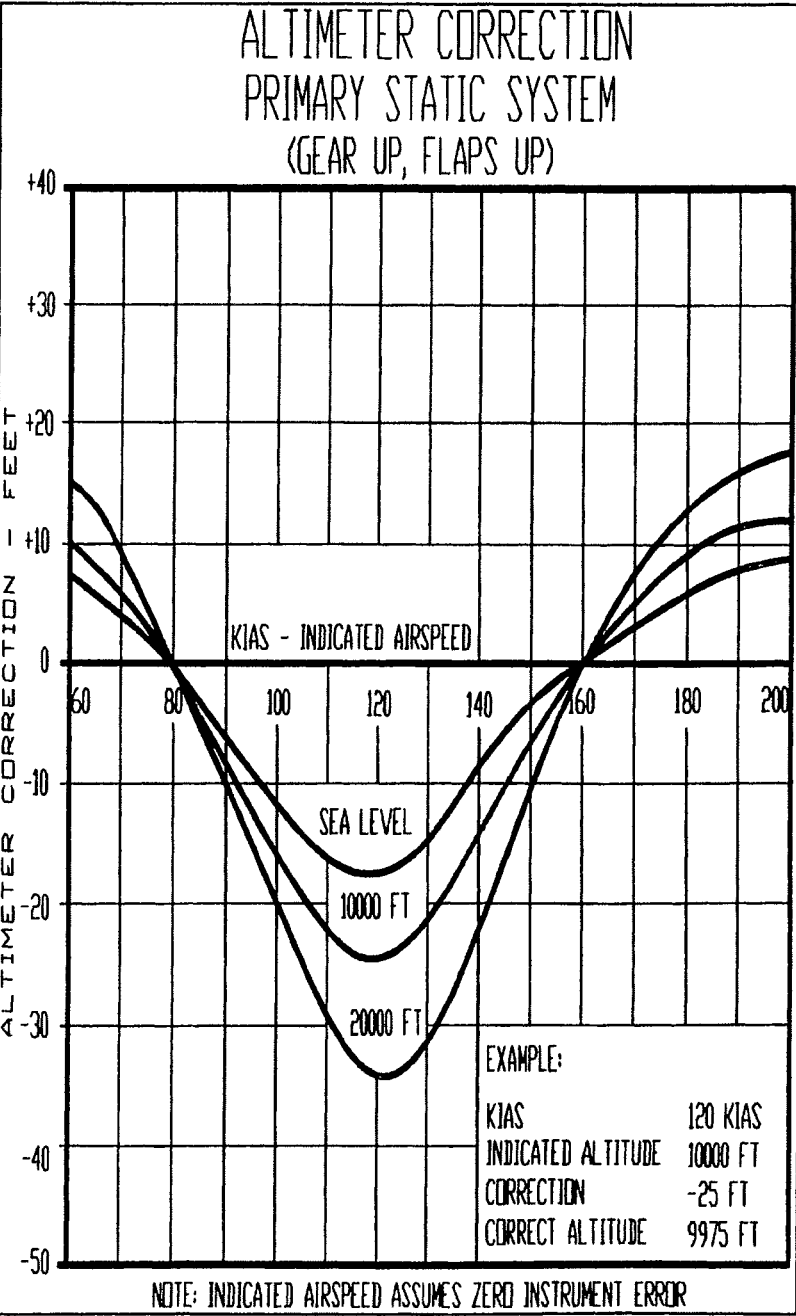

ALTIMETER CORRECTION-PRIMARY STATIC SYSTEM  
(GEAR/FLAPS DOWN)

# ALTIMETER CORRECTION


## PRIMARY STATIC SYSTEM

NOTE: INDICATED AIRSPEED ASSUMES ZERO INSTRUMENT ERROR

MAXIMUM FLAP EXTENSION SPEED IS 112 KIAS


GEAR DOWN, FLAPS 15°


INDICATED AIRSPEED - KTS

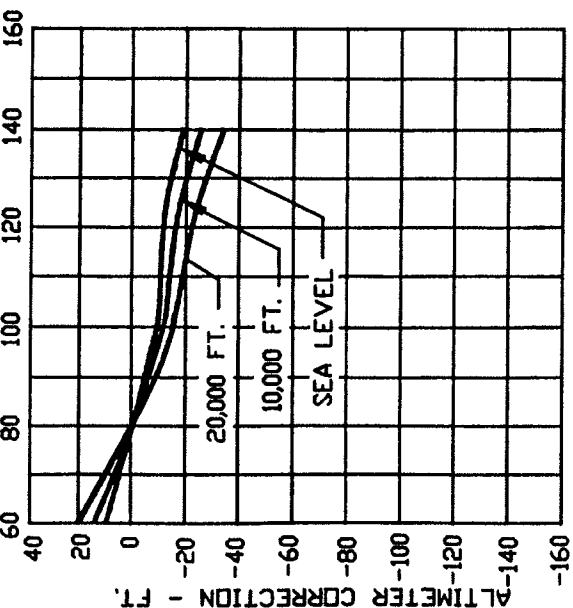


GEAR DOWN, FLAPS 33°

INDICATED AIRSPEED - KTS

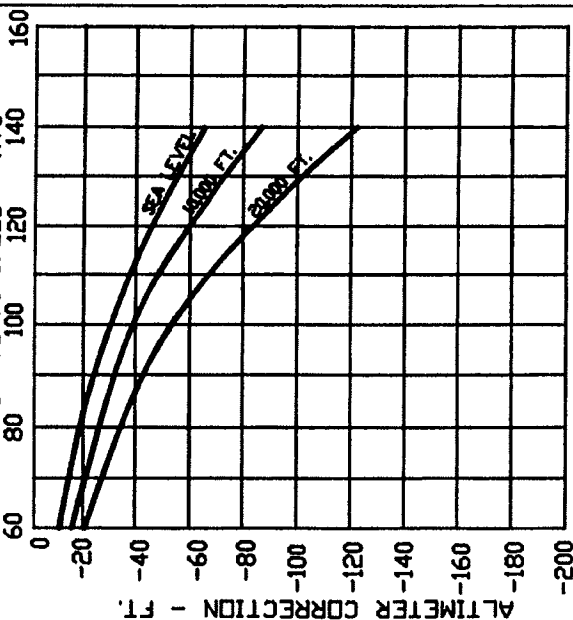

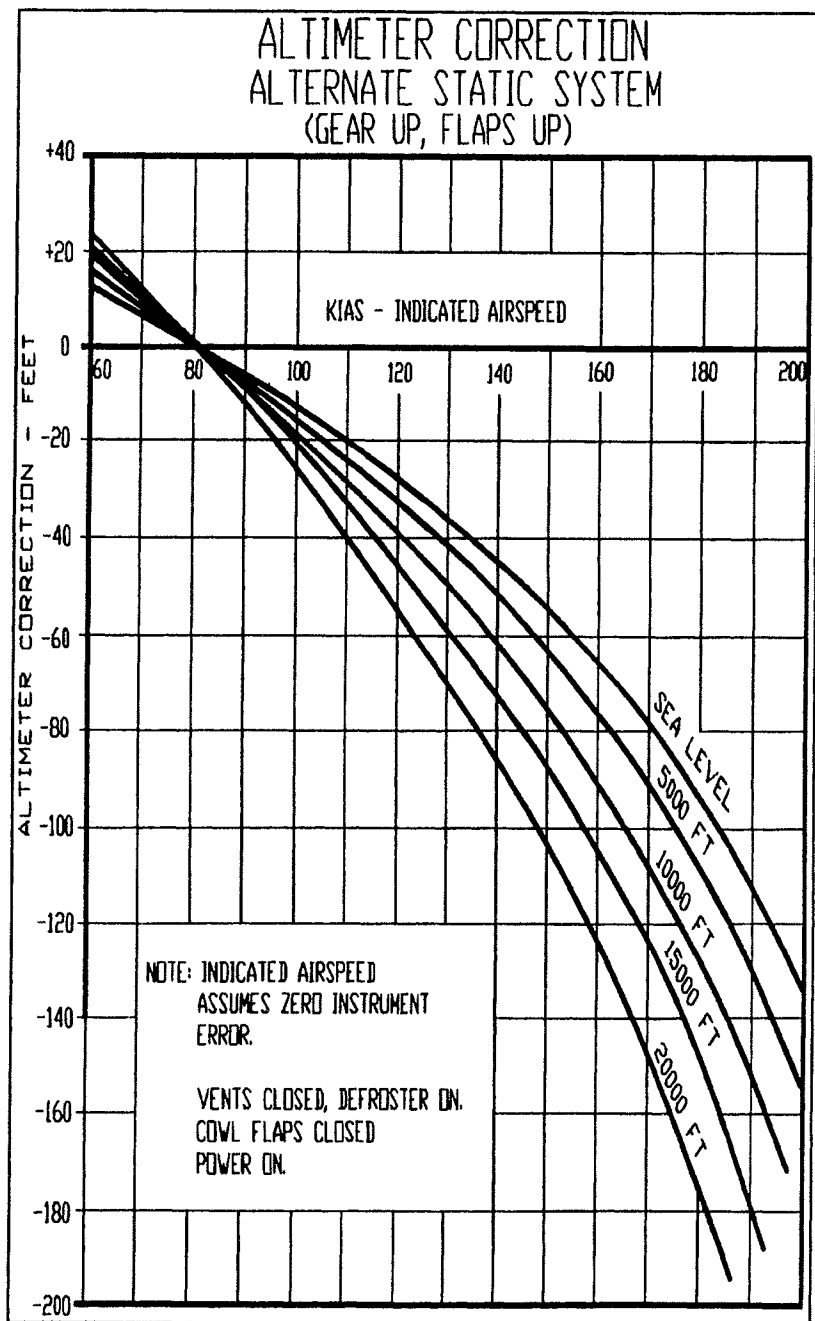



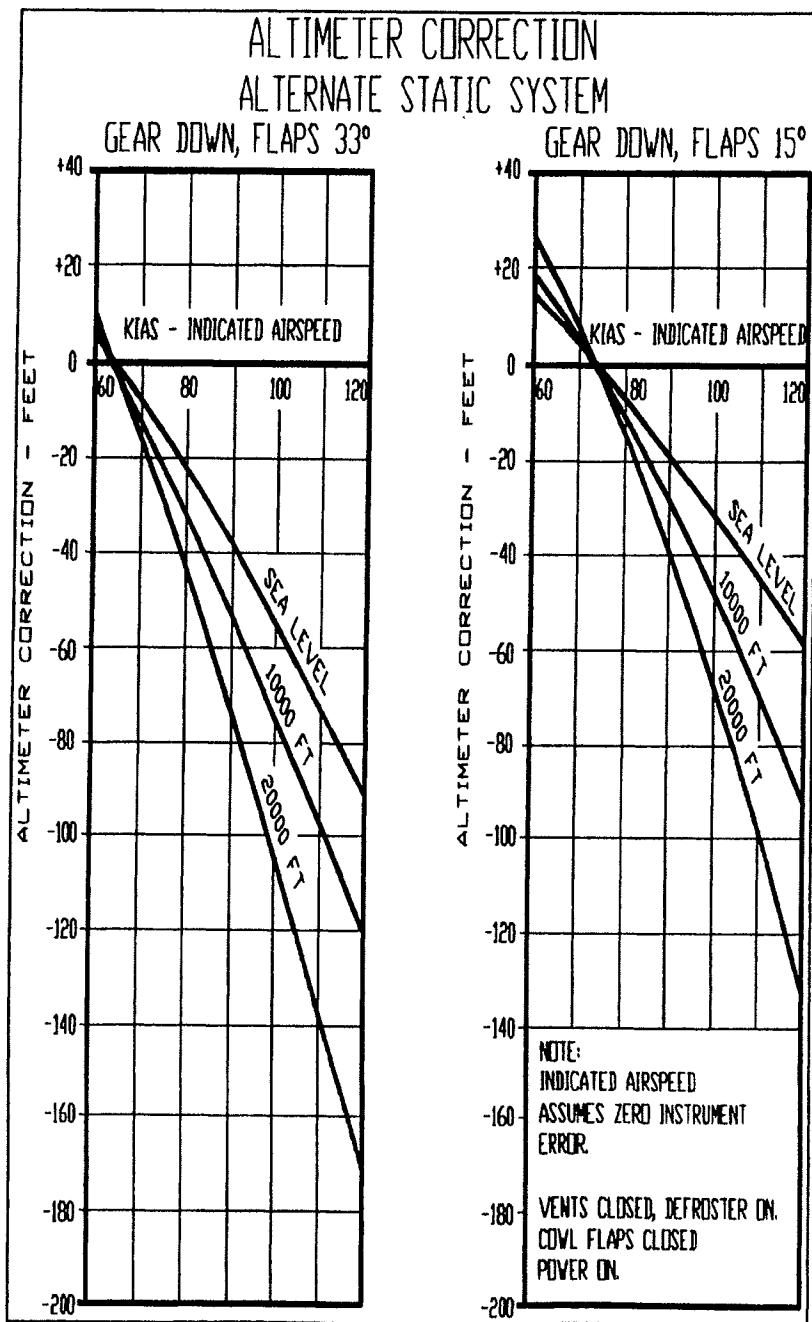

SECTION V  
PERFORMANCE

MOONEY  
M20J

STALL SPEED vs. ANGLE OF BANK

ASSOCIATED CONDITIONS:

FORWARD C.G.  
POWER IDLE

EXAMPLE:

WEIGHT 2500 LBS (1134 KGS)  
LANDING GEAR DOWN  
FLAPS 15°  
ANGLE OF BANK 45°

NOTE: UP TO 400 FEET ALTITUDE LOSS MAY  
OCCUR DURING STALLS AT MAXIMUM WEIGHT

STALL SPEED 64.0 KCAS (63 KIAS)

GROSS WEIGHT	GEAR AND FLAP POSITION	ANGLE OF BANK							
		0°		30°		45°		60°	
		KCAS	KIAS	KCAS	KIAS	KCAS	KIAS	KCAS	KIAS
2900 LBS (1315 KGS)	GEAR UP FLAPS 0°	63	62	68	68	75	75	89	91
	GEAR DOWN FLAPS 15°	62	61	66	65	73	72	87	88
	GEAR DOWN FLAPS 33°	56	58	61	63	67	69	80	83
2740 LBS (1243 KGS)	GEAR UP, FLAPS 0°	59	57	64	63	70	70	84	85
	GEAR DOWN, FLAPS 15°	57	56	61	60	67	66	80	80
	GEAR DOWN FLAPS 33°	53	55	57	59	63	65	75	77
2500 LBS (1134 KGS)	GEAR UP, FLAPS 0°	57	55	61	59	67	67	80	81
	GEAR DOWN, FLAPS 15°	54	53	58	57	64	63	77	76
	GEAR DOWN FLAPS 33°	51	53	55	57	60	62	72	75
2300 LBS (1032 KGS)	GEAR UP, FLAPS 0°	54	52	58	56	65	64	77	77
	GEAR DOWN, FLAPS 15°	52	51	56	55	62	61	73	72
	GEAR DOWN FLAPS 33°	49	51	52	54	58	60	69	71

- NOTE 1) MAXIMUM DEMONSTRATED CROSSWIND VELOCITY IS 11 KNOTS  
 2) SET FULL POWER PRIOR TO BRAKE RELEASE.  
 3) TO OBTAIN THE SPEED AT 50 FT. INCREASE PITCH  
 ATTITUDE APPROX. 5° AFTER LIFTOFF.

TAKEOFF WEIGHT - LBS (KGS)	LIFT-OFF SPEED - KIAS	SPEED AT 50 FT - KIAS
2900 (1315)	59	76
2600 (1180)	58	76
2300 (1043)	55	71

# ASSOCIATED CONDITIONS

POWER FULL THROTTLE,  
2700 RPM  
80% HUMIDITY

LANDING GEAR EXTENDED  
UNTIL OBSTACLE CLEARED

WING FLAPS 15°

COIL FLAPS FULL OPEN


RUNWAY SURFACE PAVED,  
LEVEL & DRY

## EXAMPLE:

DAT 20°C  
 PRESSURE 2000 FT.  
 ALTITUDE 2600 LBS. (1180 KGS)  
 WEIGHT 6 KTS  
 HEADWIND COMPONENT


GROUND ROLL 1300 FT (424 M)

TOTAL TAKEOFF 2000 FT (610 m)  
 DISTANCE (50 FT. OBSTACLE)

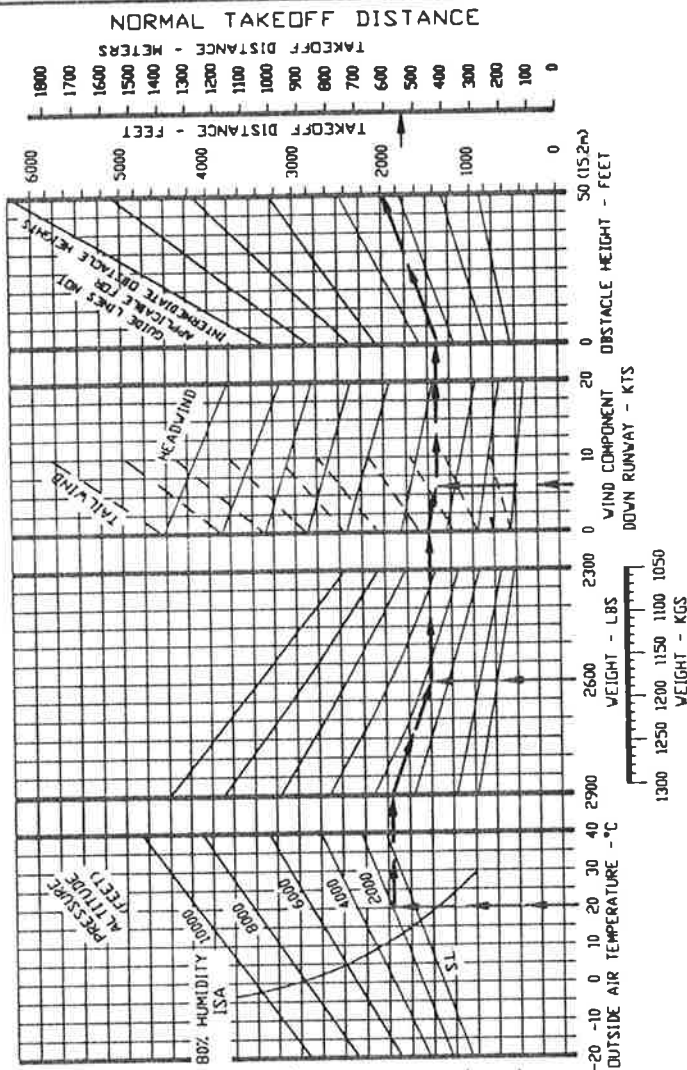

MOONEY  
M20J



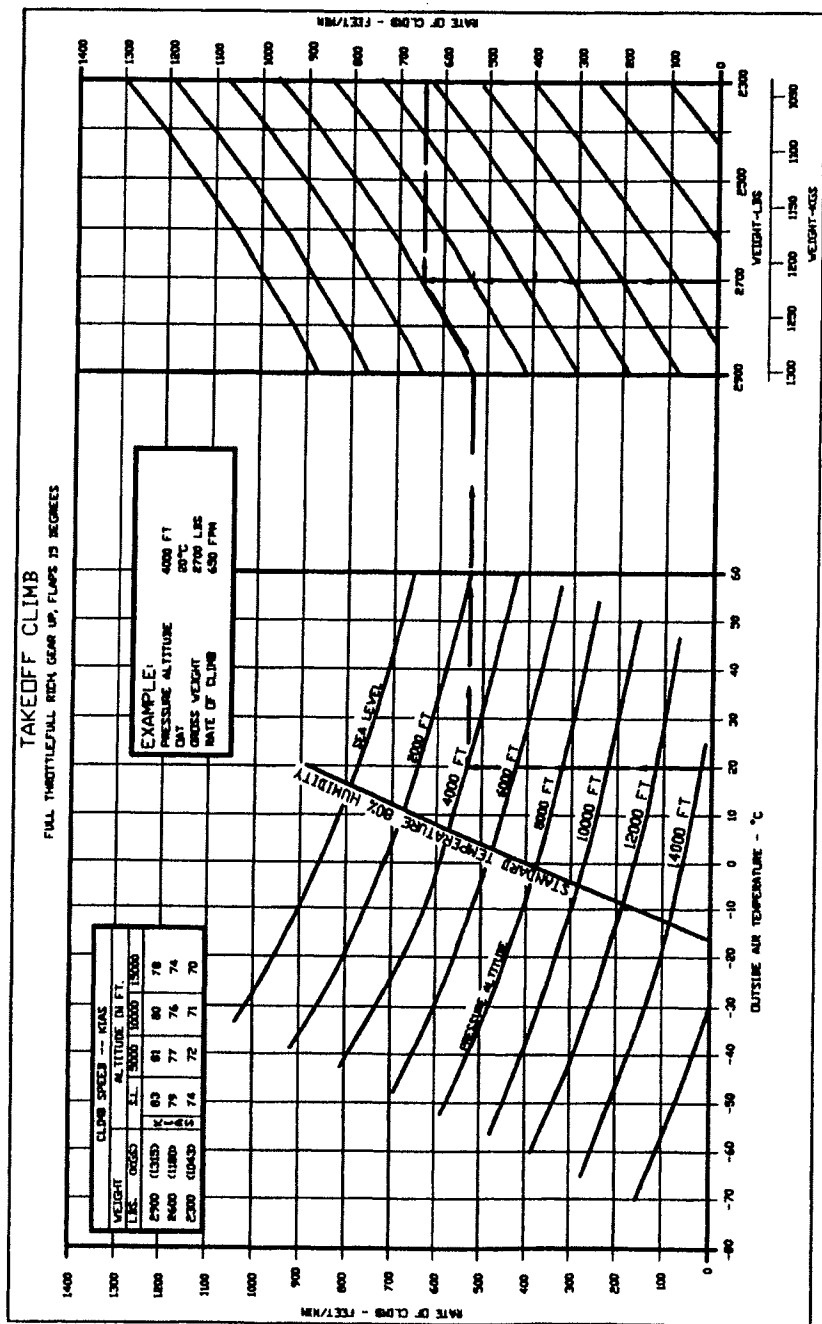


**MOONEY  
M20J**



# BALKED LANDING CLIMBS

FULL THROTTLE FULL GEAR NORMAL FLAPS 30 DEGREES

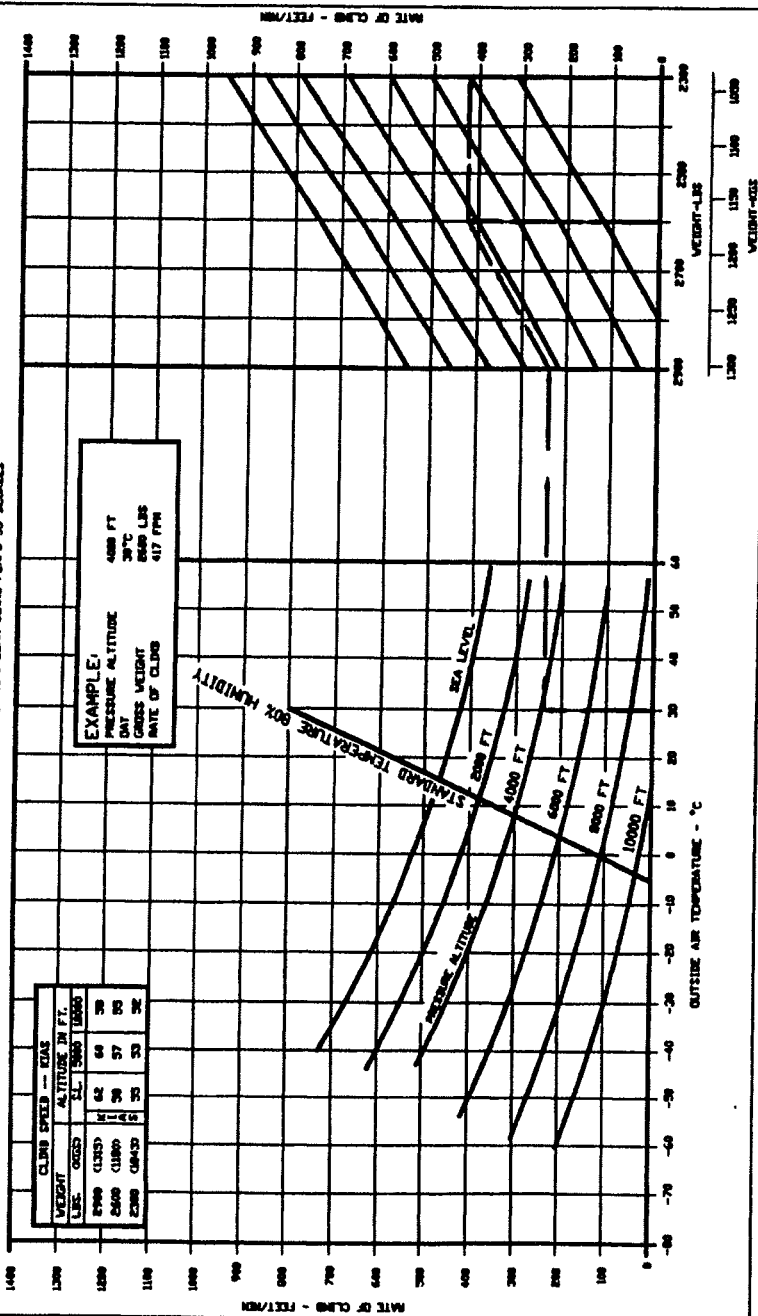

**MOONEY  
M20J**

**Associated Conditions for the Time, Fuel and Distance to Climb graph on the following page:**

[illegible]

**NOTE:**

1. Distances shown are based on zero wind.  
2. Add 9 lbs (4.1Kg) of fuel for Start, Taxi & T.O.

**GIVEN:**


Initial Pressure Altitude/OAT	2000 Ft./40° C
Final Pressure Altitude/OAT	8000 Ft./15° C
Takeoff Weight	2900 lbs./1315 Kg.

**FIND:**

Time to Climb	(14.9 - 2.5) = 12.4 Minutes
Distance to Climb	(21.5 - 4.0) = 17.5 Naut. Mi.
Fuel to Climb	(24.0 - 4.8) = 19.2 lbs.



TIME, FUEL & DISTANCE TO CLIMB

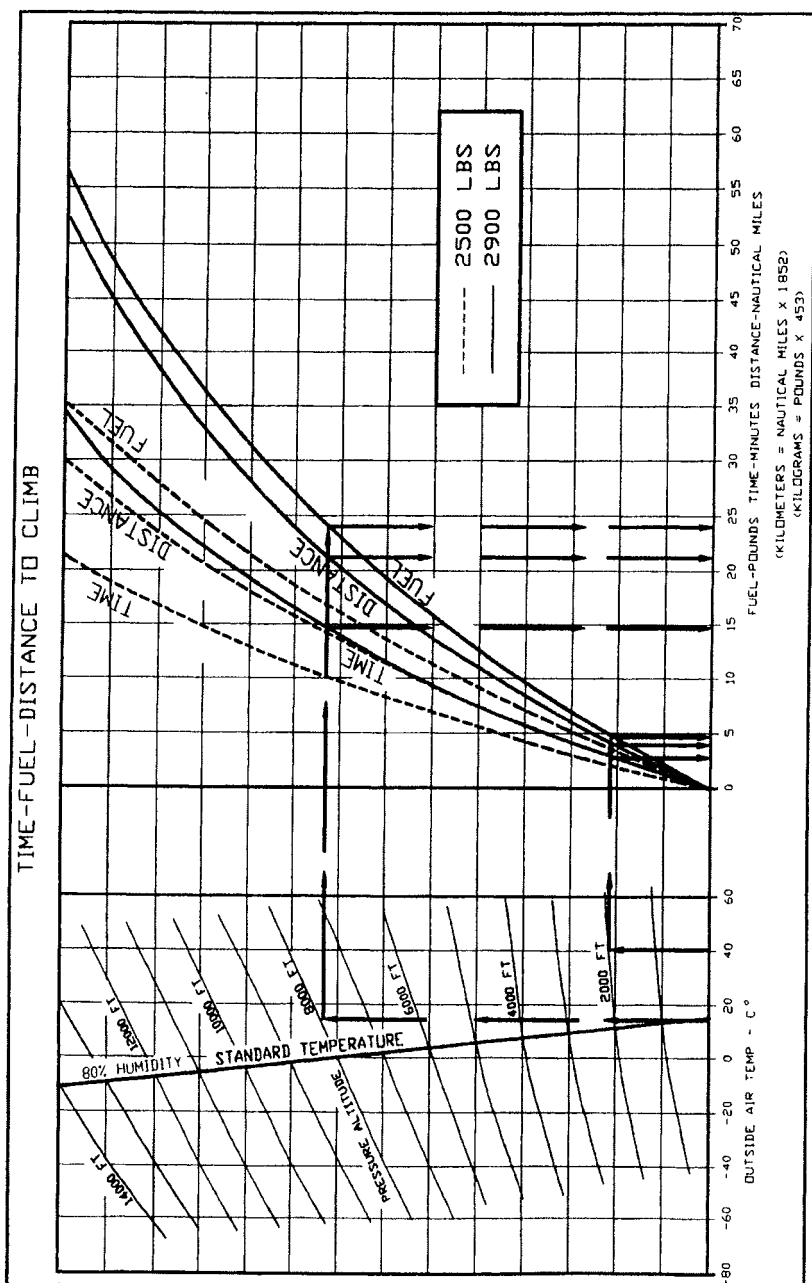

<b>CRUISE &amp; RANGE DATA CONDITIONS</b>
---

1. All Cruise & Range Data tables allow for: warmup, taxi, takeoff, climb at max. power at best rate of climb speed ( $V_y$ ) to cruise altitude, cruise to destination at the specified power and mixture setting, descent to pattern altitude and a 45 minute fuel reserve at the same altitude and power setting. The data is also based on 64 U.S. gals. of usable fuel, standard atmosphere and no wind.

2. To obtain the performance shown by the Cruise and Range Data Tables on non-standard days, increase or decrease the manifold pressure approximately .4 in. Hg. for each 10°C variation in outside air temperature. INCREASE manifold pressure for air temperatures ABOVE standard and DECREASE manifold pressure for air temperatures LOWER than standard.



## CRUISE POWER SCHEDULE

## EXAMPLE:

CRUISE ALT. 6000 FT.  
OAT 10°C(50°F)  
POWER 65%  
RPM 2600  
M.P. 22.0  
(7° C CORRECTION)

1. BEST POWER IS 55°C(100°F) RICH OF PEAK EGT.

2. ECONOMY CRUISE IS 14°C(25°F) RICH OF PEAK EGT.

				75% Power (150 BHP)			70% Power (140 BHP)			65% Power (130 BHP)										
Pressure	RPM	MANIFOLD PRESSURE — INCHES OF MERCURY																		
		Altitude		Feet			Std. Temp.													
		Fuel Flow	Best ECON.	Best POWER	2400	2500	2600	2700	2400	2500	2600	2700	2400	2500	2600	2700				
NOTE: ADD .4" M.P. FOR EACH 10°C (18°F) OAT ABOVE STANDARD DAY TEMPERATURE. SUBTRACT .4" M.P. FOR EACH 10°C (18°F) BELOW STD. DAY TEMPERATURE. IF OAT ABOVE STANDARD PRECLUDES OBTAINING THE DESIRED M.P. USE THE NEXT HIGHER RPM/M.P. WITH APPROPRIATE TEMPERATURE CORRECTION TO M.P.																				
S.L.	15°C				27.0	25.8	24.5	23.5					25.5	24.3	23.0	22.0	24.0	22.9	21.7	21.0
2000	11°C				26.8	25.6	24.4	23.3					25.1	24.1	23.0	22.0	23.6	22.6	21.6	20.6
4000	7°C						24.4	23.2					24.9	23.9	22.9	21.8	23.3	22.4	21.5	20.5
6000	3°C							24.1	23.1				24.4	23.6	22.7	21.7	22.8	22.1	21.3	20.4
8000	-1°C								23.6						22.7	21.7			21.2	20.4
10000	-5°C															21.4			21.1	20.2
12000	-9°C																			
14000	-13°C																			

**CRUISE POWER SCHEDULE (2 of 2)**

## CRUISE POWER SCHEDULE


1. BEST POWER IS 55°C(100°F) RICH OF PEAK EGT.

1. BEST POWER IS 55°C(100°F) RICH OF PEAK EGT.

Pressure		RPM	60% Power (120 BHP)										55% Power (110 BHP)										45% Power (90 BHP)									
			2200	2300	2400	2500	2600	2700	2200	2300	2400	2500	2600	2700	2000	2100	2200	2300	2400	2500	2600	2700										
			Fuel Flow		Best ECON.		Best POWER		Altitude		Feet		Std. Day		Std. Temp.		MANIFOLD PRESSURE - INCHES OF MERCURY															
S.L.		15°C		24.2	23.4	22.5	21.5	20.5	19.5	22.5	21.8	21.0	20.0	19.0	18.0	21.0	20.0	19.0	18.3	17.5	16.9	16.3	15.4									
2000		11°C		24.0	23.0	22.0	21.1	20.2	19.3	22.2	21.3	20.4	19.6	18.8	18.0	20.5	19.6	18.7	18.0	17.2	16.6	16.0	15.3									
4000		7°C		23.7	22.7	21.7	20.9	20.1	19.2	22.0	21.1	20.2	19.5	18.7	17.9	20.4	19.5	18.6	17.9	17.1	16.5	15.8	15.3									
6000		3°C		23.6	22.5	21.3	20.6	19.9	19.1	22.0	20.9	19.8	19.2	18.6	17.8	20.4	19.4	18.3	17.6	16.8	16.3	15.7	15.2									
8000		-1°C				21.3	20.6	19.8	19.0	22.0	20.9	19.8	19.2	18.6	17.8	20.3	19.3	18.2	17.4	16.5	16.1	15.7	15.1									
10000		-5°C				21.0	20.4	19.8	18.8			19.5	18.9	18.3	17.6			18.2	17.4	16.5	16.1	15.6	15.0									
12000		-9°C						19.6	18.8			19.3	18.8	18.2	17.5			18.0	17.2	16.4	16.0	15.5	14.9									
14000		-13°C												17.9	17.3					16.2	15.8	15.4	14.7									

NOTE: Add .4" M.P. for each 10° C OAT above Std. Day Temperature. Subtract .4" M.P. for each 10° C OAT below Std.

f OAT above STD. precludes obtaining desired M.P., use next higher RPM/MP with appropriate temperature correction to M.P.

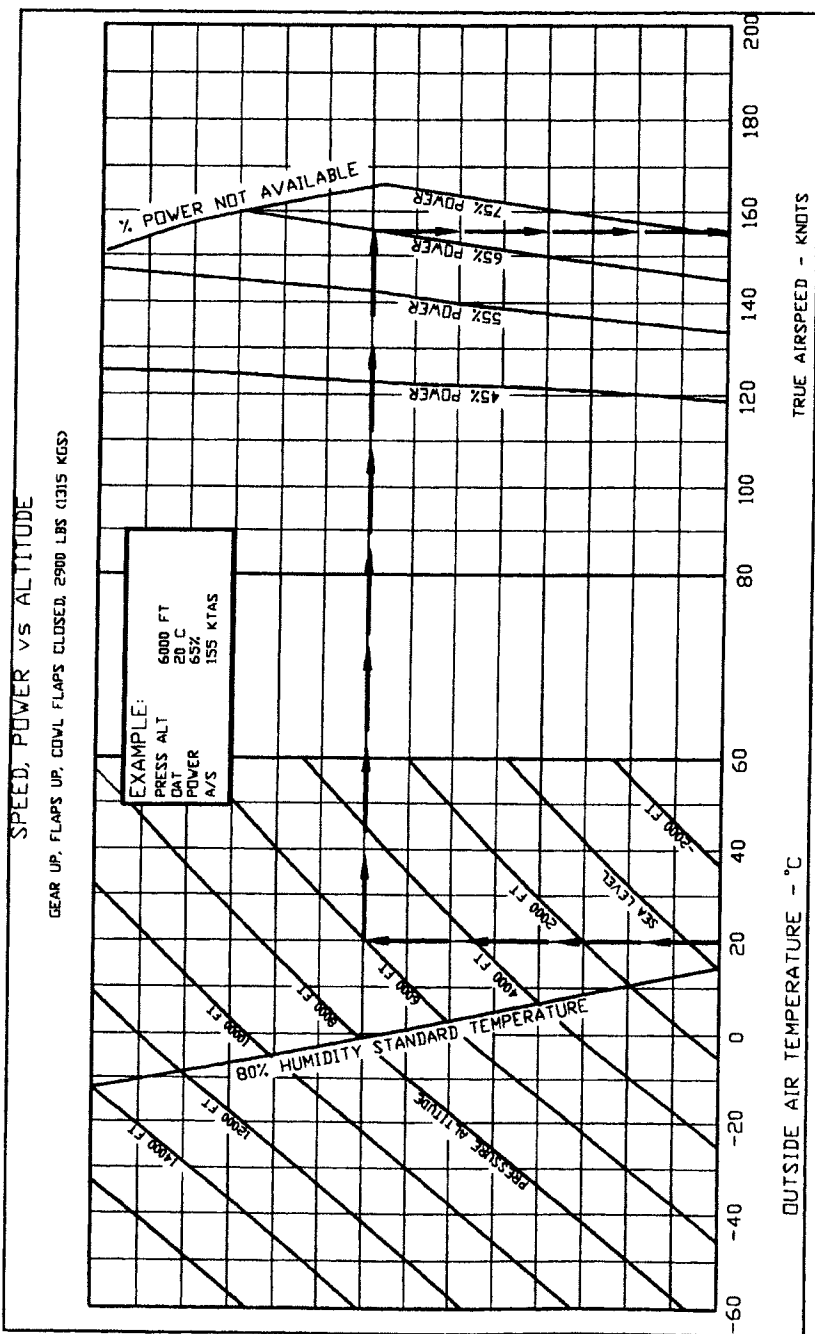


**MOONEY  
M20J**


RANGE 75% POWER

2900 LBS (1315.4 KGS)


Clean Configuration 64.0 Gallons (252 Liters) (55.4 Imp. Gal.) Usable Fuel  
Zero Vnd, Coal Flaps Closed, Range Includes Warmup, Test, Takeoff,  
Max Power Climb, Descent, Plus 45 Minutes Reserve at Cruise Power

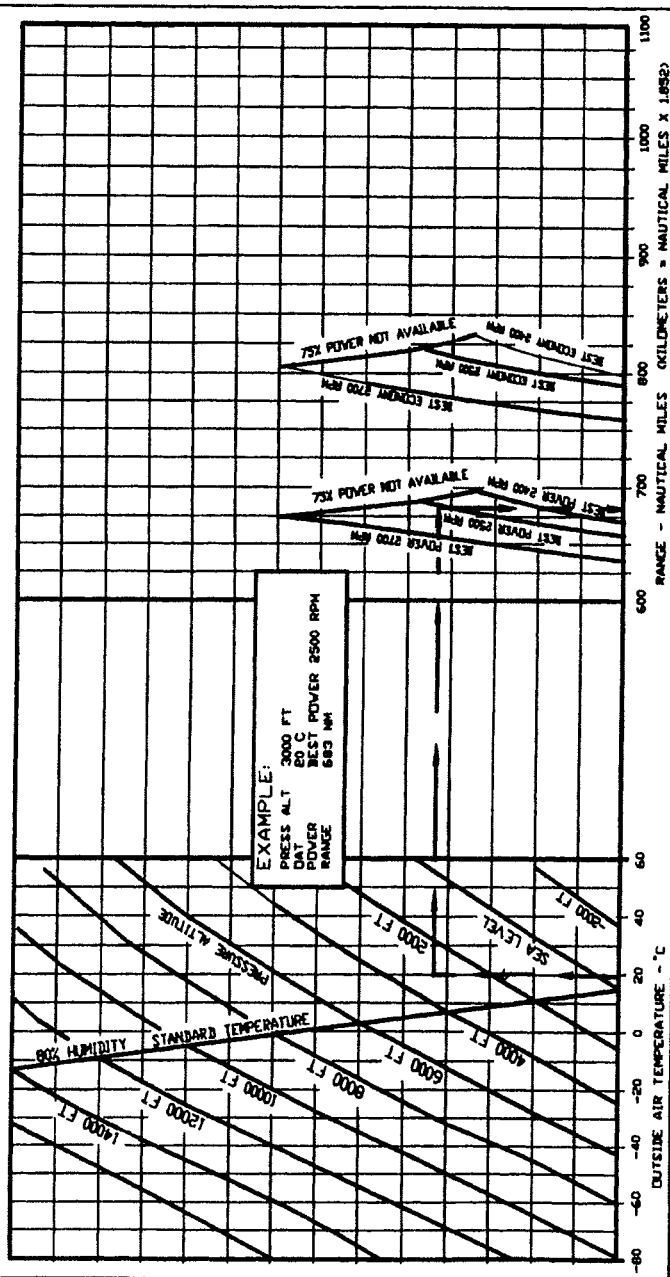

RANGE 65% POWER

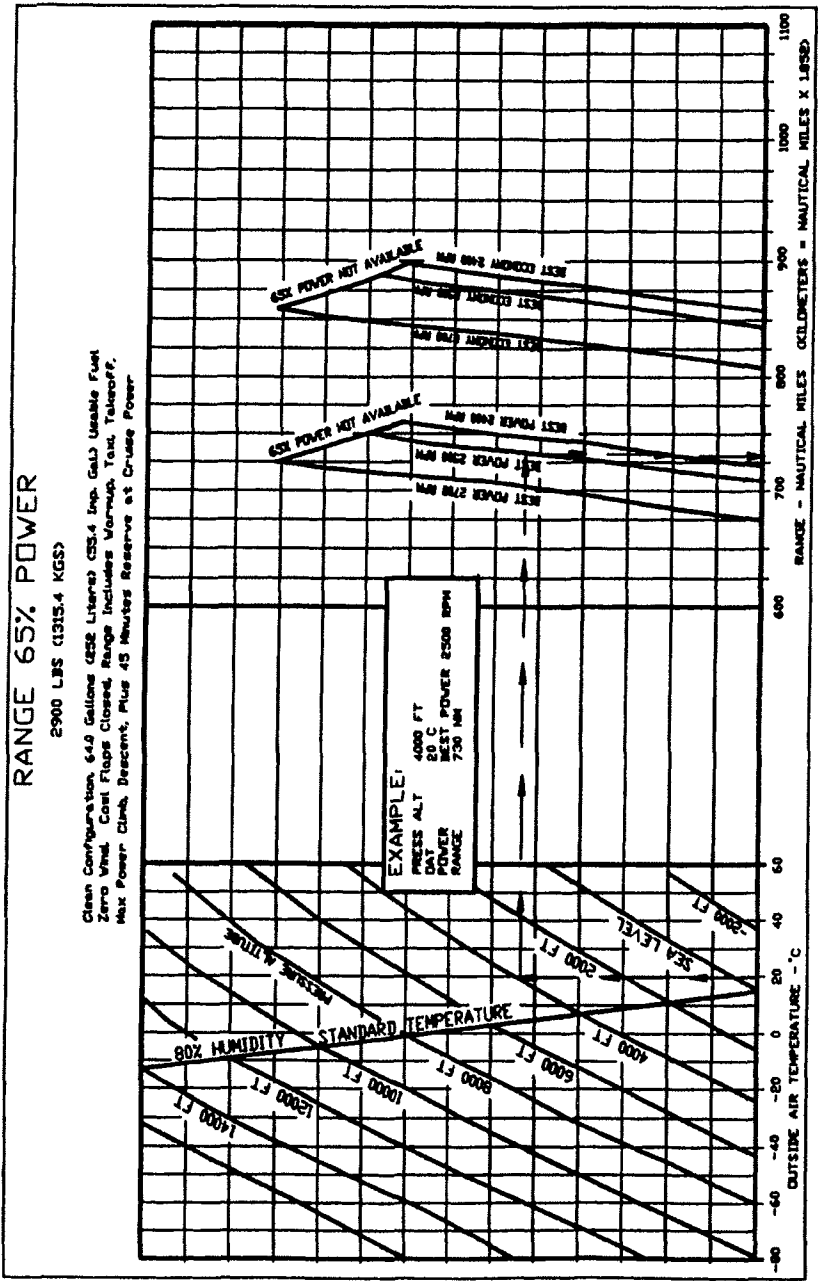

RANGE 55% POWER

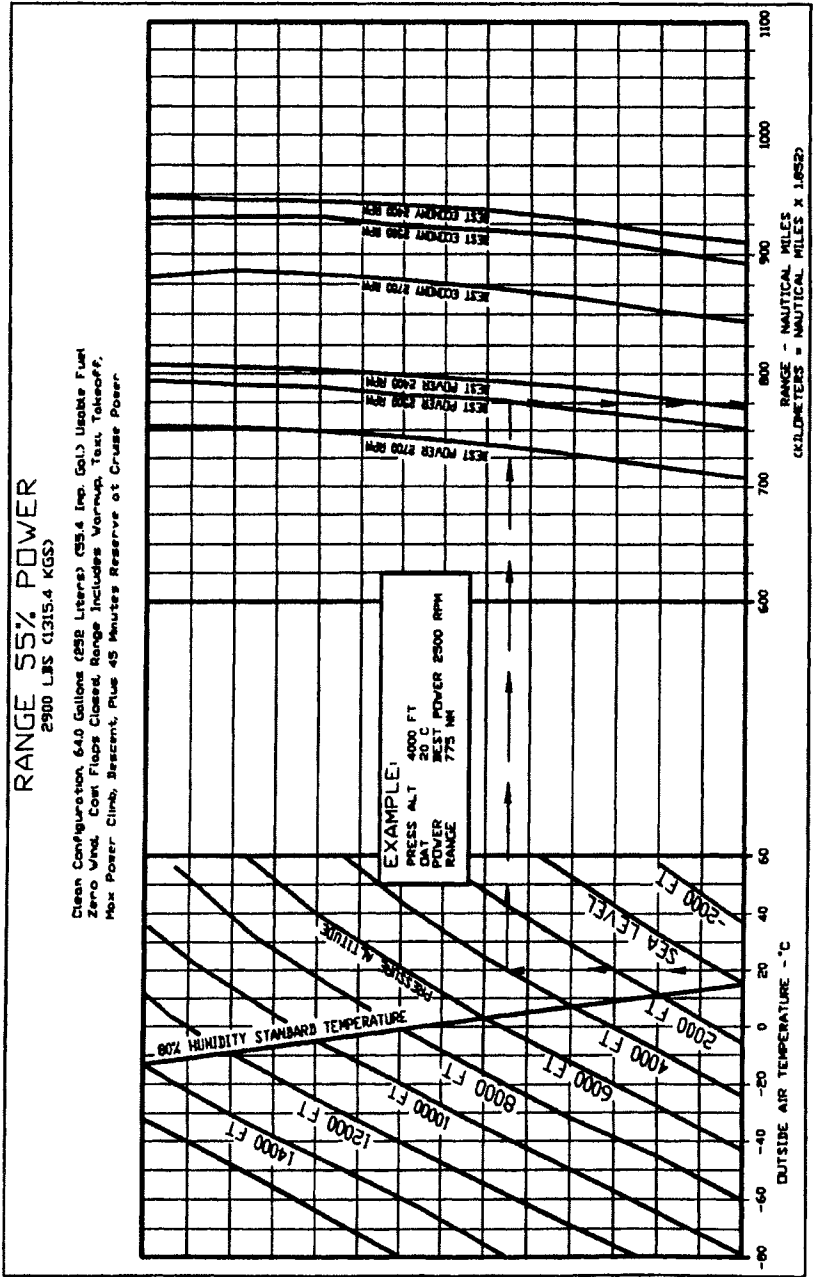




RANGE 45% POWER


RANGE 45% POWER

2900 LBS (1315.4 KGS)


Clean Configuration, 64.0 Gallons (252 Liters) (55.4 Imp. Gal.) Usable Fuel  
Zero Wind, Cool Flaps Closed, Range Includes Warmup, Taxi, Takeoff,  
Max Power Climb, Descent, Plus 45 Minutes Reserve at Cruise Power

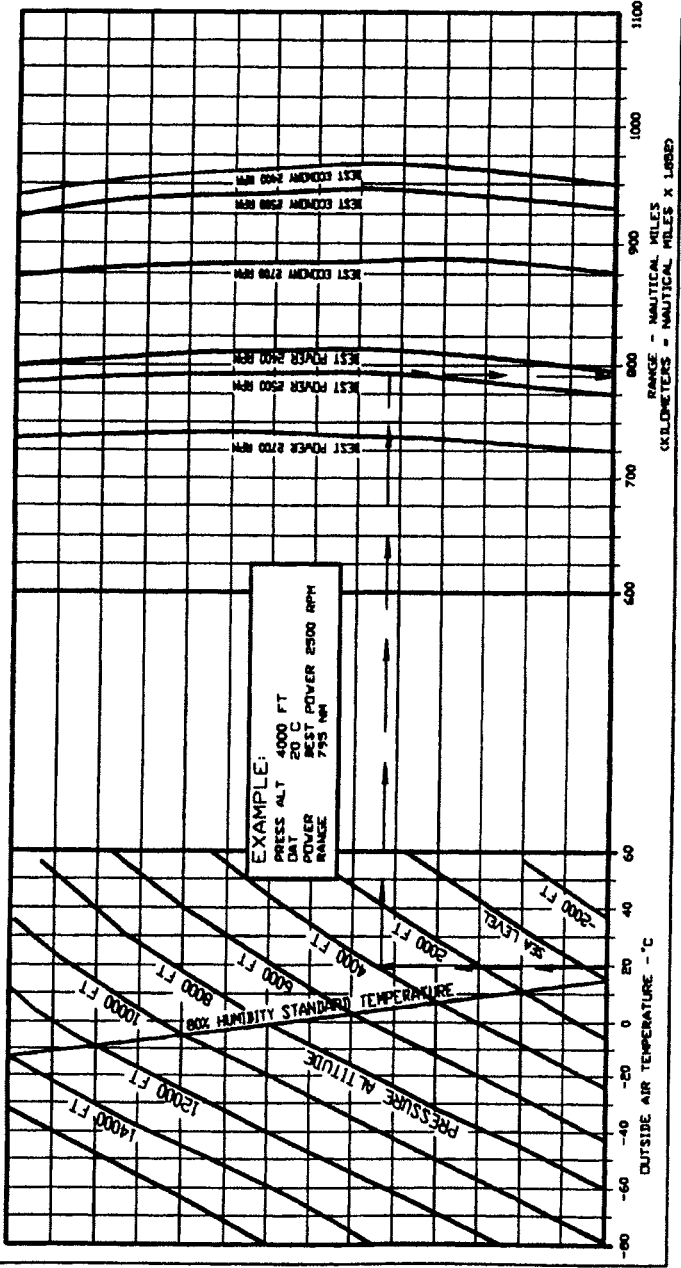

ENDURANCE 75% POWER

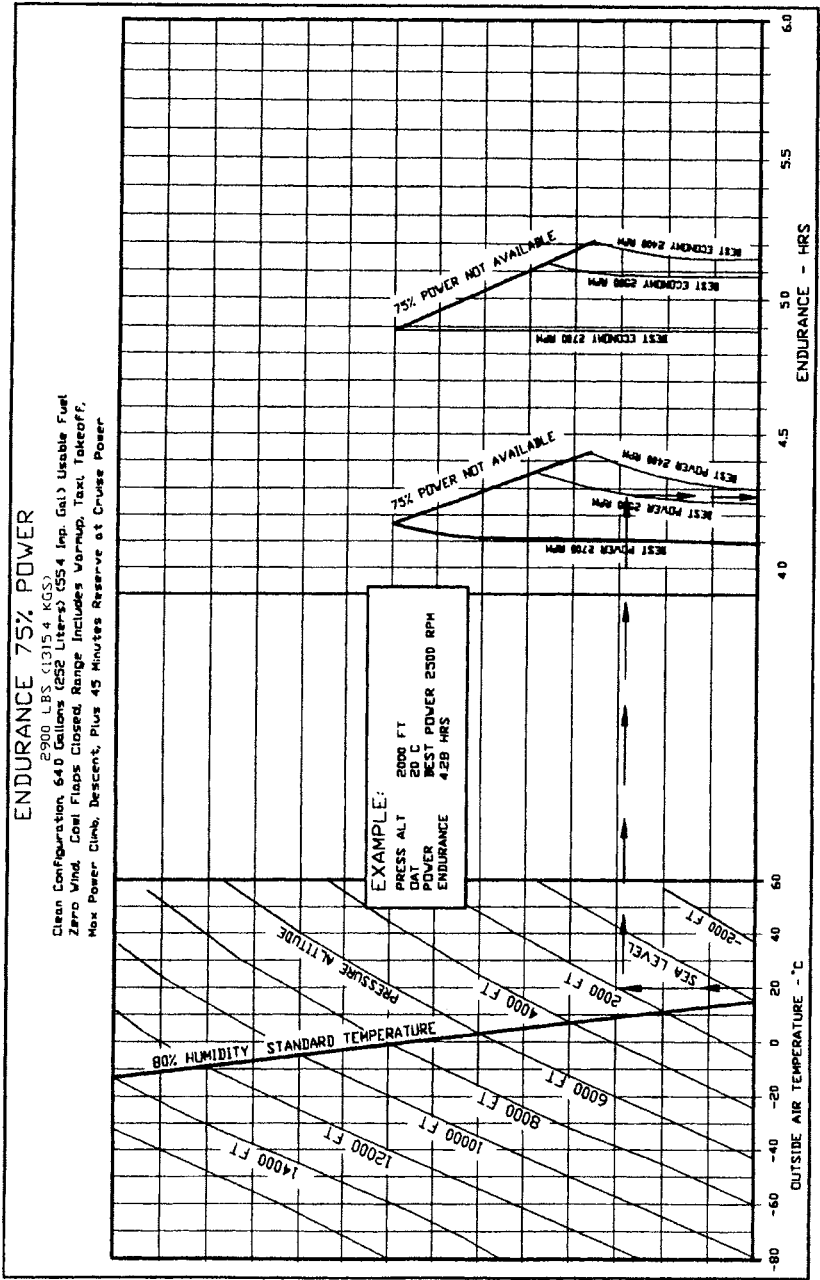


ENDURANCE 65% POWER

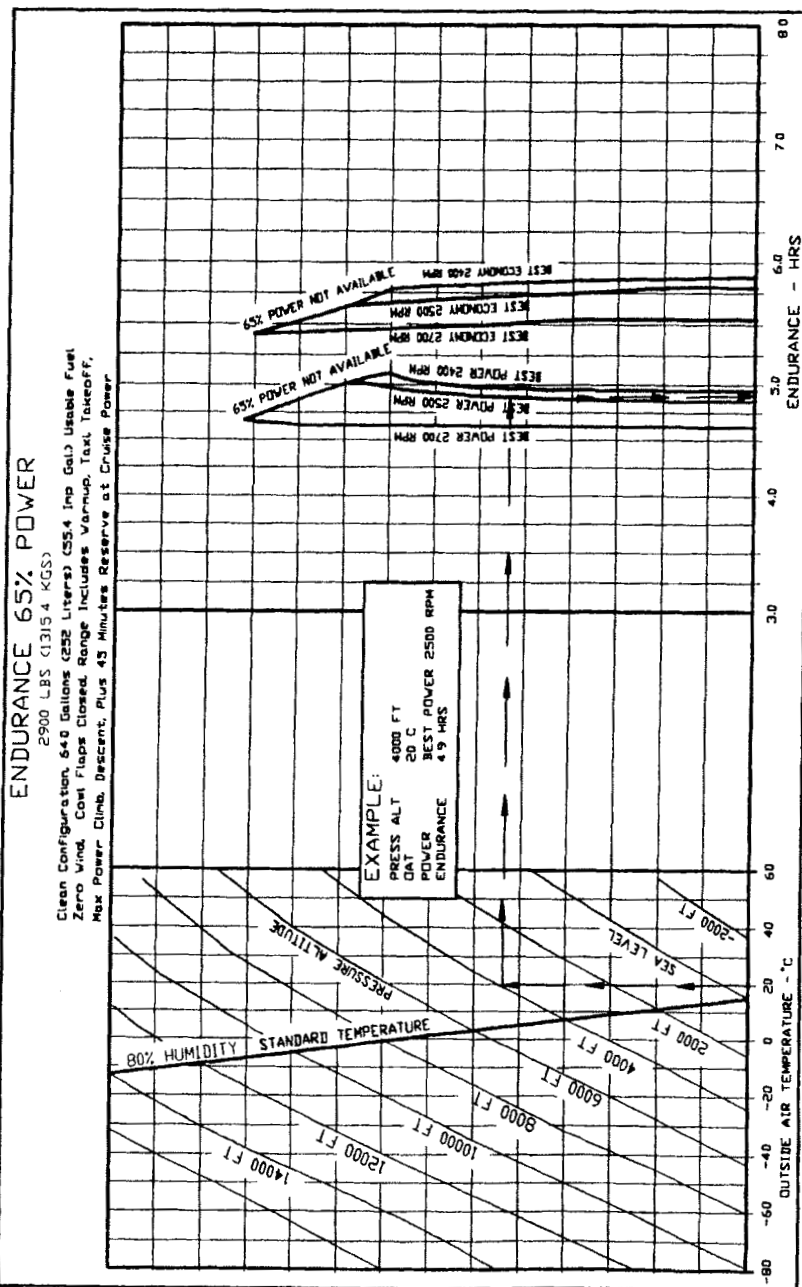


ENDURANCE 55% POWER

ENDURANCE 55% POWER  
2900 LBS (1315.4 KGS)

Clean Configuration 640 Gallons (252 Liters) (55.4 Imp Gal.) Usable Fuel  
Zero Wind, Cowl Flaps Closed, Range Includes Warmup, Taxi, Takeoff,  
Max Power Climb, Descent, Plus 45 Minutes Reserve at Cruise Power

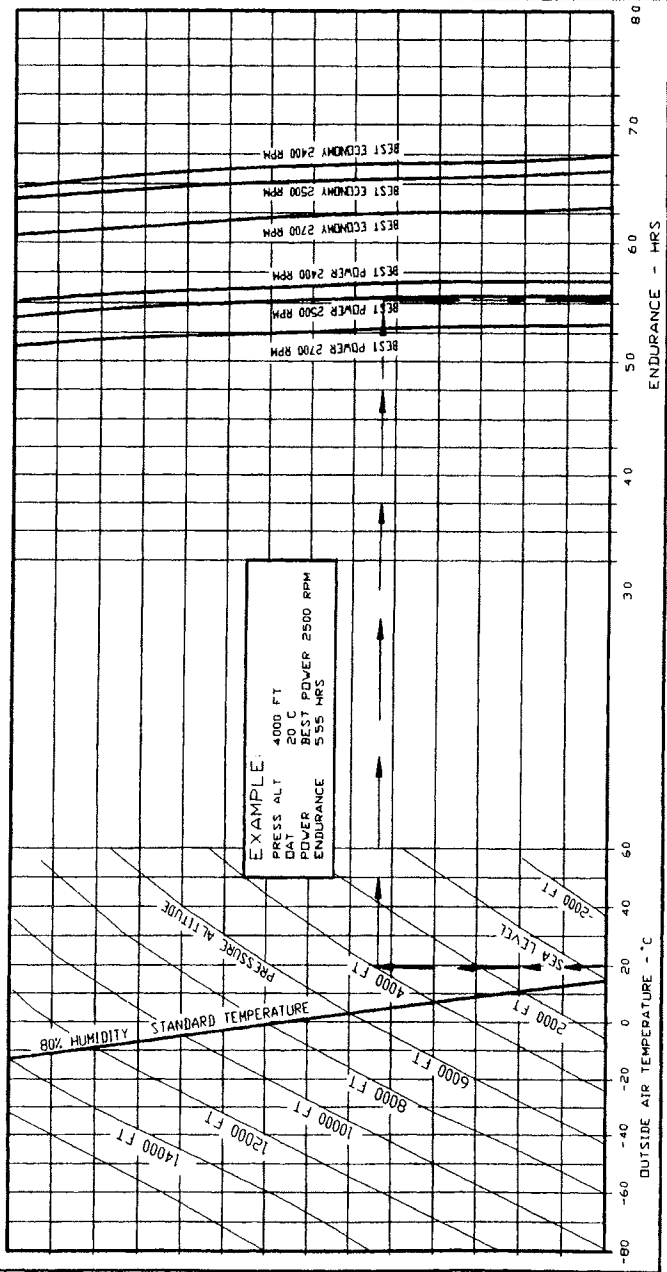


ENDURANCE 45% POWER

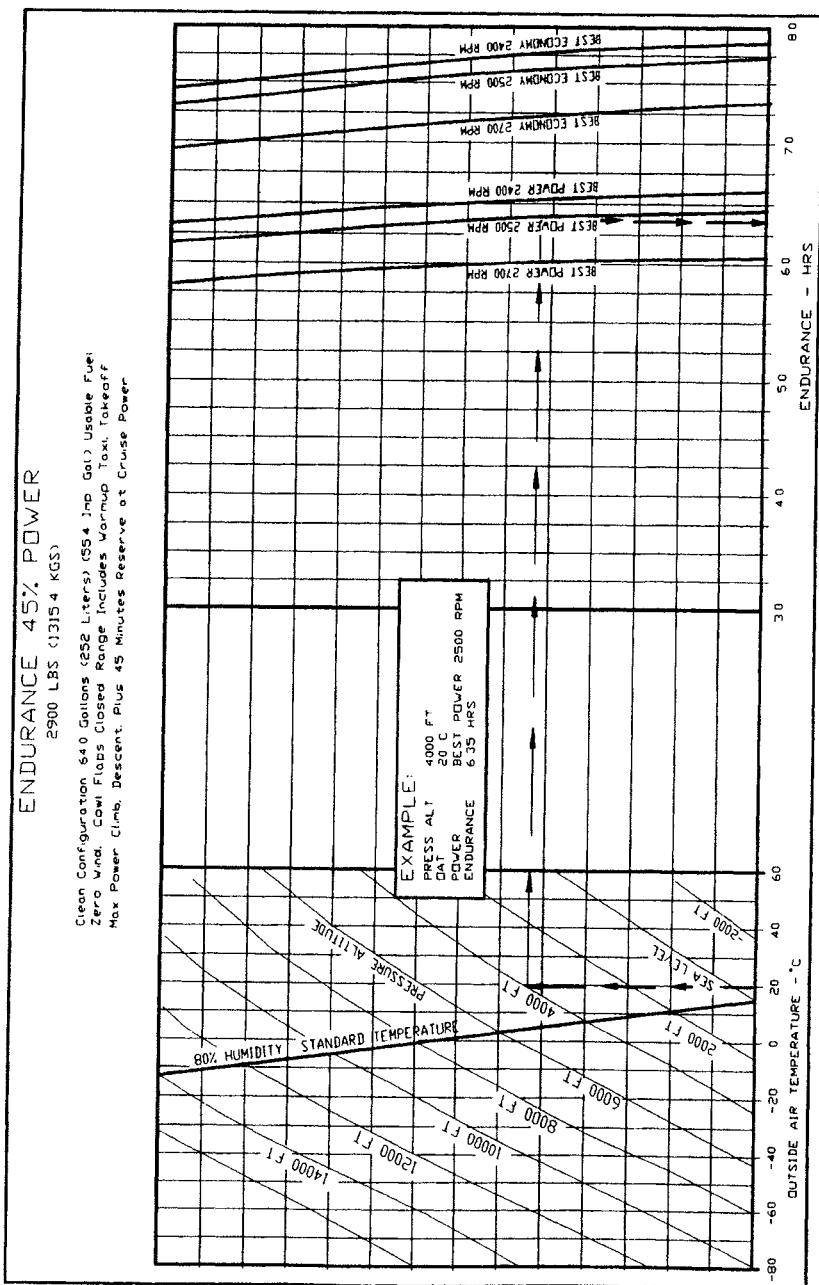

**MOONEY  
M20J**



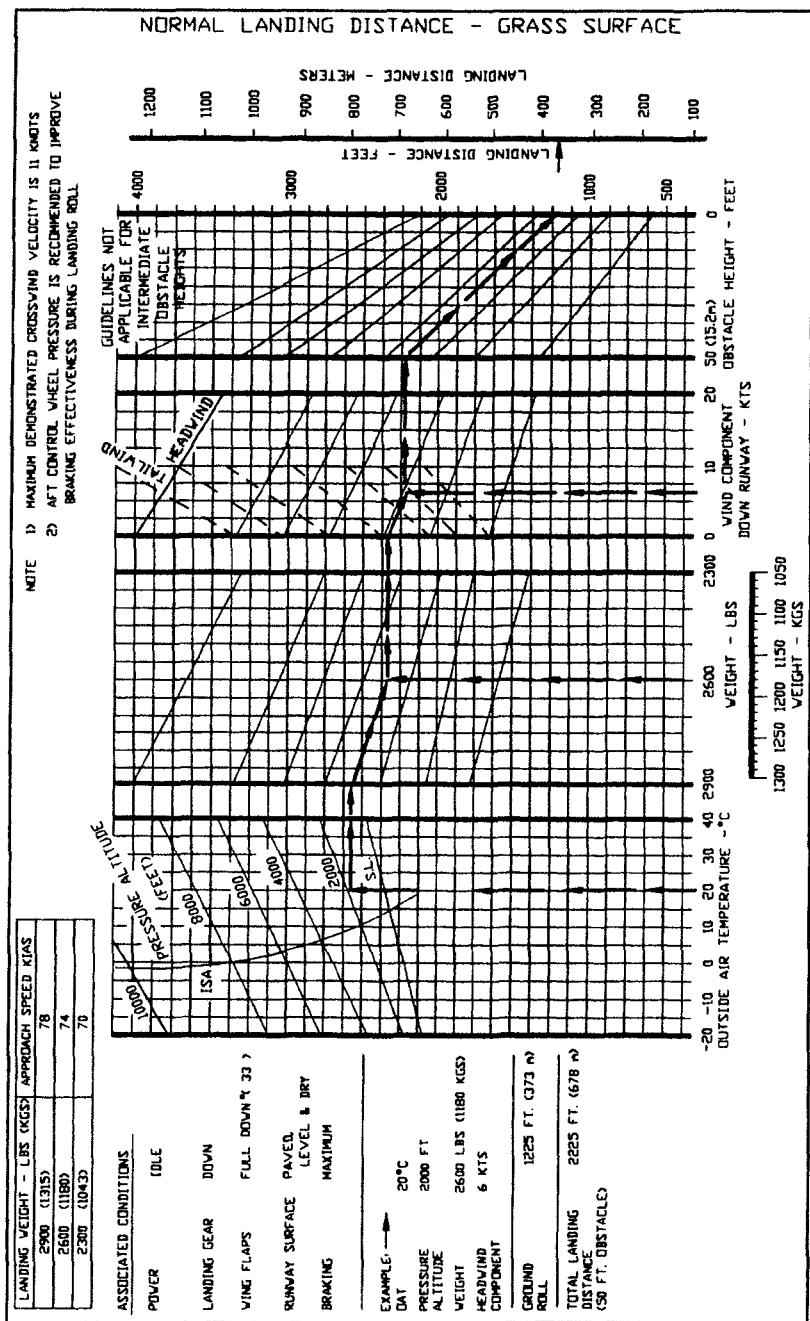

**BLANK**



TABLE OF CONTENTS

TITLE . . . . .	PAGE
INTRODUCTION . . . . .	6-2
AIRPLANE WEIGHING PROCEDURE . . . . .	6-2
WEIGHT AND BALANCE CHART . . . . .	6-4
OWNERS WEIGHT & BALANCE RECORD . . . . .	6-5
PILOTS LOADING GUIDE . . . . .	6-6
PROBLEM FORM . . . . .	6-7
LOADING COMPUTATION GRAPH . . . . .	6-7
CENTER OF GRAVITY MOMENT ENVELOPE . . . . .	6-8
CENTER OF GRAVITY LIMITS ENVELOPE . . . . .	6-9
EQUIPMENT LIST . . . . .	6-10

NOTE:

The empty weight, center of gravity, and equipment list for the airplane as delivered from Mooney Aircraft Corporation is contained in this section. The use of this section is valid for use with the airplane identified below when approved by Mooney Aircraft Corporation.

MODEL - M20J

AIRCRAFT SERIAL NO. \_\_\_\_\_

AIRCRAFT REGISTRATION NO. \_\_\_\_\_

\_\_\_\_\_  
Mooney Aircraft Corporation Approval Signature & Date

### INTRODUCTION

This section describes the procedure for calculating loaded aircraft weight and moment for various flight operations. In addition, procedures are provided for calculating the empty weight and moment of the aircraft when the removal or addition of equipment results in changes to the empty weight and center of gravity. A comprehensive list of all Mooney equipment available for this airplane is included in this section. Only those items checked (X) were installed at Mooney and are included in the empty weight-and-balance data.

The aircraft owner and pilot has the responsibility of properly loading the aircraft for safe flight. Data presented in this section will enable you to carry out this responsibility and insure that your airplane is loaded to operate within the prescribed weight and center-of-gravity limitations.

At the time of delivery, Mooney Aircraft Corporation provides the empty weight and center of gravity data for the computation of individual loadings. (The empty weight and C.G. (gear extended) as delivered from the factory is tabulated on page 6-5 when this manual is supplied with the aircraft from the factory.)

FAA regulations also require that any change in the original equipment affecting the empty weight and center of gravity be recorded in the Aircraft Log Book. A convenient form for maintaining a permanent record of all such changes is provided on page 6-5. This form, if properly maintained, will enable you to determine the current weight-and-balance status of the airplane for load scheduling. The weight-and-balance data entered as your aircraft left the factory, plus the record you maintain on page 6-5, is all of the data needed to compute loading schedules.

The maximum certificated gross weight for the Model M20J under all operating conditions is 2900 pounds (1315 Kg). Maximum useful load is determined by subtracting the corrected aircraft empty weight from its maximum gross weight. The aircraft must be operated strictly within the limits of the Center-of-Gravity Moment Envelope shown on page 6-8.

### AIRPLANE WEIGHING PROCEDURE

(A) LEVELING: Place a spirit level on the leveling screws above the tailcone access door when leveling the aircraft longitudinally. Level the aircraft by increasing or decreasing air pressure in the nose wheel tire.

(B) WEIGHING: To weigh the aircraft, select a level work area and:

1. Check for installation of all equipment as listed in the Weight & Balance Record Equipment List.

2. Top off both tanks with full fuel. Subtract usable fuel 64.0 gal. (242.4 liters, 53.3 Imp. Gal.) @ 6 lb/gal= 384.0 lbs. (174.2 Kg.) (.72 Kg/l) from total weight as weighed. (Use 5.82 lb/gal(.69 Kg/l) for 100LL fuel).

—\*—

OPTIONAL METHOD - Ground aircraft and defuel tanks as follows:

- Disconnect fuel line at electric boost pump outlet fitting.
- Connect to output fitting a flexible line that will reach fuel receptacle.
- Turn fuel selector valve to the tank to be drained, and remove filler cap from fuel filler port.
- Turn on boost pump until tank is empty.

REPEAT STEPS C. AND D. TO DRAIN OTHER TANK.

- Replace 1.25 gal. (4.7 liters, 1.0 Imp. Gal.) fuel @ 6.0 lb./gal. (.72 Kg/l) into each tank (unusable fuel). (Use 5.82 lb/gal. (.69 Kg/l) for 100LL fuel).
- Replace filler caps.

—\*—

3. Fill oil to capacity - 8 qts. (7.6 liters).
4. Position front seats in full forward position.
5. Position flaps in full up position.
6. Position a 2000-pound (907.2 Kg.) capacity scale under each of the three wheels.
7. Level aircraft as previously described making certain nose wheel is centered.
8. Weigh the aircraft and deduct any tare from each reading.
9. Find reference point by dropping a plumb bob from center of nose gear trunnion (retracting pivot axis) to the floor. Mark the point of intersection.
10. Locate center line of nose wheel axle and main wheel axles in the same manner.
11. Measure the horizontal distance from the reference point to main wheel axle center line. Measure horizontal distance from center line of nose wheel axle to center line of main wheel axles.

**| NOTE |**

**Depending on the aircraft C.G. location the distance from the centerline of the main wheel axles to the trunnion reference point may be longer than to the centerline of the nose wheel axle.**

12. Record weights and measurements, and compute basic weight and CG as follows on next page:


**NOTE:**

Wing jack points are located at Fus. Sta. 56.858 in. Nose jack point is the propeller yoke. Use yoke jack to lift aircraft. Refer to SECTION VIII, JACKING, for procedures.

# SECTION VI WEIGHT AND BALANCE

MOONEY  
M20J

## M20J - WEIGHT and BALANCE CHART

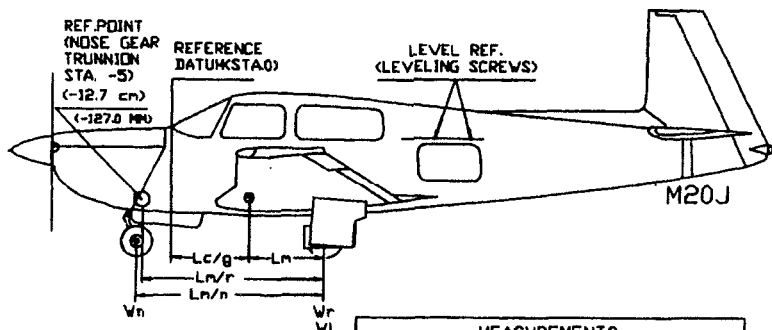

MEASUREMENTS	
L <sub>M/R</sub>	INCHES/CM/MM
L <sub>M/N</sub>	INCHES/CM/MM

SCALE POSITION AND SYMBOL	SCALE READING	TARE	NET WEIGHT
NOSE WHEEL (W <sub>N</sub> )			
RIGHT MAIN WHEEL (W <sub>R</sub> )			
LEFT MAIN WHEEL (W <sub>L</sub> )			
BASIC EMPTY WEIGHT (W <sub>T</sub> )			(If fuel has been drained)
AS WEIGHED (W <sub>T</sub> )			(If fuel has not been drained)

a. CG Forward of Main Wheels:

$$\frac{\text{Lbs/Kg Weight of Nose (W}_N\text{)}}{\text{Distance Between Main and Nose Wheel Axle Centers (L}_{MN}\text{)}} \times \frac{\text{In/cm/mm}}{\text{Distance from Center Nose Gear Trunion to Center of Main Wheel Axles (Horizontal) (L}_N\text{)}} = \frac{\text{Lbs/Kg Total weight of Aircraft (W}_T\text{)}}{\text{CG Forward of Main Wheels (L}_M\text{)}}$$

b. CG Aft of Datum (Station 0):

$$\frac{\text{In/cm/mm Distance from Center Nose Gear Trunion to Center of Main Wheel Axles (Horizontal) (L}_N\text{)}}{\text{Distance from Center Nose Gear Trunion to Gear Trunion to Datum (CONSTANT) (5 IN/127 cm/127 mm)}} = \frac{\text{In/cm/mm Result of Computation Above (L}_M\text{)}}{\text{CG (FUS. STA) Distance Aft of Datum (Empty Weight CG) (L}_{EM}\text{)}}$$

If fuel has not been drained, the usable fuel must be analytically subtracted to determine the Basic Empty Wt. and CG. Use loading calculation procedure shown on page 6-6.

WEIGHT	LBS. (Kg)	CG IN/cm/mm	MOMENT Lb-In/Kg-cm(Kg-mm)/1000
As Weighed (W <sub>T</sub> )			
Usable fuel	—	48.43 in/123 cm/1230 mm	—
Basic Empty Wt.			

## SECTION VI WEIGHT AND BALANCE

**CENTER BELOW ALL WEIGHT CHANGE DATA FROM AIRCRAFT LOG BOOKS**

[illegible]

**PILOT'S LOADING GUIDE**

**LOADING CALCULATION PROCEDURE**

Proper loading of the aircraft is essential for maximum flight performance and safety. This section will assist you in determining whether the aircraft loading schedule is within the approved weight and center-of-gravity limits.

To figure an actual loading problem for your aircraft, procede as follows:

**Step 1.** Refer to the latest entry on page 6-5 for the current empty weight and moment.

**| NOTE |**

Since the engine oil is normally kept at the full level, the oil weight and moment is included in basic empty weight and is constant in calculating all loading problems.

**Step 2:** Note the pilot's weight and the position his seat will occupy in flight. Find this weight on the left scale of the Loading Computation Graph (page 6-7) and cross the graph horizontally to the graph for # 1 and # 2 seats. When this point is located, drop down to the bottom scale to find the value of the moment/1000 due to the pilot's weight and seat position.

Repeat the procedure for the co-pilot and enter these weights and moment/1000 values in the proper subcolumns in the Problem Form on page 6-7.

**Step 3:** Proceed as in Step 2 to account for the passengers in seats 3 and 4. Enter the weight and value of moment/1000 in the proper columns.

**Step 4:** Again proceed as in Step 2 to account for the amount of fuel carried, and enter the weight and moment/1000 values in the proper columns.

**Step 5:** Once more, proceed as in Step 2 to account for the baggage to be carried and enter the figures in the proper columns.

**Step 6:** Total the weight columns. This total must be 2900 Pounds(1315 Kg) or less. Total the Moment/1000 column.

**DO NOT FORGET TO SUBTRACT NEGATIVE NUMBERS.**


**Step 7:** Refer to the Center-of-Gravity Moment Envelope (page 6-8). Locate the loaded weight of your airplane on the left scale of the graph and trace a line horizontally to the right. Locate the total moment/1000 value for your airplane on the bottom scale of the graph and trace a line vertically above this point until the horizontal line for weight is intersected. If the point of intersection is within the shaded area, your aircraft loading is acceptable. If the point of intersection falls outside the shaded area, you must rearrange the load before takeoff.


PROBLEM FORM							
STEP	ITEM	SAMPLE PROBLEM		YOUR PROBLEM			
		WEIGHT (Kg) Lbs	MOMENT (Kg-cm /1000) lb-in /1000	WEIGHT (Kg) Lbs	MOMENT (Kg-cm /1000) lb-in /1000		
1.	A/C Basic Empty Wt.(W ) (from page 6-5) (Includes Full Oil) 8 Ots.(7.6 Li)@STA.-11.5 (-29.2 cm) (Oil sump assumed FULL for all flights)	(793.8) 1750	(887.38) 77.02				
2.	Pilot Seat (#1) *	(77.1) 170	(69.1) (2nd Pos) 6.0				
3.	Co-Pilot Seat (#2) *	(77.1) 170	(66.4) (1st Pos) 5.78				
4.	Left Rear Seat (#3) or Cargo Area	(77.1) 170	(138.5) 12.02				
5.	Right Rear Seat (#4) or Cargo Area	(77.1) 170					
6.	Fuel (Max. Usable - 64 Gal. (242.3 li) (384 lbs.)(174.2 Kg)@Sta 48.43(123.0 cm)	(141.5) 312	(174.1) 15.11				
7.	Baggage (Max. 120 Lbs(54.4 cm)@Sta.95.5 (242.6 cm)	(40.9) 110	(121.0) 10.51				
8.	Hat Rack (Max. 10 Lbs(4.54 Kg)@Sta. 119.0 (302.3 cm)		(4.1) .36				
9.	Loaded Aircraft Weight	(1218) 2685					
10.	Total Moment/1000		(1463.7) 127				
7. Refer to Center of Gravity Moment Envelope, to determine whether your A/C loading is acceptable.							
* Obtain the moment/1000 value for each seat position (FWD, MID or AFT) from loading computation graph.							

J29-PRBFRM

**CAUTION**


**Cargo loaded in rear seat area, with seat backs folded down, should have center of gravity over fuselage station 70.7.**

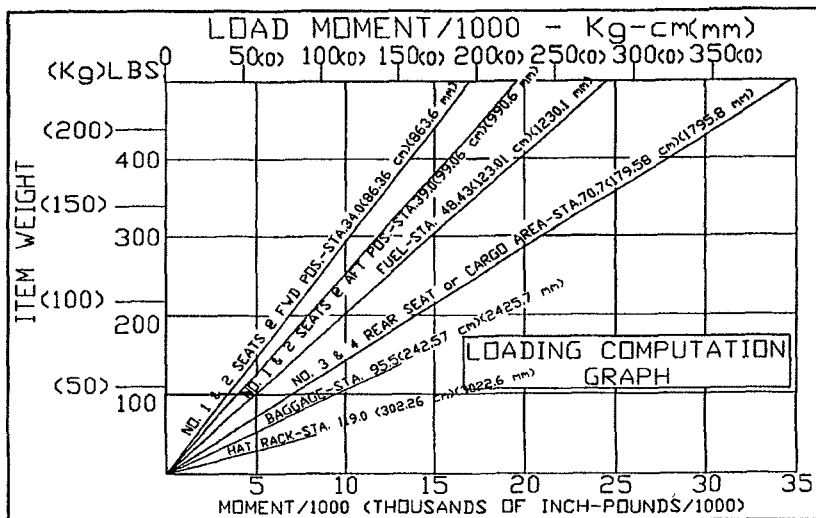

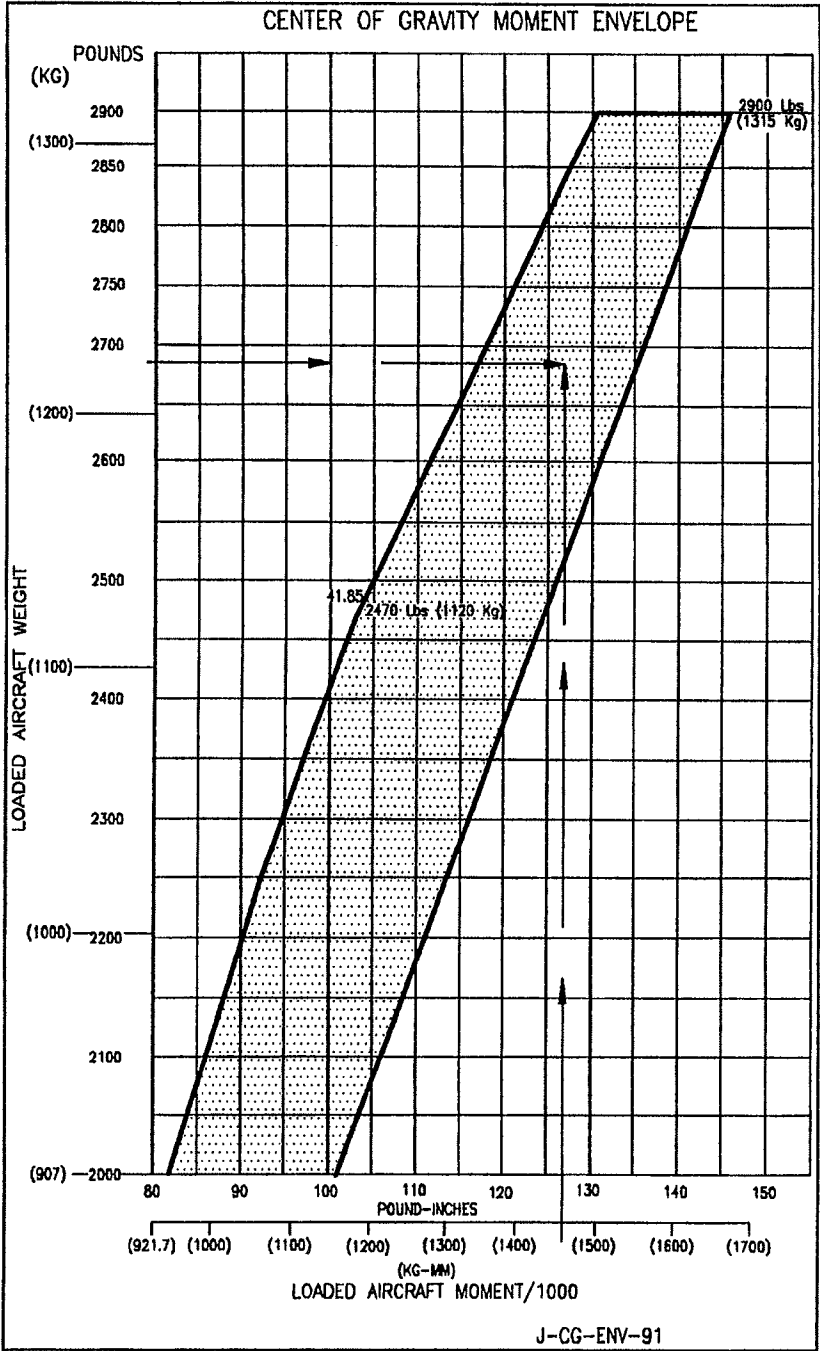



M20J - CENTER OF GRAVITY LIMITS ENEVELOPE

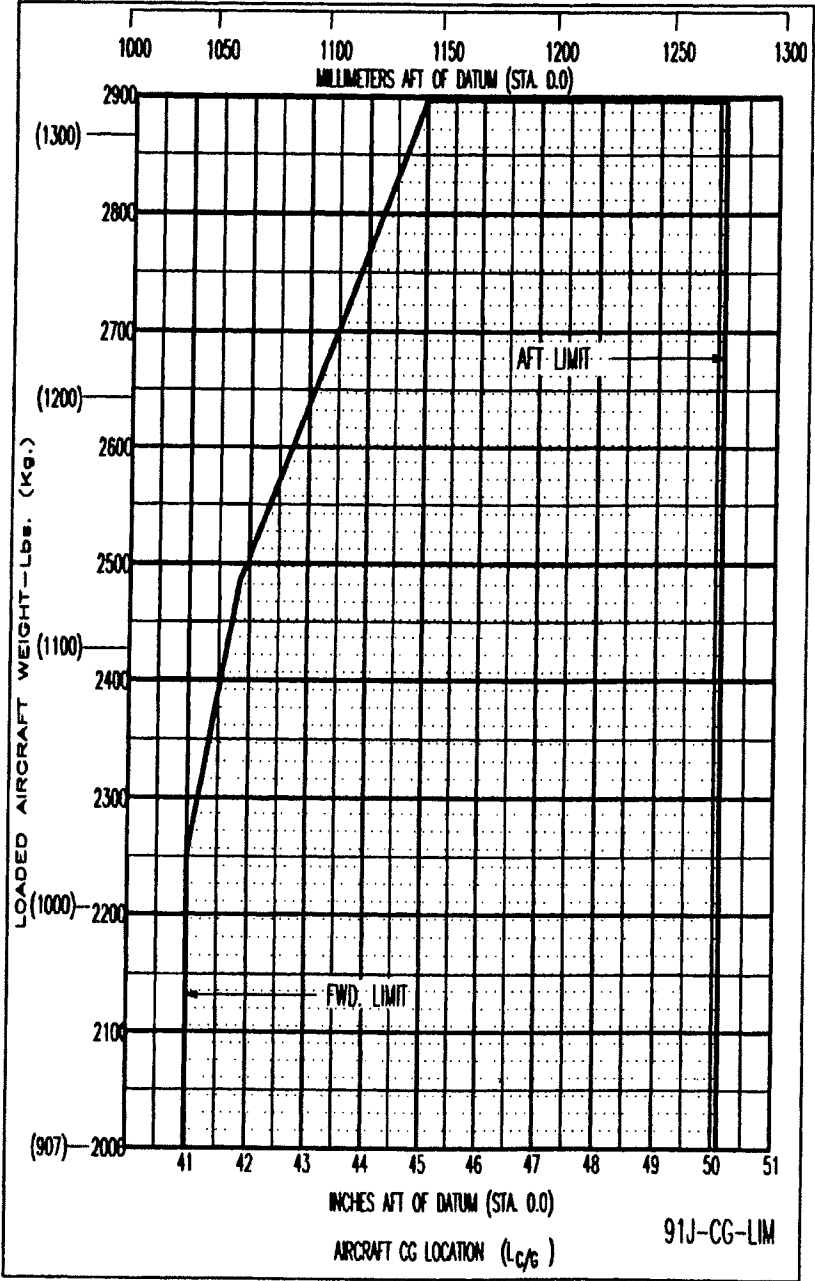

**EQUIPMENT LIST**

The following equipment list is a listing of all items approved at the time of publication of this manual for the Mooney M20J.

Only those items having an X in the "Mark If Installed" column and dated were installed at Mooney Aircraft Corporation.

If additional equipment is to be installed it must be done in accordance with the reference drawing or a separate FAA approval.

**| NOTE |**

**Positive arms are distances aft of the airplane datum. Negative arms are distances forward of the airplane datum.**

Asterisks ( \* ) after the item weight and arm indicate complete assembly installations. Some major components of the assembly are listed and indented on the lines following. The summation of the major components will not necessarily equal the complete assembly installation.

MOONEY  
M20J

SECTION VI  
WEIGHT AND BALANCE

EQUIPMENT LIST							MO.		
96J-EQA1							DAY		
							YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (KG)	ARM (INCHES)	MARK IF INSTLD				
	A. POWERPLANT & ACCESSORIES								
1A									
2A	O. Radiator (Stewart Warner)	620052	(1.1)	(-9.7)	-3.8	X			
3A	Valve, Oil Quick Drain (Net Change)	600363	(.005)	(-35.6)	-14.00				
4A	Propeller - Constant Speed (McCauley-B2D34C214/90DHB -16E or -16EP)	680031	(22.5)	(-90.2)	-35.50				
5A	Governor, Propeller (McCauley C290D5C >/T17)	660115	(1.25)	(-3.6)	-1.40	X			
6A	Spinner Installation	680031	(2.18)	(-88.9)	-35.00	X			
7A	Induction Air Filter	600355	(.45)	(-64.8)	-25.50	X			
8A	Fuel Selector Valve	610152	(.41)	(66.7)	26.25	X			
9A	Propeller - Constant Speed (HARTZELL) HC-C2YK-1BF/F7666A-3Q	680031	(24.6)	(-90.2)	-35.50				

**MOONEY  
M20J**

[illegible]

MOONEY  
M20J

SECTION VI  
WEIGHT AND BALANCE

EQUIPMENT LIST										MO.		
96J-EQB1										DAY		
										YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (KG)	WEIGHT (POUNDS)	ARM (CM)	ARM (INCHES)	MARK IF INSTLD					
	B. ELECTRICAL SYSTEM											
1B	BATTERY (24 VOLT)	800351	(13.40)	29.55	(281.43)	110.8						
2B												
3B	REGULATOR, VOLTAGE (28 VOLT)	800351	(.27)	.6	(10.16)	4.0						
4B												
5B	HEATED PITOT	820252	(.52)	1.15	(106.30)	41.85	X					
6B	ELECTRIC FUEL PUMP	610256	(1.09)	2.4	(38.10)	15.0	X					
7B	STALL WARNING INDICATOR	800351	(.45)	1.0	(127.00)	50.0	X					
8B	GEAR WARNING INDICATOR	800351	(.45)	1.0	(49.53)	50.0	X					
9B	WING TIP STROBE LIGHT INSTL.	800351	(2.27)	5.0	(134.62)	53.0	X					
10B	TAIL STROBE LIGHT INSTL.	800351	(.68)	1.5	(548.18)	215.82	X					
11B	LANDING/TAXI LIGHTS (2 SETS)	210417	(2.7)	(5.88)	(105.7)	41.6	X					
12B	ACTUATOR, FLAP	750097	(2.31)	5.1	(261.92)	103.12	X					

EQUIPMENT LIST										MO.		
										DAY		
										YEAR		
96J-EQB2												
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (Kg)	WEIGHT (Pounds)	ARM (Cm)	ARM INCHES	MARK IF INSTLD					
	B. ELECTRICAL SYSTEM (con't.)											
13B	HOUR METER INSTL.	950241	(14)	.3	(46.99)	18.5						
14B	CIGARETTE LIGHTER W/ 3 ASHTRAYS	800351	(.79)	1.74	(49.53)	19.5						
15B	ACTUATOR, LANDING GEAR	560260	(5.08)	11.2	(99.06)	39.0	X					
16B												
17B	E.L.T. (D & M ELT-B)	810152	(1.63)	3.59	(307.34)	121.0						
18B	ELT - (ARTEX) ELT 110-4	810150	(2.26)	4.98	(378.9)	149.2						
19B	ELT - (ARTEX) ELS 10	810150	(2.95)	6.5	(378.9)	149.2						
20B												

EQUIPMENT LIST									
J-EQ-C1 ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (Kg) POUNDS	ARM (Cm)	MARK IF INSTLD	MD. DAY YEAR			
	C. WHEELS, TIRES & BRAKES								
1C	MAIN WHEEL & BRAKE ASSY (2)	520029	(6.22*) 13.72*	(163.57)	X	64.4			
	WHEEL ASSY (2)	520029	(4.99)	(162.51)	X	63.98			
	BRAKE ASSY (2)	520029	(1.23)	(167.59)	X	65.98			
2C	TWO MAIN TIRES (6-PLY RATING) 6.00x6 TYPE III WITH REGULAR TUBES	520029	(7.71)	(162.51)	X	63.98			
3C	NOSE WHEEL ASSY	540000	(1.18)	(-13.46)	X	-5.3			
4C	NOSE WHEEL TIRE ASSY, (6-PLY RATING), 5.00x5 TYPE III, WITH REGULAR TUBE	540000	(3.17)	(-13.46)	X	-5.3			
5C	BRAKE MASTER CYLINDER (2)	850112	(1.45)	(21.08)	X	8.3			
6C	HYDRAULIC RESERVOIR	850112	(.14)	(276.23)	X	108.75			
7C	VALVE, PARKING BRAKE	850112	(.27)	(-3.68)	X	-1.45			

**MOONEY**  
**M20J**

## EQUIPMENT LIST

[illegible]



EQUIPMENT LIST										MO.	
										DAY	
										YEAR	
J-EQ-D1	ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (KG)	WEIGHT (CM)	ARM INCHES	MARK IF INSTLD				
		D. INSTRUMENTS									
	1D	ATTITUDE GYRO	820071	1.33	2.93	17.46					
	2D	DIRECTIONAL GYRO	820071	1.33	2.93	16.8					
	3D	GAUGE, OAT, WINDOW MOUNTED	950058	1.057	125	28.25					
	4D	GAUGE, OAT, PANEL MOUNTED	820071	1.25	55	18.5					
	5D	INDICATOR - VERTICAL SPEED	820071	1.43	95	18.5	X				
	6D	TURN COORDINATOR	820071	1.83	184	16.5	X				
	7D	MANIFOLD PRESSURE	820071	1.45	10	18.48	X				
	8D	ALTIMETER	820071	1.49	107	18.7					
	9D	AIRSPEED INDICATOR	820071	1.30	66	18.8	X				
	10D	MAGNETIC COMPASS	820230	1.23	50	21.9	X				
	11D	TACHOMETER, ELECTRIC	820071	1.36	80	18.95					
	12D	TACHOMETER, MECHANICAL	820071	1.45	10	18.0					

SECTION VI  
WEIGHT AND BALANCE

MOONEY  
M20J

EQUIPMENT LIST										MD.		
J-EQ-D2										DAY		
										YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (kg) POUNDS	ARM (cm) INCHES	MARK IF INSTLD							
	D. INSTRUMENTS (con't.)											
13D	E. G. T.	820071	(.23)	(46.94)								
14D	FUEL FLOW	600363	(.63)	(46.94)								
15D	CLUSTER GAUGE	820071	(.53)	(49.02)								
16D	ANNUNCIATOR PANEL	820071	(.32)	(44.45)								
17D	CLOCK - ELECTRIC	820071	(.11)	(49.78)								
18D	ALTERNATE STATIC AIR SOURCE	820252	(.14)	(46.99)								
19D												
20D												

## SECTION VI WEIGHT AND BALANCE

ISSUED 1 - 96

[illegible]



EQUIPMENT LIST							MO.		
							DAY		
							YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (Kg)	WEIGHT (Pounds)	ARM (Cm)	ARM INCHES	MARK IF INSTLD		
	G. AVIONICS, AUTOPILOT'S & MISC.								
1G	KING KLN 90A	810434	(3.11)	6.9	(56.7)	22.34			
2G	KING KLN 90B	810434	(3.11)	6.9	(56.7)	22.34			
3G	KING KLN 89B	810434	(1.59)	3.5	(80.72)	31.78			
4G									
5G	NAT AA80	810150	(.32)	.7	(43.2)	17.0			
6G	NAT AA83	810150	(.32)	.7	(43.2)	17.0			
7G									
8G	TERRA ENCODER	810150	(.23)	.5	(30.5)	12.0			
9G									
10G									
11G	STATIC WICKS	950253	-----		-----				
12G	SKY MAP	810218	(8.7)	19.2	(141.3)	55.6			

SECTION VI  
WEIGHT AND BALANCE

MOONEY  
M20J

EQUIPMENT LIST							MO.		
96J-EQG2							DAY		
							YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (Kg)	POUNDS (Cm)	ARM INCHES	MARK IF INSTLD			
	G. AVIONICS, AUTOPILOT'S & MISC. (con't)								
13G	KING LCS-55A	810150	(5.14)	11.34	(168.8)	66.46	34		
14G	KING KMA-24	810150	(.77)	1.7	(48.3)	19.0			
15G									
16G									
17G									
18G									
19G									
20G									
21G									
22G									
23G									
24G									

EQUIPMENT LIST							MO.		
J-EQ-HI							DAY		
							YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (Kg) POUNDS	ARM (Cm) INCHES	MARK IF INSTLD				
	H. AUXILIARY EQUIPMENT								
1H	TOW BAR (STOWED)	010001	1.03 2.28	(242.57) 95.5					
2H	JACK POINTS (STOWED) (3 EA)	010000	(.10) .21	(302.26) 119.0	X				
3H	WING TIE DOWN RINGS (STOWED) (2)	010002	(.10) .21	(302.26) 119.0	X				
4H	FUEL SAMPLER CUP (STOWED)	610010	(.04) .09	(302.26) 119.0	X				
5H	ENGINE OPERATOR'S MANUAL	010026	(.35) .77	(302.26) 119.0	X				
6H	AIRCRAFT P.O.H./A.F.M.	010026	(.84) 1.86	(302.26) 119.0	X				
7H	CARGO "D" RINGS	010027	(.04) .09	(302.26) 119.0	X				
8H	CARGO RESTRAINT BELTS	140233	(.27) .6	(302.26) 119.0	X				
9H									
10H									
11H									
12H									

# EQUIPMENT LIST

96J-E011

ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (KG)	ARM (CM)	MARK IF INSTLD
	I. OPTIONAL EQUIPMENT				
1I	OXYGEN SYSTEM INSTL. (COMPOSITE)	870029	(20.2)	(317.50)	
2I	CURTAINS	950163	(1.32)	(162.56)	
3I	HEADREST ASSY. - FRONT	140267	(1.57)	(114.30)	
4I	HEADREST ASSY. - REAR	140313	(1.57)	(203.20)	
5I	AUX. POWER RECEPTACLE - INSTL.	950268	(1.48)	(332.74)	
6I	AUX. POWER CABLE ADAPTER	880042	(3.43)	***	
7I	BRAKE INSTL., DUAL	850112	(2.07)	(52.37)	
8I	FIRE EXTINGUISHER INSTL.	950251	(1.20)	(153.67)	
9I	FIXED STEP ASSY	840071	(1.24)	(274.32)	
10I	PROPELLER DE-ICE BOOTS	690001	(2.64)	(-78.36)	
11I	SEAT, PILOT, VERTICAL ADJUST. (STD) NET	140215	(+1.79)	**	
12I	SEAT, CO-PILOT, VERTICAL ADJUST. CHG.	140215	(+1.79)	**	

\*\*\* - ARM WILL VARY WITH SEAT POSITION BETWEEN STA. 34.0 IN. (86.4 CM) AND 39.0 IN. (99.1 CM)  
 \*\*\* ARM WILL VARY WITH LOCATION STORED. THE PILOT IS RESPONSIBLE TO COMPUTE WEIGHT AND BALANCE  
 DATA IF THESE ITEMS ARE STORED IN THE AIRCRAFT DURING FLIGHT.



EQUIPMENT LIST							MO.		
96J-EQ12							DAY		
							YEAR		
ITEM NO.	ITEM DESCRIPTION	REF. DRAWING	WEIGHT (Kg)	WEIGHT POUNDS	ARM (Cm)	ARM INCHES	MARK IF INSTLD		
	I. OPTIONAL EQUIPMENT (cont.)								
13I	RUDDER PEDAL EXTENSION	720115	(.06)	.13	(38.10)	15.0			
14I	OXYGEN REFILL HOSE ADAPTER	870025	(2.04)	4.5	***				
15I	G-METER	820172	(.34)	.76	(280.67)	110.5			
16I	STANDBY VACUUM PUMP INSTL.	860060	(5.44)	12.0	(249.94)	98.4			
17I	WING TIP RECOGNITION LIGHTS	210410	(.60)	1.32	(134.62)	53.0			
18I	TOW BAR (FOLDING)	010034	(1.03)	2.28	(242.57)	95.5			
19I	BEACON INSTL., FLASHING	800351	(.48)	1.06	(426.72)	168.0			
20I	INBOARD ARM REST INSTL.	140295	(.95)	2.1	(87.63)	34.5			
21I	SEAT, PILOT, VERTICAL ADJUST. (SPECIAL EDITION)	140235	9+1.79)	+3.94	***				
22I	SEAT, CO-PILOT, VERTICAL ADJUST. (SPECIAL EDITION)	140235	(+1.47)	+3.94	***				
** ARM WILL VARY WITH SEAT POSITION BETWEEN STA. 34.0 IN. (86.4 Cm) AND 39.0 IN. (99.1 Cm). *** ARM WILL VARY WITH LOCATION STORED. THE PILOT IS RESPONSIBLE TO COMPUTE WEIGHT AND BALANCE DATA IF THESE ITEMS ARE STORED IN THE AIRCRAFT DURING FLIGHT.									

MOONEY  
M20J

MO.  
DAY  
YEAR

ITEM NO.

## DESCRIPTION

REF. DRAWING

WEIGHT (kg)	POUNDS
----------------	--------

(Cm)

RM  
INCHES

MARK IF  
INSTLD

## I. OPTIONAL EQUIPMENT (con't.)

DESCENT RATE CONTROL (VAC)

WINDSHIELD DEFROSTER BLOWER INSTL.

AVIONICS COOLING BLOWER

DESCENT RATE CONTROL (ELECTRIC)

271



## SECTION VI WEIGHT AND BALANCE

**MOONEY  
M20J**

## EQUIPMENT LIST

**J-EQ-I4**

[illegible]

**TABLE OF CONTENTS**

TITLE . . . . .	PAGE
INTRODUCTION . . . . .	7-3
AIRFRAME . . . . .	7-3
FLIGHT CONTROLS DESCRIPTION . . . . .	7-3
AILERON SYSTEM . . . . .	7-3
ELEVATOR SYSTEM . . . . .	7-3
RUDDER SYSTEM . . . . .	7-3
TRIM SYSTEM . . . . .	7-4
WING FLAPS . . . . .	7-4
INSTRUMENT PANEL . . . . .	7-4
FLIGHT PANEL & INSTRUMENTS . . . . .	7-4
SWITCHES AND CONTROLS . . . . .	7-7
ANNUNCIATOR & SWITCH PANELS . . . . .	7-12
GROUND CONTROL . . . . .	7-13
NOSE GEAR STEERING . . . . .	7-13
TAXIING AND GROUND HANDLING . . . . .	7-13
LANDING GEAR . . . . .	7-13
CONSTRUCTION . . . . .	7-13
RETRACTION SYSTEM . . . . .	7-13
WHEEL BRAKES . . . . .	7-14
EMERGENCY EXTENSION SYSTEM . . . . .	7-14
WARNING SYSTEM . . . . .	7-14
STEERING . . . . .	7-14
CABIN . . . . .	7-14
BAGGAGE COMPARTMENT . . . . .	7-14
CARGO RESTRAINT . . . . .	7-15
SEATS . . . . .	7-15
SEAT BELTS/SAFETY HARNESS . . . . .	7-15
DOORS, WINDOWS & EXITS . . . . .	7-16
CABIN DOOR . . . . .	7-16
PILOT'S WINDOW . . . . .	7-16
EMERGENCY EXITS . . . . .	7-16

**TABLE OF CONTENTS (cont.)**

ENGINE . . . . .	7-17
GENERAL . . . . .	7-17
ENGINE CONTROLS . . . . .	7-17
ENGINE INSTRUMENTS . . . . .	7-17
ENGINE OPERATION AND CARE . . . . .	7-17
OIL SYSTEM . . . . .	7-18
IGNITION SYSTEM . . . . .	7-18
AIR INDUCTION SYSTEM . . . . .	7-19
ENGINE COOLING . . . . .	7-19
ENGINE STARTING SYSTEM . . . . .	7-19
ACCESSORIES . . . . .	7-19
 PROPELLER . . . . .	 7-20
 FUEL SYSTEM . . . . .	 7-20
 ELECTRICAL SYSTEM . . . . .	 7-21
ALTERNATOR & BATTERY . . . . .	7-21
ELECTRICAL SCHEMATIC . . . . .	7-21
CIRCUIT BREAKER PANEL . . . . .	7-21
ANNUNCIATOR PANEL . . . . .	7-24
ELT PANEL . . . . .	7-24
LIGHTING SYSTEM . . . . .	7-24
 CABIN ENVIRONMENT . . . . .	 7-24
 PITOT PRESSURE & STATIC SYSTEM . . . . .	 7-26
 STALL WARNING SYSTEM . . . . .	 7-26
 EMERGENCY LOCATOR TRANSMITTER . . . . .	 7-26
REMOTE SWITCH OPERATION . . . . .	7-27

## **INTRODUCTION**

Acquiring a working knowledge of the aircraft's controls and equipment is one of your important first steps in developing a fully efficient operating technique. This Airplane and Systems Section describes location, function, and operation of systems' controls and equipment. It is recommended for you, the pilot, to familiarize yourself with all controls and systems while sitting in the pilot's seat and rehearsing the systems operations and flight procedures portions of this manual.

## **AIRFRAME**

The M20J is an all metal, low wing, high performance airplane. The fuselage has a welded, tubular-steel cabin frame covered with non-structural aluminum skins. Access to the cabin is provided by a door located on the right side of the fuselage. A door is provided aft of the rear seat for access to the baggage compartment. The aft fuselage is of semi-monocoque construction. Seating in the cabin is provided for the pilot and three passengers. The M20J has a tapered wing that is a full-cantilever-laminar-flow type. The airfoil varies from a NACA 63-215 at the wing root to a NACA 64-412 at the wing tip. An aerodynamically designed cover is attached to the wing tip and contains the wing navigation and anti-collision lights. The wing has full wrap-around skins with flush riveting over the forward top and bottom two thirds of the leading edge. The empennage consists of the vertical and horizontal stabilizers and the rudder and elevator surfaces. The entire empennage pivots around attaching points on the aft fuselage to provide pitch attitude trim. The tricycle landing gear allows maximum taxi vision and ground maneuvering. Hydraulic disc brakes and a steerable nose wheel aid in positive directional control during taxiing and crosswind landings. The landing gear is electrically retracted and extended. A gear warning horn, a gear position indicator on the floorboard and a green "gear down" light help prevent inadvertent gear-up landings. A manual emergency gear extension system is provided for use in the event of an electrical failure.

## **FLIGHT CONTROLS DESCRIPTION**

The aircraft has dual flight controls and can be flown from either the pilot or co-pilot seat. Dual pairs of foot pedals control the rudder and nose wheel steering mechanisms. Push-pull tubes, rather than conventional cable systems, actuate the all-metal flight control surfaces. Rod-end bearings are used throughout the flight control systems. These bearings are simple and require little maintenance other than occasional lubrication. Specially designed aluminum-alloy extrusions, that permit flush skin attachment, form the leading edges of the rudder and elevators. A spring-loaded interconnect device indirectly joins the aileron and rudder control systems to assist in lateral stability during flight maneuvers. Longitudinal pitch trim is achieved through a trim control system that pivots the entire empennage around the tailcone attachment points.

### **Aileron System**

The ailerons are of all-metal construction with beveled trailing edges. Three hinges of machined, extruded aluminum attach the ailerons to the aft wing spar outboard of the wing flaps. The ailerons link to the control wheel through push-pull tubes and bellcranks. Lead counterweights balance the system.

### **Elevator System**

Elevator construction is essentially the same as that of the ailerons. Both elevators attach to stabilizer at four hinge points. Push-pull tubes and bellcranks link the elevators to the control yoke. Lead counterweights balance the elevators.

### **Rudder System**

The rudder attaches to the aft vertical fin spar at four hinge points. Push-pull tubes and bellcranks link the rudder to the rudder pedals.

### Trim System

To provide pitch trim control, the entire empennage pivots around its main hinge points. The system consists of a manually operated actuator that operates a series of torque tubes and universal joints connected to a jack screw on the aft tailcone bulkhead. A trim control wheel, located between the pilot and co-pilot seats, allows the pilot to set stabilizer angle. Trim position is indicated by a mechanical pointer (24-3374 thru 24-3410) or an LED display (24-3411 thru 24-TBA) located on the lower console. This indicator is coordinated with the trim control wheel mechanism and indicates stabilizer position relative to the aircraft thrust line. Electric trim is optional.

### Wing Flaps

The wing flaps are electrically operated and interconnected through push-pull tubes and bellcranks. Total flap area is 17.98 square feet (1.67 sq. m). Nominal travel is 0 to 33 degrees and limit switches prevent travel above or below these limits. The flap position is controlled by a pre-select switch located on the lower control console. Also located on the control console is a flap position indicator which shows which pre-select position has been selected: full up, takeoff (15 degrees) or full down position. A cable attached to the flap jackshaft operates the mechanical flap position indicator (24-3374 thru 24-3410) and a potentiometer controls the LED display (24-3411 thru 24-TBA). Generally, aircraft trim requirements will change with use of the flaps. Lowering of the flaps will cause a nose down pitching condition which can be easily corrected by application of nose up trim. Conversely, retraction of the flaps from a trimmed flight condition will cause a nose up pitching condition. Use of the flaps should always be within the operational limits established in SECTION II. The flaps are very effective in lowering landing speed and can be used to slow the aircraft to approach speeds.

### IN-STRUMENT PANEL

The instrument panel is designed to provide functional grouping of all flight, radio, engine instruments, switches and controls required to operate various systems. All flight instruments are grouped on the shock-mounted panel directly in front of the pilot. The radio console and annunciator panel is at the center of the instrument panel. Power plant instruments are grouped on the co-pilot's panel. Flap, stabilizer and cowl flap position indicators are on the lower center console.

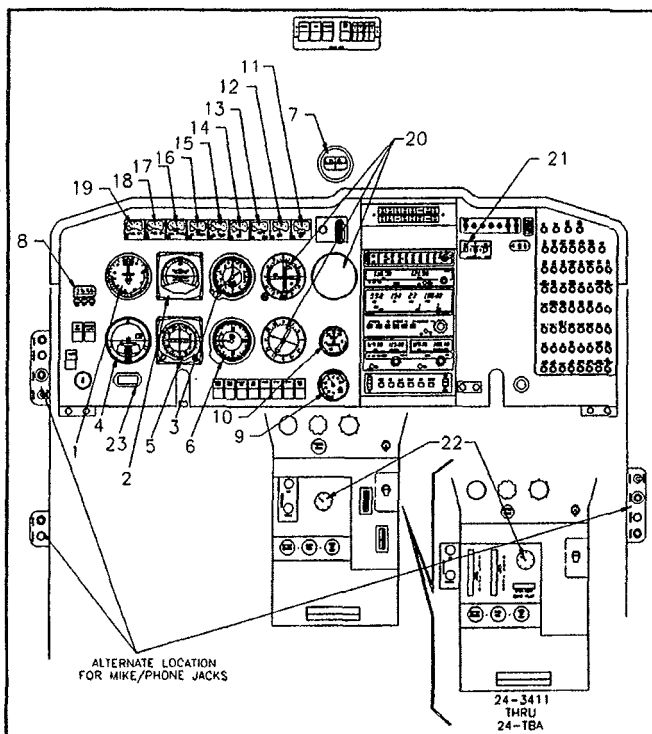


FIGURE 7-1 - FLIGHT PANEL AND INSTRUMENTS



### FLIGHT PANEL & INSTRUMENTS

Flight instruments operate: (1) by air drawn into an evacuated case, (2) by barometric pressure or barometric-impact air pressure differences, (3) by variations in electric current due to mechanically varied resistance, or (4) by reference to the earth's magnetic field.

#### **1. AIRSPEED INDICATOR.**

The airspeed indicator registers airspeed in knots. The air pressure difference between the pitot tube and the static ports on each side of the tailcone operates the airspeed indicator.

#### **2. ATTITUDE INDICATOR (if installed).**

The vacuum-powered attitude indicator indicates aircraft attitude relative to straight- and-level flight. Bank attitude is presented by a pointer at the top of the indicator relative to the bank scale which is marked in increments of 10 degrees, 20 degrees, 30 degrees, 45 degrees, 60 degrees and 90 degrees either side of the center mark. Pitch attitude is presented by an airplane silhouette in relation to the horizon bar. The knob at the bottom of the instrument is provided for adjustment of the silhouette to the horizon bar for a more accurate flight attitude indication. Vacuum pressure for satisfactory operation is 4.25 + /-.25 to 5.50 + .2/-.0 IN Hg. Various styles may be installed at this position.

#### **3. ALTIMETER.**

The altimeter operates by absolute pressure, and converts barometric pressure to altitude reading in feet above mean sea level. The altimeter has a fixed dial with three pointers to indicate hundreds, thousands, and tens-of-thousands of feet. Barometric pressure is sensed through the static ports. A knob adjusts a movable dial, behind a small window in the face of the main dial, to indicate local barometric pressure and to correct the altimeter reading for prevailing conditions.

#### **4. TURN COORDINATOR (if installed).**

The turn coordinator takes the place of a turn and bank indicator and operates from an electric power source. The turn coordinator is independent of the flight reference gyros. The turn coordinator displays variations in roll and yaw to the pilot by means of a damped miniature aircraft silhouette display - this provides the pilot with the essential information to execute a "proper turn".

#### **5. GYROSCOPIC HEADING INDICATOR (Directional Gyro) (if installed).**

The directional gyro displays airplane heading on a compass card in relation to a fixed simulated airplane image and index. The directional indicator will precess slightly over a period of time. Therefore, the compass card should be set in accordance with the magnetic compass just prior to takeoff, and occasionally re-adjusted on extended flights. A knob on the lower left edge of the instrument is used to adjust the compass card to correct for any precession. Vacuum pressure for satisfactory operation is the same as the artificial horizon/attitude indicator.

#### **6. VERTICAL SPEED INDICATOR.**

The vertical speed indicator converts barometric pressure changes in the static lines to aircraft ascent or descent rate readings in feet per minute. This indicator has a single needle and two adjoining scales that read from 0 to 2000 feet per minute. The recessed, slotted screw at the lower left of the instrument case is used to "zero" the indicator when the aircraft is on the ground.

#### **7. MAGNETIC COMPASS.**

The magnetic compass is liquid-filled, with expansion provisions to compensate for temperature changes. It is equipped with compensating magnets adjustable from the front of the case. Access to the compass light and the compensating magnets is provided by pivoted covers. No maintenance is required on the compass except an occasional check on a compass rose with adjustment of the compensation card, if necessary, and replacement of the lamp.

#### **8. CLOCK. (Mechanical Clock -Optional)**

The electric, digital, panel mounted clock, may be used/set by the following procedures. Three buttons are located below the digital face of the clock and identified as START/STOP, CLEAR & MODE.

Normal or Elapsed time.

MODE - Push to switch from normal time to elapsed time.

START/STOP - Push to start or stop seconds when in elapsed time mode.

## SECTION VII AIRPLANE AND SYSTEMS DESCRIPTION

MOONEY  
M20J

**CLEAR** - Push to reset elapsed time to Zero.

**Set Hours, Minutes or 24 vs 12 hour time**

Push and Hold **CLEAR** buttons for 4-5 seconds to enter clock mode; 12 H or 24 H will flash.

Push both **START/STOP** button to select either 12 or 24 hour mode.

Push **CLEAR** to select hours (hours flashing/minutes steady) or minutes (hour steady/minutes flashing) for setting.

Push **START/STOP** to increase either hours or minutes until desired time is set.

In 12 H mode set PM (P) if necessary.

Push **MODE** to return to normal time.

### 9. MANIFOLD PRESSURE.

The manifold pressure gauge is of the direct reading type and is mounted below the engine tachometer. The gauge is calibrated in inches of mercury and indicates the pressure in the induction air manifold.

### 10. TACHOMETER - ELECTRIC

An electric meter which counts pulses generated by a hall effect generator driven by the tachometer pad. The instrument is calibrated in revolutions per minute (RPM).

### 11. EGT GAUGE.

A thermocouple probe in No. 3 exhaust pipe transmits temperature variations to the indicator which serves as a visual aid during leaning. Exhaust gas temperature varies with fuel-air ratio, manifold pressure and RPM.

### 12. CYLINDER HEAD TEMPERATURE (CHT).

The cylinder head temperature indications are controlled by an electrical resistance type temperature probe installed in the number three cylinder, and receives power from the aircraft electrical system. The instrument is calibrated in degrees F.

### 13. AMMETER. (Push for Volts)

The ammeter indicates current flow, in amperes, from the alternator to the battery, or from the battery to the electrical system. With the engine operating, and master switch "ON", the ammeter indicates the rate of charge being applied to the battery. In the event of an alternator malfunction, or if the electrical load demand exceeds the alternator output, the ammeter will indicate the discharge rate of the battery.

### 14. OAT.

The OAT provides free stream outside air temperature in ° C.

### 15. OIL TEMPERATURE GAUGE.

The oil temperature gauge is an electric instrument connected electrically to a temperature bulb in the engine. Temperature changes of the engine oil change the electrical resistance in the bulb thereby allowing more or less current to flow through the indicating gauge. The instrument is calibrated in degrees F.

### 16. OIL PRESSURE GAUGE.

The electric oil pressure gauge uses a transducer which varies resistance with pressure as reference.

### 17. FUEL PRESSURE GAUGE.

The fuel pressure gauge is of the electric type and uses a transducer as reference. It is calibrated in pounds per square inch and indicates the pressure to the fuel injector.

### 18 & 19. FUEL QUANTITY INDICATORS.

The fuel quantity indicators are used in conjunction with two float-operated variable-resistance transmitters in each fuel tank. The tank-full position of the transmitter float produces a maximum resistance through the transmitters, permitting minimum current flow through fuel quantity indicator and maximum pointer deflection. The instruments are calibrated in gallons (Liters Optional) of fuel.

### 20. AVIONICS/RADIO INSTRUMENTS

Refer to SECTION IX for descriptions of the radio configurations installed in this aircraft.

### 21. INTER-COM SYSTEM (if installed) (Various systems may be installed)

## 22. SUCTION (VACUUM) GAUGE

The SUCTION GAUGE provides an indication of inches of vacuum to operate vacuum instruments for reliable flight information.

## 23. FUEL FLOW SWITCH & PANEL (IF INSTALLED)

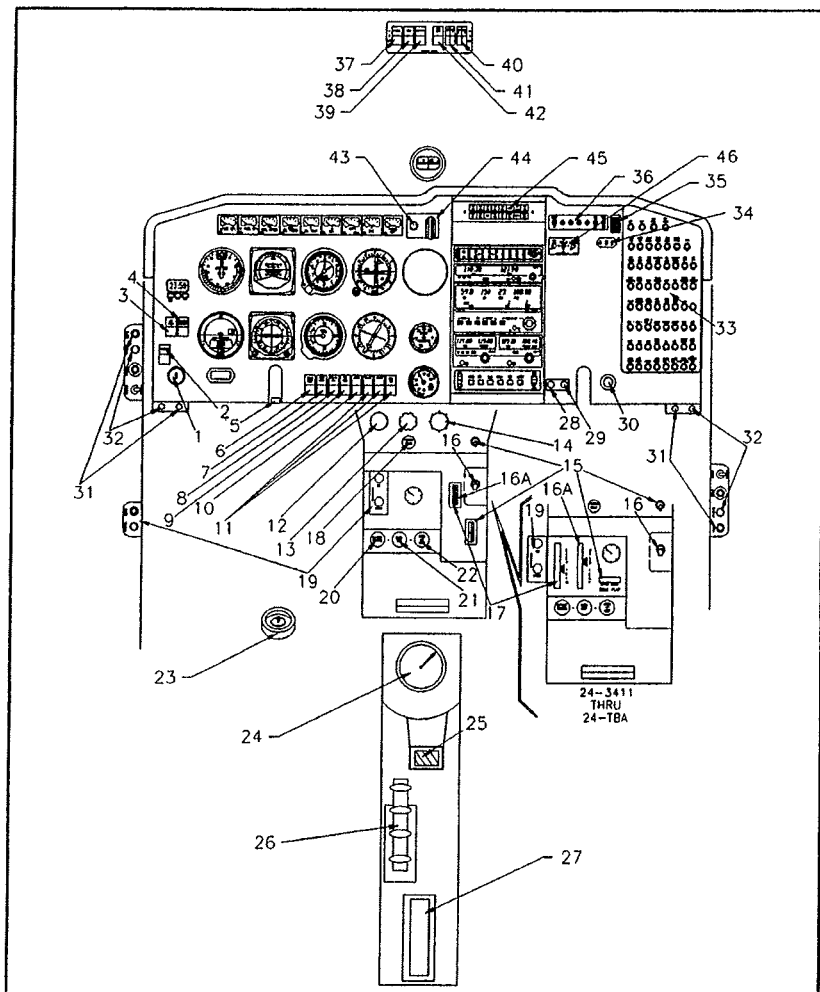


FIGURE 7-2 - SWITCHES AND CONTROLS

## SWITCHES AND CONTROLS

### 1. MAGNETO/STARTER SWITCH

The magneto/starter switch combines both ignition and starting functions. Turning ignition key clockwise through R, L, and BOTH to START position and then pushing forward on the key and receptacle engages the starter. Releasing the key when the engine starts allows the switch to return, by spring action, to the BOTH position. In the OFF position both magnetos are grounded. At the R position the left magneto grounds. At the L position the right magneto grounds. At either the START or BOTH position, both magnetos are hot and the ignition system is ON.

**2. MASTER SWITCH**

The Master Switch operates the battery relay which controls battery power to the main ship bus bar. This switch cuts the alternator field power from main bus to the alternator. This switch also cuts off all ship power except the electric clock and cabin light rocker switches (or if equipped, door light switches).

**3. ALTERNATOR FIELD SWITCH**

This switch controls the alternator field power from main bus and Master Switch to the alternator.

**4. RADIO MASTER**

The Radio Master Switch/Circuit Breaker operates a relay supplying power to the radio buss bars. Since the relay is energized to cut the power to the radio buss, failure of the relay coil will still allow power to the radio buss. Energizing the starter automatically energizes the relay and disconnects the radios from the buss.

**5. ALTERNATE STATIC SOURCE VALVE**

Pulling alternate static source valve to full aft position changes the source of static air for the altimeter, airspeed indicator and rate-of-climb indicator from outside of the aircraft to cabin interior. Airspeed and altimeter readings are affected slightly when alternate static source is used (Refer to SECTION V).

**6. FUEL BOOST PUMP SWITCH**

Pushing ON or OFF the switch/circuit breaker controls operation of the electric fuel boost pump. Use of the fuel boost pump should be limited to starting, takeoff, switching fuel tanks, landing and emergency situations. The fuel boost pump is capable of supplying fuel to the engine at the rated quantities and pressures to permit the engine to develop rated power.

**7. STANDBY-VACUUM (if installed)**

**8. PITOT HEAT SWITCH/CIRCUIT BREAKER**

Pushing ON the pitot heat combination switch/circuit breaker turns on the heating elements within the pitot tube. Should a short occur, the combination switch/circuit breaker will automatically trip to the OFF position.

**9. PROPELLER DE-ICE (if installed)**

**10. OPTIONAL/ELECTRIC TRIM SWITCH/CIRCUIT BREAKER (IF INSTALLED)**

This switch is normally left in the ON position and serves as both a circuit protector and as a master disconnect for the electric trim system in the event of a malfunction.

**11. SPARE LEGEND**

USED FOR SWITCHES AS NEEDED FOR OPTIONAL AIRCRAFT CONFIGURATION.  
(Optional equipment switch locations may vary).

**12. THROTTLE CONTROL**

Pushing the throttle control forward increases the manifold pressure thereby increasing the engine power. Pulling the control aft decreases the manifold pressure thereby decreasing the engine power.

**13. PROPELLER CONTROL**

Pushing the propeller control forward increases engine RPM; pulling the control aft decreases the engine RPM. The control is of the vernier type and fine adjustments of RPM can be obtained by turning the knob clockwise to increase RPM and counterclockwise to decrease RPM. The knob should not be turned in any closer than 1/8" to the panel nut face.

**14. MIXTURE CONTROL**

The mixture control allows the pilot to adjust the fuel-air ratio (mixture) of the engine. Pushing the control forward richens the mixture. Pulling the control full aft closes the idle cutoff valve shutting down the engine. The control is of the vernier type and fine adjustments of the mixture can be obtained by turning the knob clockwise to richen the mixture, and counterclockwise to lean. The knob should not be turned in any closer than 1/8" to the panel nut face.

#### 15. COWL FLAPS SWITCH AND POSITION INDICATOR

The cowl flaps switch activates the electric cowl flap actuator (motor) to open and close both cowl flaps. Placing switch in lower position opens cowl flaps. This allows additional airflow to properly cool engine during ground operations and during lowspeed, high power climbs. During cruise, placing switch in upper position closes both cowl flaps, reducing airflow through engine compartment. When "full open" or "closed" is selected the actuator will automatically shut off when cowl flaps have reached that position. The switch will remain in that selected position. To keep oil and cylinder head temperatures within normal operating ranges (GREEN ARC of temperature gauges) cowl flaps may be positioned at any angle from "closed" to "full open". This may be accomplished by momentarily positioning the switch in either the upper or lower position. When cowl flaps have reached a desired intermediate position, as shown on the indicator, place switch to center (OFF) position.

#### 16. WING FLAP SWITCH

The wing flap switch, in a recess on the right of the console, operates the electrically actuated wide span wing flaps. The flap switch incorporates a pre-select feature for TAKEOFF and FULL DOWN positions. Move switch down to first detent position to obtain TAKEOFF flaps (15°). Move switch to full down position to select FULL DOWN flaps (33°). When flap switch is moved UP to either TAKEOFF position or FULL UP position the flaps will retract to the selected position.

~~~~~  
~ CAUTION ~

Placing switch in the UP position retracts the flaps completely.

#### 16A. WING FLAP POSITION INDICATOR

Wing flap position is mechanically indicated via a cable mounted directly to the flap jackshaft (24-3374 thru 24-3410) or thru a potentiometer which controls an LED display (24-3411 thru 24-TBA) on the console, indicates selected flap position. The intermediate mark in the pointer range is the flap TAKEOFF setting (15°).

#### 17. TRIM POSITION INDICATOR

Stabilizer trim position indicator is mechanically activated through a cable assembly attached to the trim wheel mechanism (24-3374 thru 24-3410) or a potentiometer which controls an LED display (24-3411 thru 24-TBA). Trim position indications are shown on the console. Electric trim is optional.

#### 18. PARKING BRAKE CONTROL

Depressing the brake pedals and pulling the parking brake control sets the parking brake. Pushing in the parking brake control releases the parking brake.

#### 19. MIC & PHONE JACK (AUXILIARY/EMERGENCY) (ALTERNATE LOCATION SHOWN)

#### 20. CABIN VENT CONTROL (FRESH AIR)

Pulling the cabin vent control opens valve in air box (located on firewall) to allow cooling air from right side cabin air inlet duct on airplane to enter cabin through console distribution duct. Optimum use of the cabin vent control is described in the Cabin Environment Section.

#### 21. CABIN HEAT CONTROL

Pulling the cabin heat control routes heated air into cabin. To lower cabin temperature the cabin heat control is pushed forward toward the OFF position. Optimum use of the cabin heat control is described in the Cabin Environment Section.

#### 22. DEFROST CONTROL

Pulling the defrost control decreases air flow to the lower cabin and increases air flow to the windshield in the front of the glareshield area. Optimum use of the defrost control is described in the Cabin Environment Section. The optional blower motor switch is activated when the control is pulled aft. This turns on a fan within the ventilation system to move more air over the windshield.

#### 23. GASCOLATOR

The gascolator, located left of the console on the floorboard, allows pilot to drain condensed water or any sediment from the lowest point in fuel system. To activate the gascolator drain, pull ring upward; to stop drainage, release ring.

## **SECTION VII AIRPLANE AND SYSTEMS DESCRIPTION**

**MOONEY  
M20J**

### **24. FUEL SELECTOR VALVE**

The fuel selector valve located on the floorboard is a three-position valve which allows pilot to select either the left or right fuel tank. Turning the valve to **OFF** shuts off all fuel to the engine. At full throttle the engine will stop from fuel starvation in 2 to 3 seconds.

### **25. GEAR DOWN POSITION INDICATOR (FLOORBOARD)**

The illuminated gear-down position indicator at the back of fuel selector pan, aft of center console, has two marks that align when the landing gear is down and illuminates when the green **GEAR DOWN** light is ON. A red-white striped decal shows when landing gear is **NOT** in the down position.

### **26. TRIM CONTROL WHEEL**

Rotating trim control wheel forward lowers the nose; rearward rotation raises the nose of the aircraft.

### **27. LANDING GEAR EMERGENCY EXTENSION HANDLE**

Release clip latch at forward end of handle and rotate handle aft to expose "T" handle. Pull "T" handle 12 to 20 pulls to extend landing gear. Refer to Section III for emergency landing gear extension procedures.

### **28. PANEL LIGHT SWITCH AND DIMMER**

Turning panel light switch knob clockwise turns the instrument lights located in the glare-shield ON. Continued turning clockwise increases light intensity.

### **29. RADIO LIGHT SWITCH AND DIMMER**

Turning radio light switch knob clockwise turns the radio and indicator lights ON. Continued turning clockwise increases light intensity. This control also operates the internal instrument lights.

### **30. CIGAR LIGHTER**

### **31. MICROPHONE JACK**

### **32. HEADPHONE JACK**

### **33. CIRCUIT BREAKER PANEL (C/B positions may vary)**

Push-to-reset and push-pull circuit breakers automatically break the electrical current flow if a system receives an overload.

### **34. SLAVED COMPASS SWITCH (If installed)**

### **35. ELT ARM SWITCH (Description found elsewhere in this Section)**

### **36. OPTIONAL SWITCH PLACARD (VARIES WITH SYSTEMS INSTALLED)**

### **37. STROBE LIGHTSWITCH/CIRCUIT BREAKER**

Pushing **ON** the strobe light combination switch/circuit breaker turns on the wing tip and tail strobe lights. Should a short occur, the combination switch/circuit breaker will automatically trip to the **OFF** position.

### **38. NAVIGATION LIGHT SWITCH/CIRCUIT BREAKER**

Pushing **ON** the navigation light combination switch/circuit breaker turns on the wing tip and tail navigation lights. Should a short occur, the combination switch/circuit breaker will automatically trip to the **OFF** position.

### **39. BEACON (FLASHING OR ROTATING) (OPTIONAL)**

### **40 & 41. LANDING/TAXI LIGHT SWITCHES (L & R)**

Select and **PUSH** split switches **ON** to turn desired set of lights on. Push switches **OFF** to turn desired set of lights off. Lights should be operated only for short time periods while not in flight to preclude overheating of lamp. Overload protection is achieved by circuit breakers in the panel.

### **42. RECOGNITION LIGHT SWITCH/CIRCUIT BREAKER (IF INSTALLED)**

Pushing **ON** the recognition light combination switch/circuit breaker turns on the recognition light. Should a short occur, the combination switch/circuit breaker will automatically trip to the **OFF** position.

#### 43. GEAR SAFETY OVERRIDE SWITCH (GR SAFETY BY PASS)

The gear safety override switch is a manual means of electrically by-passing the Airspeed Safety Switch. In the event the landing gear switch is inadvertently placed in the gear-up position, the gear Airspeed Safety Switch prevents the gear being retracted before takeoff speed of approximately 60 + 1-5 KIAS is reached. To retract landing gear at a lower airspeed, the GR SAFETY BY PASS switch may be pressed until landing gear is completely retracted.

~~~~~  
~ CAUTION ~  
~~~~~

The activation of the landing gear safety override switch overrides the safety features of the airspeed safety switch and can cause landing gear to start retracting while aircraft is on the ground.

#### 44. LANDING GEAR SWITCH

The electric gear switch, identifiable by its wheel shaped knob, is a two-position switch. Pulling aft and lowering knob lowers landing gear while pulling aft and raising knob raises landing gear.

#### NOTE

Failure to "Pull" knob out prior to movement may result in a broken switch.

#### 45. ANNUNCIATOR PANEL

See description of functions elsewhere in this Section.

#### 46. INTERCOM (Optional)

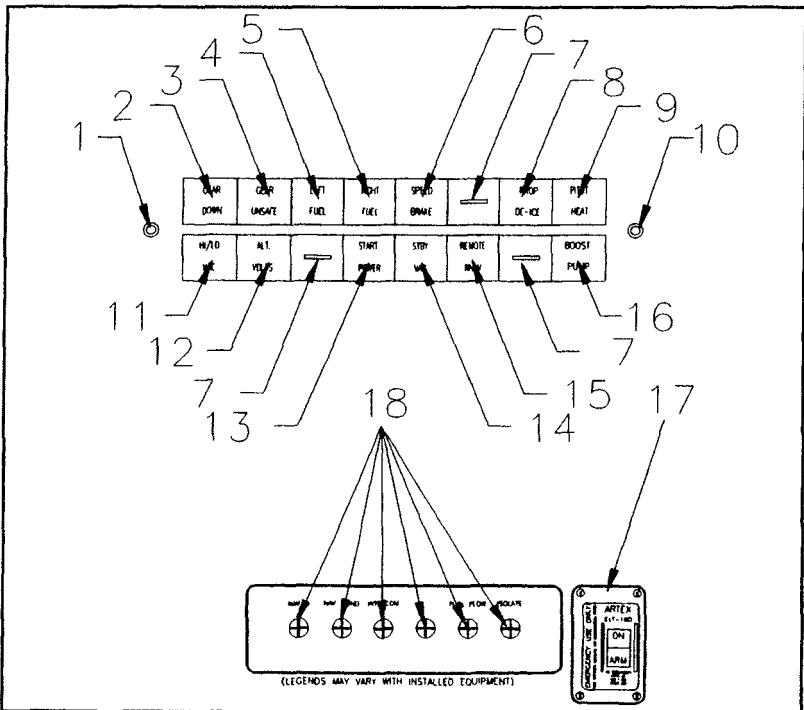


FIGURE 7-3 - ANNUNCIATOR AND SWITCH PANELS

**ANNUNCIATOR AND SWITCH PANELS (See Figure 7-3)**

**1. PRESS-TO-TEST SWITCH**

Press RED press-to-test switch (3-5 sec.) with Master Switch ON to illuminate annunciator light bulbs (some annunciator legends may not be active, see descriptions below). Defective bulbs should be replaced prior to flight.

**2 & 3. GEAR DOWN and GEAR UNSAFE - GEAR SAFETY INDICATORS**

The GREEN "GEAR DN" light and a RED "GEAR UNSAFE" light provide visual landing gear position signals. The green light (GEAR DN) shows continuously when the gear is fully extended. With the navigation lights on, the GEAR DN light is dim for night operation. All landing gear lights are out when the gear is fully retracted. The GEAR UNSAFE light is on during transition between landing gear fully extended and landing gear fully retracted position.

**4 & 5. LEFT FUEL and RIGHT FUEL - FUEL LOW INDICATORS**

LEFT and/or RIGHT, RED, FUEL LOW annunciator light comes on when there is a 2-1/2 to 3 gallons (9.5 to 11.4 liters) of useable fuel remaining in the respective tanks. The Press to Test Switch must be held for 3-5 seconds for Low Fuel Warning circuit to activate.

**6. SPEED BRAKE (If Installed)**

The "SPEED BRAKE" light is illuminated AMBER when the wheel mounted switch has been pushed once to the ON position and will go out when the switch is pushed a second time to the OFF position. The speed brakes should deploy UP in the ON position and return to the flush position when pushed OFF. The speed brakes may be vacuum or electrically operated depending upon the system installed.

**7. SPARE LEGENDS**

Used for optional equipment as needed for aircraft configuration.

**8. PROPELLER DE-ICE (If Installed)**

The "PROP DE-ICE" light is illuminated BLUE when the rocker switch is pushed ON. The light will cycle ON & OFF as the system cycles and will go out when the switch is pushed OFF.

**9. PITOT HEAT**

The "PITOT HEAT" light illuminates BLUE when the switch is pushed ON and the heating element inside the pitot heat tube is energized. Some foreign aircraft illuminate AMBER when not ON and operating.

**10. DIM SWITCH**

The DIM switch may be activated when the low fuel lights come on bright. The switch will dim both low fuel lights but will not turn them off. To restore the display to bright, press the test switch.

**11. HI/LO VAC - VACUUM MALFUNCTION INDICATOR**

The RED HI/LO VAC annunciator light indicates a malfunction or improper adjustment of vacuum system. Vacuum is available for operation of the attitude gyro, and also the directional gyro, and will be shown in inches of mercury. The designated vacuum range is 4.25 to 5.5 in. Hg. The HI/LO VAC light will blink when vacuum is below 4.25 in. Hg and gives a steady light when vacuum is above 5.5 in. Hg. In either case the gyros should not be considered reliable during this warning time. Refer to Airborne Service Letter No. 31, located at rear of Section X.

**12. ALT VOLTS - VOLTAGE IRREGULARITY INDICATOR**

The RED ALT VOLTS annunciator light comes on designating an improper voltage supply. A blinking light designates no voltage from the alternator; a steady light indicates over voltage or a tripped voltage relay.

**13. START POWER - STARTER ENGAGED INDICATOR**

The RED "START POWER" light illuminates when starter relay is activated and starter is engaged. Shut engine OFF as soon as practicable. Start Power should illuminate for engine start and MUST extinguish when starter switch is released. This light illuminates when Press-to-Test switch is pushed.



**14. STBY VAC - STAND-BY VACUUM ON INDICATOR (If Installed)**

The "STBY VAC" light is illuminated AMBER when the rocker switch is pushed ON. The light will go out when the switch is pushed OFF.

**15. REMOTE RNAV - REMOTE AREA NAVIGATION (If RNAV installed)**

The "REMOTE RNAV" light is illuminated AMBER anytime the DME is not slaved to the RNAV.

**16. BOOST PUMP**

Illuminates BLUE when electrical power is supplied to auxiliary fuel boost pump for normal takeoffs and landings and when ON due to failure of engine driven fuel pump.

**17. EMERGENCY LOCATOR TRANSMITTER (ELT) SWITCH**

The ELT switch manually activates the emergency locator transmitter located in the tail-cone. Reference should be made to the Emergency Locator Transmitter description in this section for proper and lawful usage of ELT. Switch configuration (and location may vary).

**18. OPTIONAL SWITCH PLACARD (Varies with installed equipment)**

**GROUND CONTROL**

**NOSE GEAR STEERING**

The nose gear steering system consists of the steering horn on the gear leg linked to the rudder pedal torque tube by push-pull tubes and bellcranks. Gear retraction automatically disengages steering mechanism from nose wheel and centers nose wheel for entry into wheelwell.

**TAXIING AND GROUND HANDLING**

The aircraft can be easily taxied with minimum use of brakes. Minimum turning radius is 41 feet without use of brakes. A MANUAL tow bar can be used to ground handle aircraft. Care must be used to not swivel nose wheel beyond 14 degrees from center. Adjustable steering stops are incorporated on nose gear leg assembly.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Exceeding steering swivel angle limits may cause structural damage.

**LANDING GEAR**

**CONSTRUCTION**

The landing gear legs are constructed of chrome-molybdenum tubular steel, heat-treated for greater strength and wear resistance. Main gear leg attaching points pivot in bearing surfaces on forward and stub spar. The nose gear mounts on the cabin tubular steel frame. Rubber discs in all gear leg assemblies absorb the shock of taxiing and landing.

**RETRACTION SYSTEM**

The landing gear is electrically retracted and extended. The gear switch operates a landing gear actuator relay. Pulling the wheel-shaped knob out and moving it to the upper detent raises the gear. However, an Airspeed Safety Switch, mounted on the left hand, forward side panel, is incorporated in the electrical system to prevent landing gear retraction while on the ground and until a safe takeoff speed is reached, (approximately 60 + /- 5 KIAS). The up limit switch will stop the gear in its retracted position. Moving the control knob to its lower detent lowers the gear. The properly rigged down limit switch will stop the gear actuating motor when proper force has been exerted to hold the landing gear in the down-and-locked position. Bungee springs preload the retraction mechanism in an over-center position to assist in holding the gear down.

A landing gear safety bypass switch override is provided next to the gear switch should the gear fail to retract. Depressing and manually holding this switch bypasses the airspeed safety switch and allows the gear to retract.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Never rely on the safety switch to keep the gear down during taxi, takeoff or landing. Always make certain that the landing gear switch is in the down position during these operations.

**WHEEL BRAKES**

The main gear wheels incorporate self-adjusting disc-type hydraulic brakes. The pilot's rudder pedals have individual toe-actuated brake cylinders linked to the rudder pedals. Depressing the toe pedals and pulling parking brake control on console sets the brakes. Pushing parking brake control forward releases the brakes.

It is not advisable to set parking brake when brakes are overheated, after heavy braking or when outside temperatures are unusually high. Trapped hydraulic fluid may expand with heat and damage the system. Wheel chocks and tie-downs should be used for long-term parking.

**EMERGENCY EXTENSION SYSTEM**

A manual landing gear extension mechanism is provided to allow emergency lowering of landing gear. The control mechanism is located between and aft of pilot and co-pilot seats. The red lever must be released and pulled up (aft) to disengage actuator gear from the electric drive mechanism and engage the manual extension mechanism. The mechanism has a spring retracted pull cable which manually drives the electric gear actuator to extend the gear. 12-20 pulls are required to fully extend and lock the gear down. The electrical extension or retracting system will not operate if the manual extension lever is not properly positioned.

**WARNING SYSTEM**

The landing gear warning system consists of: 1) landing gear condition lights, GREEN for "GEAR DOWN" and RED for "GEAR UNSAFE", and 2) a warning horn activated when the gear is not down-and-locked and throttle is approximately 1/4 inch from idle position. The green light shows continuously when gear is fully extended. The red light shows whenever the gear is in transit or not locked down but is off when gear is fully retracted. A visual gear-position indicator, located on floorboard, aft of fuel selector, shows when landing gear is down when indicator marks align. The gear down light is dimmed when navigation lights are turned on.

**STEERING**

Rudder pedal action steers the nose wheel. Gear retraction relieves the rudder control system of its nose wheel steering and centers the wheel to permit retraction into nose wheel well. The minimum turning radius on the ground is 41 feet (12.3 m). Adjustable steering stops have been incorporated on nose gear leg assembly.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

The nose wheel must not be swiveled beyond 14° either side of center. To exceed these limits may cause structural damage.

**CABIN**

**BAGGAGE COMPARTMENT**

The baggage compartment is located aft of the rear passenger seat. The standard compartment has 15.3 cubic feet (.43 cu. m) of baggage or cargo space. A maximum of 120 pounds (54 Kg) may be loaded in this area. There are two pairs of floor tiedown straps provided. Children should not be allowed to occupy this space. Additional cargo space is available by removing rear seat bottom cushion and seat back cover (fold seat back forward and slide cover up and off frame; store as desired). To fold rear seat back down: Pull seat frame from pivot rods. Place pivot rods into portion of seat frame that carpet is attached to. Slide frame down until approximately bottomed out. Pull seat back release handle UP to move catch down. Pivot seat back forward and down into seat cushion cavity. Both seats can be folded down together or independent of each other. The hat rack compartment is restricted to 10 pounds (4.5 Kg).

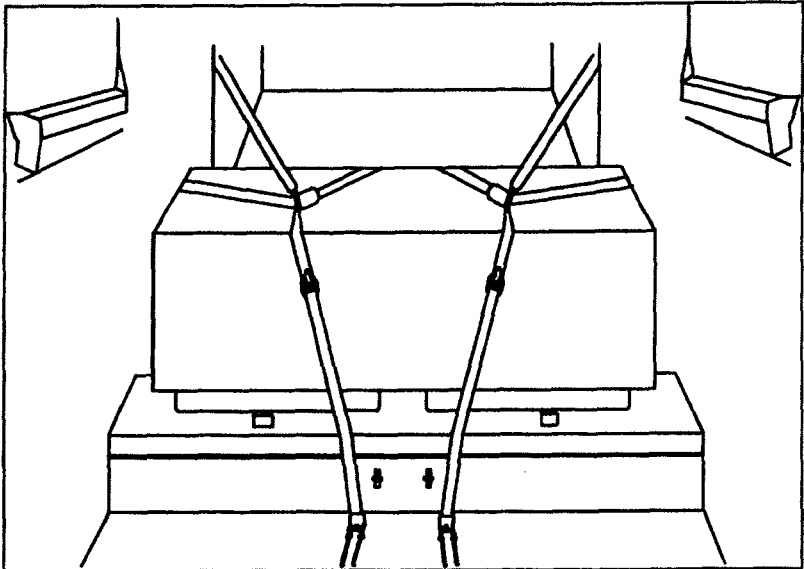


FIGURE 7-4 - CARGO RESTRAINT (TYPICAL)

#### CARGO RESTRAINT

The cargo tiedown adapter rings are to be inserted into holes provided in web of front seat rails. The cargo belts attach to these rings and to standard seat belt harness to retain cargo. Refer to Figure 7-4 for typical restraint.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Proper loading and retention of cargo is mandatory. See Loading Computation Graph, SECTION VI.

#### SEATS

The front seats are individually mounted and may be adjusted fore and aft to fit individual comfort preferences. The front seat back may be adjusted by turning hand crank until seat back is in desired position.

Both optional front seat configurations allow vertical seat height adjustment by turning a hand crank or knob to raise or lower the entire seat assembly.

The rear seat backs have four (4) adjustment positions. Each seat can be adjusted independent of the other by pulling up on respective release handles located on left or right of aircraft centerline on forward spar. This allows adjustment from approximately 10° to 40° recline position.

#### SEAT BELTS/SAFETY HARNESS

Safety restraints, if worn properly, (1 occupant per restraint) keep occupants firmly in their seats during T/O, landing, turbulent air, and during maneuvers. The belts are mechanically simple and comfortable to wear. They are attached to the seat, which can be moved without readjusting the belt. Inertial reel restraint systems are provided for the front seat occupants. Single point adjustment seatbelt/shoulder harnesses are provided for rear seat occupants. All restraint systems **MUST** be fastened for take-off and landing operations. It is recommended that all infants and small children below the weight of 40 lbs. and/or under the height of 40 inches be restrained in an approved child restraint system appropriate to their height & weight.

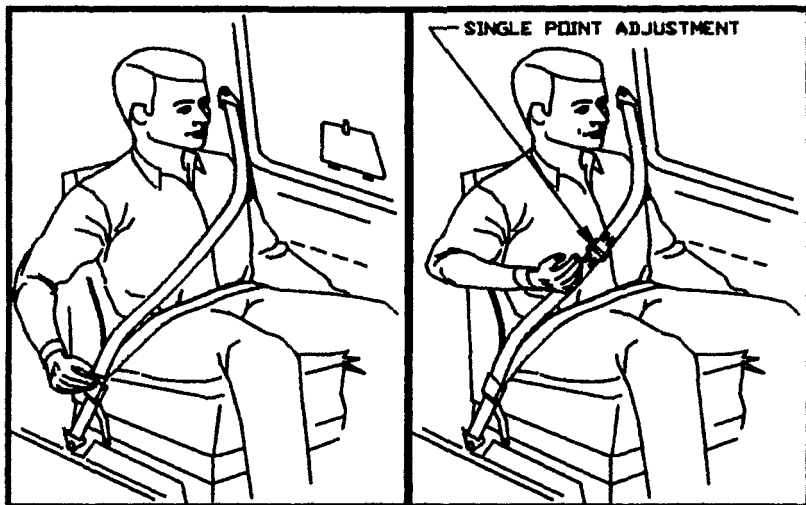


FIGURE 7-5 - INERTIAL REEL  
(FRONT)

FIGURE 7-6 - SINGLE POINT  
HARNESS (REAR)

The single diagonal type inertial reel harness is designed so the chest strap crosses diagonally from the out-board shoulder to a point as low on the inboard hip as possible and then across occupant's lap. This diagonal configuration places the body center-of-gravity inside the triangle formed by the chest strap and lap belt. The lap belt should be comfortably tight as the inertial reel mechanism allows necessary belt length out to attach to buckle point on inboard side of seat. As a result the body is restricted from rolling out toward the unrestricted shoulder, or "open" side of the harness, upon forward impact. Refer to Figure 7-5 & 7-6 for proper seat belt/harness adjustment.

## **DOORS, WINDOWS & EXITS**

### **CABIN DOOR**

Access to the cabin is provided by a door located on the right side of the fuselage. This door has inside and outside operating handles. The outside door handle can be locked with a key specifically provided for it. The door has two latching mechanisms, one located at the top of door and one at the aft, center of door.

Should the door come open in flight, the flying qualities of the aircraft will not be affected. Procedures for closing the door in flight are contained in SECTION III.

### **PILOT'S WINDOW**

A pilot's storm window is located in the left main cabin window. This window is generally used for fresh air for prolonged ground operations or as required during adverse weather conditions. The window should not be opened in flight above 132 KIAS.

### **EMERGENCY EXITS**

The CABIN DOOR is the primary emergency exit from the cabin. If a situation exists where a probable off airport landing will occur, the door should be unlatched to prevent jamming during the landing.

The BAGGAGE COMPARTMENT ACCESS DOOR can be used as a means of auxiliary exit. The door can be opened from the inside even though locked. To open, pull off small ABS cover, pull out the latch pin and lift red handle. To verify re-engagement of latching mechanism; open outside handle fully, close inside handle to engage pin in cam slide of latch mechanism; insert locking pin into hole of clip/pin assembly to hold red handle down. Replace ABS cover. Operate outside handle in normal method.

## **ENGINE**

### **GENERAL**

The engine installed in this aircraft is an **TEXTRON-Lycoming Model IO-360-A3B6** (or **IO-360-A3B6D**). The **IO-360** series engine is a four cylinder direct drive, horizontally opposed, air cooled engine of 361 cubic inches displacement.

The **IO-360-A3B6** engine incorporates two Slick magnetos and a **RSA-5AD1** Bendix fuel injector. The **IO-360-A3B6D** engine incorporates a Bendix **D4LN** series dual magneto.

This engine is normal rotation (clockwise) as viewed from the rear of the engine. A detailed specification listing of the engine is contained in **SECTION I**.

### **ENGINE CONTROLS**

Engine controls are centrally located, between pilot and co-pilot, on engine control console.

The **THROTTLE** control regulates manifold pressure. Pushing the **BLACK** knob forward increases the manifold pressure; pulling the knob aft decreases the manifold pressure.

The **PROPELLER** control, with its crowned **BLUE** knob, controls engine RPM through the propeller governor. Pushing the knob forward increases engine RPM; pulling the knob aft decreases RPM.

The **MIXTURE** control, with its **RED** fluted knob, establishes the fuel-air ratio (mixture). Pushing the knob full forward sets the mixture to full-rich, pulling the knob aft leans the mixture. Pulling the knob to its maximum aft travel position closes the idle cutoff valve, shutting down the engine. Precise mixture settings can be established by observing the **EGT** gauge on the pilot's right hand instrument panel while adjusting the mixture control.

The propeller and mixture controls are vernier types and fine adjustments can be made by turning knobs clockwise or counter-clockwise. Vernier controls should not be turned closer than 1/8" to the panel nut face. Rapid or large adjustments can be made by depressing button on end of control knob and reposition control as desired. The throttle has an integral friction device.

The **STANDARD** cowl flaps are mechanically actuated and may be positioned either **FULL OPEN** or **FULL CLOSED** for ground operations or partially opened to a trail position, during cruise, to maintain oil and cylinder head temperatures within their normal operating ranges. This may be accomplished by **PULLING** the control **AFT** approximately three inches.

The **OPTIONAL** cowl flaps are electrically actuated and may be placed in any position from **FULL OPEN** to **FULL CLOSED** to maintain oil and cylinder head temperatures within normal operating ranges. This may be accomplished by placing cowl flap switch, located under the mixture control, in the **UP** or **DOWN** position. Observe the position indicator, located on the center console below wing flap switch, until the desired position is obtained and then return cowl flap switch to **CENTER** or **OFF** position.

### **ENGINE INSTRUMENTS**

Engine instruments operate electrically, except manifold pressure and tachometer, through variations in resistance caused by pressure or temperature changes, or by variations in current output caused by varying engine RPM or alternator output. The mechanical tachometer operates by a cable/housing assembly mechanically linked to an adapter on engine case. Electric tachometer is optional.

Cylinder head temperature, oil pressure, and oil temperature gauges are located above the flight instruments. **EGT**, tachometer, manifold pressure and fuel flow are located to the right of the radio panel. Color arcs on instrument faces mark operating ranges. Proper interpretation of engine instrument readings is essential for selecting optimum control settings and for maintaining maximum cruise fuel economy. (Refer to **SECTION II** for Limitations).

### **ENGINE OPERATION AND CARE**

The life of the engine is determined by the care it receives. Maximum efficiency and engine service life can be expected when a good maintenance program is followed. Poor maintenance results in faulty engine performance and reduced service life. Efficient engine operation demands careful attention to cleanliness of air, fuel, oil and maintaining operating oil temperatures within required limits. Servicing of the engine should be accomplished by qualified personnel. Refer to current **TEXTRON-Lycoming Overhaul and Service Manuals and Bulletins**.

## SECTION VII AIRPLANE AND SYSTEMS DESCRIPTION

MOONEY  
M20J

The engine receives a run-in operation before leaving the factory. 75% power should be used for the first 25 hours to correctly condition the cylinder walls. Mineral oil (MIL-C-8529 Type II) should be used for the first oil & filter change period (25 Hours). Continue to use mineral oil for **50 operating hours** or until oil consumption stabilizes, then change to oil conforming to Lycoming Specification 301F.

The minimum grade aviation fuel for this engine is 100/130 or 100 LL. In case the grade required is not available, use a higher rating. Never use a lower rated fuel. Only aviation gasolines compounded to specifications ASTM-910 or MIL-G-5572E are approved. Operational procedures for adverse environmental conditions can be found in the engine operator's manual.

### OIL SYSTEM

The engine has a full-pressure wet sump oil system with an 8 quart (7.6 liters) capacity. A conventional dip stick is provided for determining the oil quantity.

An automatic bypass temperature control valve routes oil flow around the oil cooler when operating temperatures are below normal or when the cooling radiator is blocked. The propeller governor boosts engine oil pressure for operation of the propeller. It controls oil pressure going to the propeller hub to maintain or change propeller blade angles. This oil flows through the propeller shaft to reach the propeller.

### IGNITION SYSTEM

The IO-360-A3B6 engine incorporates two Slick magnetos.  
The IO-360-A3B6D engine incorporates a Bendix, dual magneto.

The right magneto fires the lower right and upper left spark plugs, and the left magneto fires the lower left and upper right spark plugs.

The magneto/starter switch has five positions: OFF, R (right), L (left), BOTH, and START. In the OFF position both magnetos are grounded. At the R position the left magneto grounds. At the L position the right magneto grounds. At the BOTH position both magnetos are HOT and the ignition system is on. For safety the ignition switch must be OFF and key removed when the engine is not running.

Turning the ignition switch to START and pushing IN closes the starter solenoid, engages starter and allows impulse coupling to automatically retard the magneto until the engine is at its retard firing position. The spring action of the impulse coupling is then released to spin the rotating magnet and produce the spark to fire the engine. After engine starts, the impulse coupling fly-weights do not engage due to centrifugal action. The coupling then acts as a straight drive and the magneto fires at normal firing position of the engine. The magneto/starter switch is spring loaded to return from START to the BOTH position when released.

~~~~~  
~ CAUTION ~  
~~~~~


**Do not operate starter in excess of 30 seconds or re-engage starter without allowing it time to cool.**

/////////  
// WARNING //  
/////////

**Do not turn propeller when magnetos are NOT grounded. Ground magneto points before removing switch wires or electrical plugs. All spark plug leads can be removed as an alternate safety measure.**

### AIR INDUCTION SYSTEM

Should the induction air filter clog, a spring-loaded door in the induction system will open, by induction vacuum, to allow alternate air (warm cowl air) to enter the engine. Refer to Figure 7-7 for illustration.

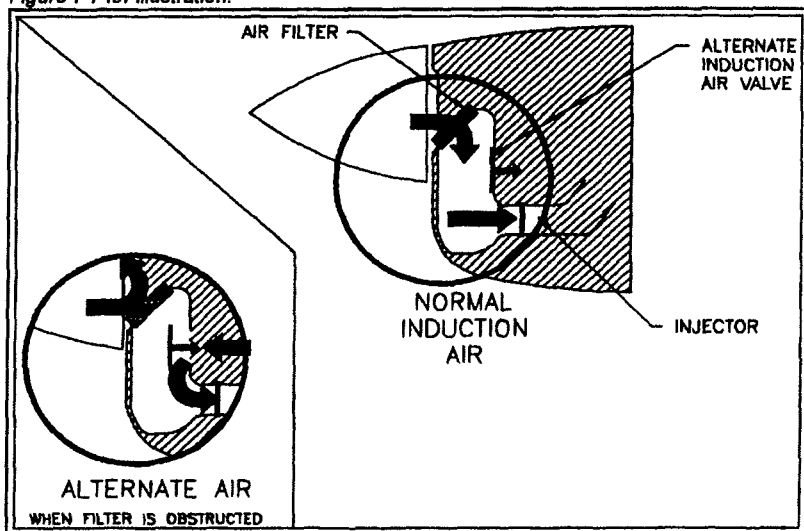

**FIGURE 7-7 - ENGINE AIR INDUCTION SYSTEM**

### **ENGINE COOLING**

The down-draft engine cooling system provides ground and inflight power plant cooling. Engine baffling directs air over and around cylinders and out cowl flap openings. Opening the cowl flaps allows proper air flow on the ground and during low-speed high-power climbs. On standard configuration pull cowl flap control AFT to open cowl flaps. Manual cowl flaps can be partially opened, during cruise, to a trail position, if necessary, to maintain oil and cylinder head temperature within normal operating range. Optional electric cowl flaps can be opened to any position between full closed and full open for proper cooling.

### **ENGINE STARTING SYSTEM**

Engine starting is provided by a 24 volt starter. Ignition is provided by impulse coupled magnetos. A starter engaged warning light (START POWER) is incorporated as standard equipment in the annunciator panel.

### ACCESSORIES

#### **VACUUM PUMP**

An engine-driven vacuum pump supplies suction for vacuum-operated gyroscopic flight instruments. Air entering vacuum-powered instruments is filtered; hence, sluggish or erratic operation of vacuum-driven instruments may indicate that a clogged vacuum filter element is preventing adequate air intake. A vacuum annunciator light is provided to monitor system operation. Refer to Airborne Service Letter No. 31, located at the rear of Section X if Airborne Vacuum Pump is installed.

#### **ALTERNATOR**

Electrical power is supplied by an engine driven 28 volt, 70 ampere alternator.

### PROPELLER

The propeller is an all metal, two blade, constant speed, governor regulated unit. Constant propeller rotational speed (RPM) is maintained by a balance of air load, oil pressure and engine rotational forces. The propeller governor regulates the flow of engine oil to a piston in the propeller dome. The piston is linked by a sliding rod and fork arrangement to propeller blades. Governor oil pressure acting on a piston and spring increase propeller blade pitch, thus decreasing propeller and engine RPM. As oil pressure is reduced, centrifugal twisting moments on propeller blades decrease propeller blade pitch and increase RPM. Control of these and other forces to maintain a constant RPM is provided by the propeller control in the cockpit.

The BLUE propeller control (with vernier feature) is linked by cable to the propeller governor and determines a wide range of in-flight RPM settings. Pushing the control forward selects higher RPM (lower pitch). Pulling the control aft selects lower RPM (higher pitch). When in flight, RPM should not fluctuate significantly, regardless of throttle setting. Rapid or large adjustments can be made by depressing button on end of control knob and reposition control as desired.

The propeller may be operated within the full range of RPM indicated by the tachometer, up to the red radial line. In cruise, always use power setting charts provided in SECTION V. On cold days during run-up, exercise propeller several times to flow warm oil into propeller hub. This assures propeller governing for takeoff.

### FUEL SYSTEM

Fuel is carried in two integrally sealed sections of forward, inboard area of wing. Total usable fuel capacity is 64 gallons (242.4 liters)(53.3 Imp. Gal.). Both tanks have fuel level indicators (tabs) visible through the filler ports. These indicators show the 25-gallon (94.7 liters)(20.8 Imp. Gals.) level in each tank. There are sump drains at the lowest point in each tank for taking fuel samples to check for sediment contamination or condensed water accumulation.

The recessed, three-position fuel selector valve handle, aft of console, on the floor allows the pilot to set the selector valve to LEFT tank, RIGHT tank, or OFF position. The gascolator, located to the left of the selector valve in the floorboard, is for draining condensed water and sediment from the lowest point in fuel lines before the first flight of the day and after each refueling.

Fuel feeds from one tank at a time to the selector valve and through the electric fuel pump (boost pump) enroute to the engine-driven pump and the fuel injector unit. The electric fuel pump is capable of supplying sufficient pressure and fuel flow for rated engine performance should the engine driven pump fail.

Electro/mechanical fuel-level transmitters in the tanks operate the fuel gauges. The Master Switch actuates the fuel quantity indicator system to maintain an indication of fuel remaining in each tank. The fuel pressure gauge registers fuel pressure in the line to the injector. Vents in each fuel tank allow for overflow and ventilation.

The optional, visual fuel quantity indicators located in each wing tank are to be used for PARTIAL FUEL LOADING only and not for preflight inspection purpose.

Fuel Flow (if installed) is presented digitally and indicates volume of fuel being used in GPH (pounds or liters optional), total fuel used or fuel remaining or time remaining. Optional fuel flow systems are available and each depicts information differently. Refer to appropriate operational procedure for specific data. A "Fuel Flow Memory" switch is located on the panel to shut off memory circuit if aircraft is to be stored for long periods of time.



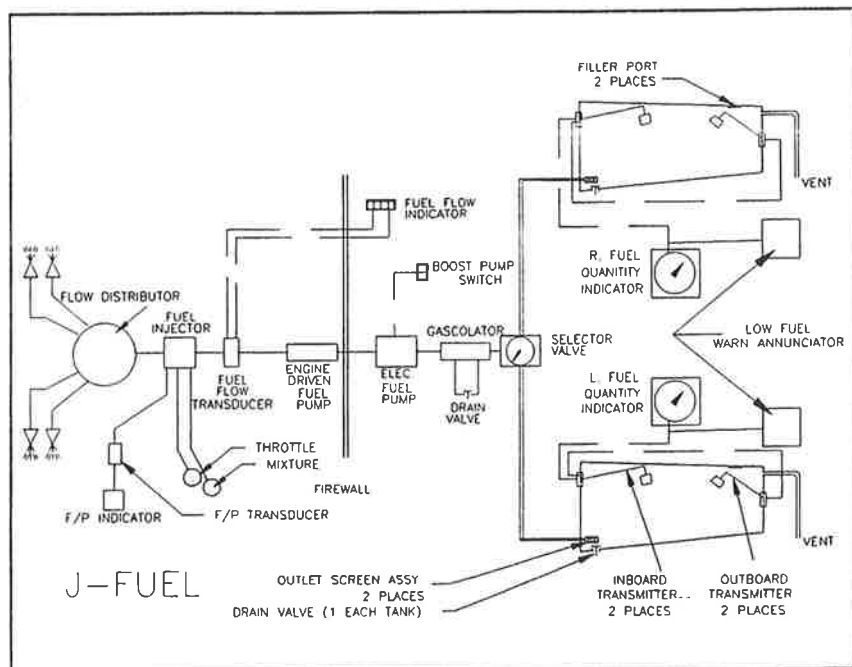


FIGURE 7-8 - FUEL SYSTEM SCHEMATIC

## ELECTRICAL SYSTEM

### ALTERNATOR & BATTERY

A 24 volt/10-ampere-hour storage battery (in the tailcone) and a 28 volt/70 ampere self-recycling alternator supply electrical power for equipment operation. The ammeter depicts battery charge/discharge rate. Low or "zero" alternator output will be shown as a discharge reading on the ammeter. A discharged battery will be indicated by a high-charge reading. The voltage regulator adjusts alternator output to current load while maintaining a constant voltage level. A voltage warning light illuminates steadily when voltage limits are exceeded and flashes when voltage is low.

~CAUTION~

Starting with an external power source should not be done while the battery is completely depleted. It will not accept the high charge rate from the alternator and electrical failure may result.

### ELECTRICAL SCHEMATIC (SEE FIGURE 7-9)

### CIRCUIT BREAKER PANEL (SEE FIGURE 7-10)

Push-pull or rocker switch-circuit breakers automatically break the electrical current flow if the system or unit receives an overload, thus preventing damage to electrical wiring. The main circuit breaker panel is in the extreme right panel. Figure 7-10 illustrates the main circuit breaker panel with its push-pull circuit breakers. All rocker switch-circuit breakers are at the bottom of the flight panel.

The alternator push-pull circuit breaker on the main breaker panel furnishes an emergency overload break between alternator and the main buss. Since the alternator is incapable of output in excess of the circuit breaker capacity, a tripped breaker normally indicates a fault

# SECTION VII AIRPLANE AND SYSTEMS DESCRIPTION

MOONEY  
M20J


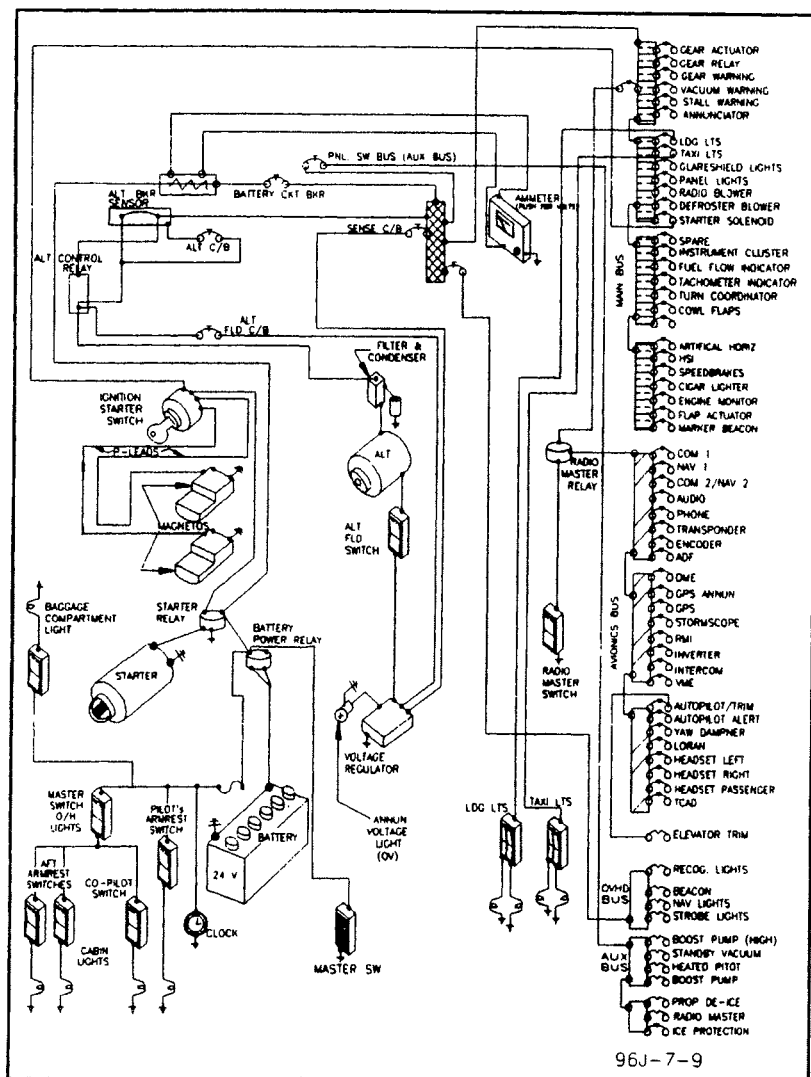


FIGURE 7-9 M20J ELECTRICAL SCHEMATIC

within the alternator. Since the alternator is then cut out of the power circuit, the storage battery supplies electrical power in steadily diminishing output with Master Switch ON. The alternator field has a push-pull circuit breaker to furnish an emergency break in the alternator field excitation circuit in the event of alternator or voltage regulator malfunction. If regulator output voltage exceeds limits, the red voltage warning light illuminates steadily and the alternator field circuit breaker will trip. Reset the circuit breaker to restore alternator power. The overvoltage annunciator light should extinguish. If overvoltage light comes on again, the alternator-field circuit breaker will trip and cut alternator output. Once again the battery is the only source of electrical power; therefore, all electrical equipment not

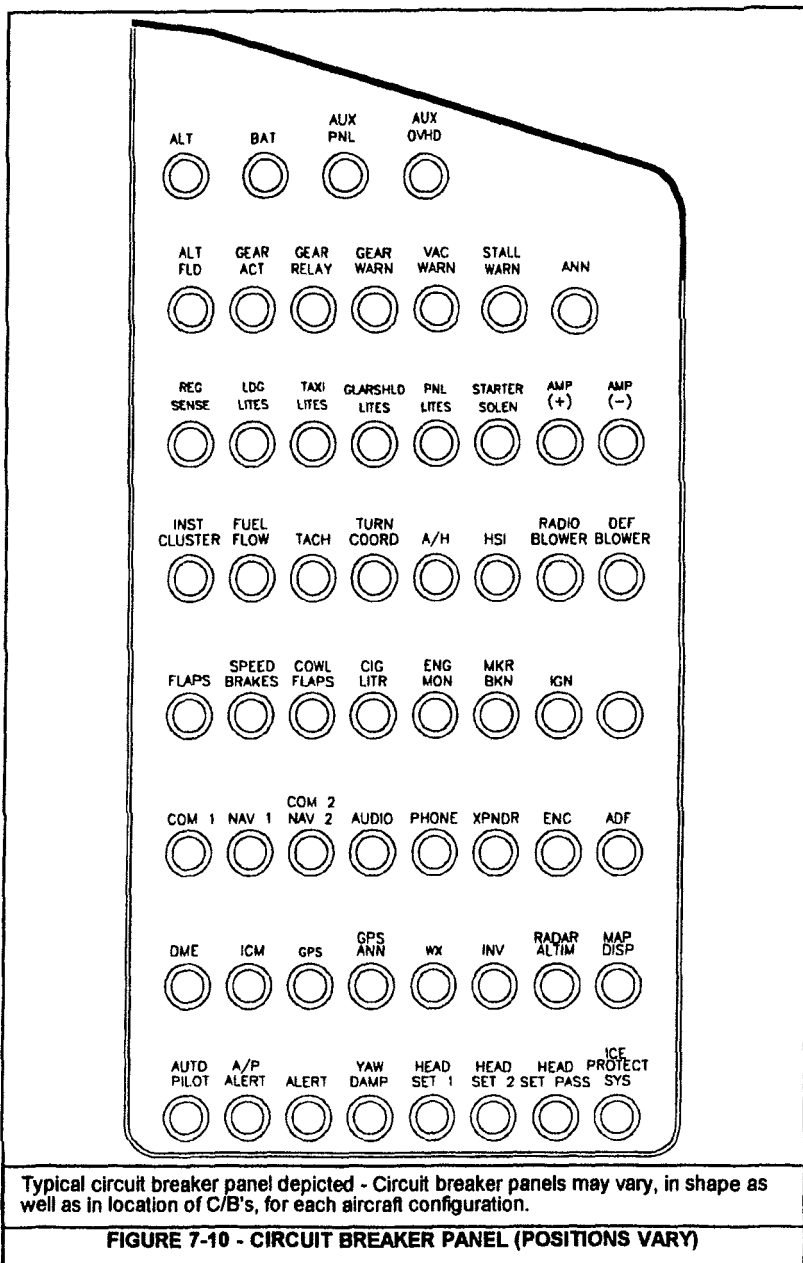

essential for flight should be turned off and the flight terminated as soon as practical to correct malfunction.

[ NOTE ]

The circuit breakers installed in the panel may vary depending on installed equipment per customer order.

ANNUNCIATOR PANEL

The landing gear lights, low fuel lights, voltage lights, vacuum warning light, starter engaged light and various optional equipment lights are grouped in standard annunciator panel. A test switch and dim switch, are also found in the panel. Each of the lights and switches are discussed elsewhere in this section.

ELT PANEL

The ELT Panel houses the remote ELT Switch. Provisions for other switches, as required for optional avionics installations are available on a separate Optional Switch Placard located on the upper right radio panel adjacent to the ELT switch. (See SECTION IX for Avionics Systems installed in this aircraft).

LIGHTING SYSTEM

INSTRUMENT & PLACARD LIGHTS

All placards are floodlighted by lights from glareshield. There are two rheostat knobs on right hand radio panel. The left control regulates intensity of placard lighting. The right control provides avionic and instrument lighting. Rotating knobs clockwise turns ON and increases light intensity.

MAP LIGHT

The map light switch is located on top of pilot's control wheel (co-pilot's optional).

CABIN LIGHTING

Four headliner light positions illuminate cabin. The forward lights are controlled by a BRIGHT-OFF-DIM switch located in headliner above co-pilot. The rear lights are controlled by another BRIGHT-OFF-DIM switch located overhead.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

The cabin light rocker switches are connected directly to battery.

EXTERIOR LIGHTING

Conventional navigation and high intensity strobe lights are installed on wing tips and on rudder trailing edge. The landing/taxi lights are installed in wing leading edges (left and right sides). All exterior lights are controlled by rocker type switches on lower right hand portion of pilots panel.

High intensity wing tip and tail strobe lights are required for night operation, but should be turned OFF when taxiing near other aircraft, or flying in fog or clouds. The conventional position lights **must be used** for all night operations.

Optional recognition lights may be installed in wing tips for use as desired or when requested by ATC.

**CABIN ENVIRONMENT**

HEATING & VENTILATION SYSTEMS

Four ventilating systems provide cabin environmental conditions that can be regulated to individual pilot and/or passenger preferences.

**FRESH AIR** - One source of outside air enters cabin through air ducts on both sides of fuselage. This outside air is always available through adjustable outlets (Wemacs) near pilot's and co-pilot's knees.

**CABIN VENT** - When the CABIN VENT control is pulled, fresh air from air duct on fuselage right side is supplied to the cabin (through mixer box and lower console duct) and/or to the defrost system.

**CABIN HEAT** - Fresh air, heated by engine exhaust muff, and cool air from air duct on co-pilot side can be individually controlled and mixed to desired temperatures by use of Cabin Heat and Cabin Vent controls. Pulling CABIN HEAT control supplies heat to cabin and defroster system. Hot and cold air may be mixed by adjusting both heat and vent controls. These controls may be adjusted anywhere between full open and full closed. Cabin heat will be more effective when cowl flaps are closed.

**OVERHEAD VENTILATION** - The cabin overhead ventilating system works independently of cabin heating and ventilating system. Fresh air enters a NACA duct on dorsal fin and is controlled by individual outlets above each seat. A master air vent control regulates flow of air through the individual overhead outlets. This control is located above the pilots seat back, on the overhead panel.

### WINDSHIELD DEFROSTING SYSTEM

The windshield defrost system takes air from the cabin air distribution system and distributes this over the windshield interior surface any time heat and/or fresh air controls are

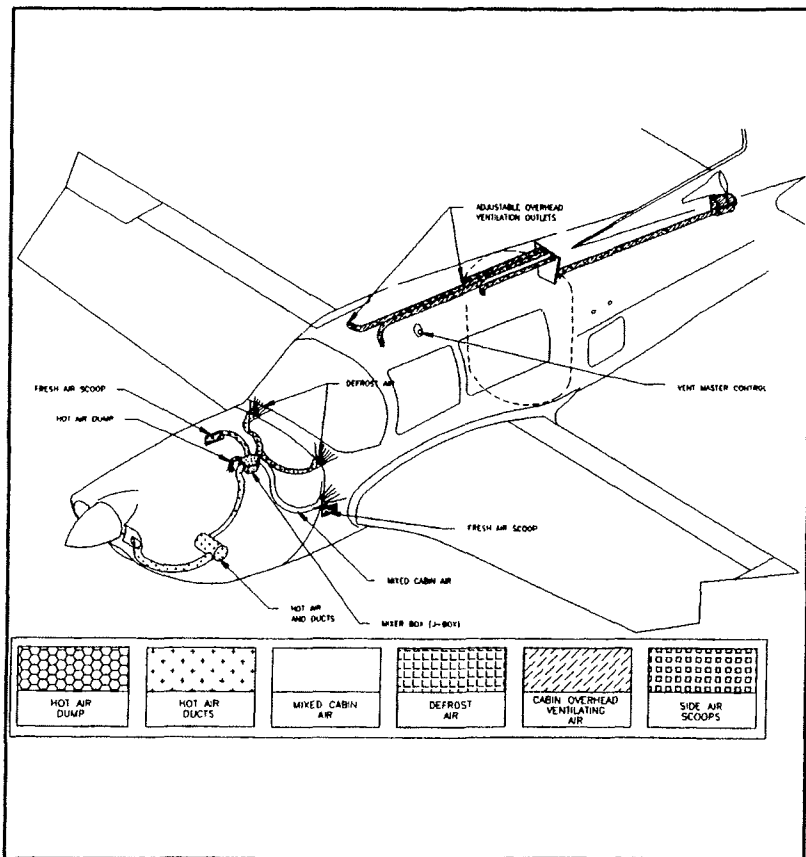


FIGURE 7-11 - CABIN AIR FLOW

## SECTION VII AIRPLANE AND SYSTEMS DESCRIPTION

MOONEY  
M20J

opened. Pulling defrost control full aft decreases flow to cabin ducts and forces maximum air to flow through defrost ducts. A defroster blower is turned ON when DEFROSTER control is pulled.

### **PITOT PRESSURE & STATIC SYSTEM**

A pitot tube, mounted on lower surface of left wing, picks up airspeed indicator ram air. A heated element, within pitot head prevents pitot tube icing when flying in moisture-laden air. A pitot system drain valve is located on forward bottom skin of left wing just outboard of wing fillet. Static ports on each side of tailcone supply static air pressure for the altimeter, airspeed indicator, and vertical speed indicator. A static system drain valve is located on fuselage bottom skin below tailcone access door. An alternate static pressure source valve is installed in the flight panel just left of the pilots control column. Alternate static air is taken from the cockpit and will affect flight instrument readings. Performance variation charts in SECTION V depict the difference between primary and alternate static indications.

### **STALL WARNING SYSTEM**

The electrical stall warning system uses a vane- actuated switch, installed in the left wing leading edge, to energize stall warning horn located in the cabin. The stall warning switch is adjusted to provide aural warning at 5 to 10 Knots before the actual stall is reached and will remain on until the aircraft flight attitude is changed toward a non-stalled condition.

#### **[ NOTE ]**

Do not attempt to adjust prestall warning speed by bending the vane. This part has been heat treated and cannot be bent without damaging or breaking the vane.

### **EMERGENCY LOCATOR TRANSMITTER**

The Emergency Locator Transmitter (ELT) is located in the tailcone and is accessible by removing radio access panel on left side of fuselage. The emergency locator transmitter meets the requirements of FAR 91.52 and is automatically activated by a longitudinal force of 5 to 7 g's. The ELT transmits a distress signal on both 121.5 MHz and 243.0 MHz for a period of from 48 hours in low temperature areas and up to 100 hours in high temperature areas. The unit operates on a self-contained battery. The battery should be checked at annual inspections.

The battery has a useful life of four years. However, to comply with FAA regulations it must be replaced after two years of shelf life. The battery should also be replaced if the transmitter has been used in an emergency situation or if accumulated test time exceeds one hour. The replacement date is marked on the transmitter label. On the unit itself is a three position selector switch placarded "OFF", "ARM", "ON". The "ARM" position is provided to set the unit to the automatic position so that it will transmit only after impact and will continue to transmit until battery is drained to depletion or until switch is manually moved to "OFF" position. The "ARM" position is selected when transmitter is installed at the factory and the switch should remain in that position whenever the unit is installed in the airplane. The "ON" position is provided so the unit can be used as a portable transmitter or in the event the automatic feature was not triggered by impact or to periodically test the function of the transmitter.

Select the "OFF" position when changing the battery, when rearming the unit if it has been activated for any reason, or to discontinue transmission.

#### **[ NOTE ]**

If the switch has been placed in the "ON" position for any reason, the "OFF" position has to be selected before selecting "ARM". If "ARM" is selected directly from the "ON" position the unit will continue to transmit in the "ARM" position.

**E.L.T. REMOTE SWITCH OPERATION**

A pilot's remote switch, located above the radio panel, is provided to allow the transmitter to be controlled from inside the cabin. The pilot's remote switch is placarded "ON", "ARM". The unit will start transmitting with switch in "ON" position and will stop when remote switch is returned to "ARM" position during cockpit checkout.

**| NOTE |**

**If for any reason a test transmission is necessary, the operator must first obtain permission from a local FAA or FCC representative (or other applicable Authority) or in accordance with current regulations. Test transmission should be kept to a minimal duration. Testing of ELT should be conducted only during the first five (5) minutes after any hour and no longer than three (3) audible sweeps.**

The ELT should be checked during ground check to make certain the unit has not been accidentally activated. Check by tuning a radio receiver to 121.5 MHz. If there is an oscillating sound, the locator may have been activated and should be turned off immediately. Reset to the "ARM" position and check again to insure against outside interference.

**BLANK**



|                   |
|-------------------|
| TABLE OF CONTENTS |
|-------------------|

| TITLE . . . . .                            | PAGE |
|--------------------------------------------|------|
| INTRODUCTION . . . . .                     | 8-2  |
| GROUND HANDLING . . . . .                  | 8-2  |
| TOWING . . . . .                           | 8-2  |
| TIEDOWN . . . . .                          | 8-3  |
| JACKING . . . . .                          | 8-3  |
| SERVICING . . . . .                        | 8-3  |
| REFUELING . . . . .                        | 8-3  |
| ENGINE LUBRICATION . . . . .               | 8-4  |
| INDUCTION AIR FILTER . . . . .             | 8-5  |
| GEAR AND TIRES . . . . .                   | 8-6  |
| BATTERY . . . . .                          | 8-6  |
| HYDRAULIC BRAKE RESERVOIR SYSTEM . . . . . | 8-6  |
| MAINTENANCE . . . . .                      | 8-6  |
| PROPELLER CARE . . . . .                   | 8-6  |
| EXTERIOR CARE . . . . .                    | 8-7  |
| INTERIOR CARE . . . . .                    | 8-7  |
| AIRPLANE FILE . . . . .                    | 8-8  |

## INTRODUCTION

This section contains factory recommended procedures for proper ground handling, routine care and servicing of your Mooney.

It is recommended that all aircraft undergo a complete inspection (ANNUAL) each twelve calendar months. In addition to the required ANNUAL inspection, aircraft operated commercially (for hire) should have a complete inspection every 100 hours of operation. All inspections must be performed by a designated representative of the FAA or the Aviation Authority of the country in which the aircraft is licensed..

The FAA may require other inspections by the issuance of Airworthiness Directives applicable to the airplane, engine, propeller and other components. It is the responsibility of the owner/operator to ensure compliance with all applicable airworthiness directives and recommended "MANDATORY" Mooney Aircraft Service Bulletins/Instructions. When inspections are repetitive the owner/operator should take appropriate steps to prevent inadvertent non-compliance.

Scheduling of ALL maintenance is the responsibility of the aircraft operator. A general knowledge of the aircraft is necessary to perform day-to-day service procedures and to determine when unusual service or shop maintenance is needed.

Service information in this section of the manual is limited to service procedures which the operator will normally perform or supervise. Reference should be made to FAR Part 43 for information regarding preventive maintenance which may be performed by a U.S. licensed pilot.

It is wise to follow a planned schedule of lubrication and preventive maintenance based on climatic and flying conditions encountered in your locality.

Keep in touch with your Mooney Service Center and take advantage of his knowledge and experience. He knows your airplane and how to maintain it. Should an extraordinary or difficult problem arise concerning the repair or upkeep of your Mooney, consult the Product Support Department, Mooney Aircraft Corporation, Louis Schreiner Field, Kerrville, TX. 78028, U.S.A.. Telephone: Area Code (210) 896-6000, ext. 219.

All correspondence regarding your airplane should include the **MODEL** and **SERIAL NUMBER**. These numbers can be found on an identification plate located on the lower aft portion of the left side of the tailcone. The model and serial number must also be used when consulting either the Service & Maintenance Manual or Parts Manual.

Service & Maintenance Manual, Illustrated Parts Manual and Service Bulletin/Service Instruction Manual may be obtained for your airplane through any Mooney Service Center.

Avionics and Navigation Systems information should be obtained from the applicable manufacturers.

Engine information should be obtained from TEXTRON-Lycoming, 652 Oliver Street, Williamsport, PA, 17701, telephone (717) 323-6181.

## GROUND HANDLING

### TOWING

For maneuvering the aircraft in close quarters, in the hangar, or on the ramp, use the tow bar furnished with the aircraft loose equipment. The towbar attaches to the nose gear crossbar. One man can move the aircraft providing the ground surface is relatively smooth and the tires are properly inflated. When no towbar is available, or when assistance in moving the aircraft is required, push by hand:

- (1) on the wing leading edges, and
- (2) on the inboard portion of propeller blades adjacent to the propeller hub.

Towing by tractor or other powered equipment is **NOT RECOMMENDED**.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Exercise care not to turn the nose wheel past its normal swivel angle of 14° either side of center. Exceeding turn limits shown on turn indicator may cause structural damage.

**TIEDOWN**

As a precaution against wind damage, always tie down the aircraft when parked outside. Removable wing tiedown eye-bolts, supplied with the loose equipment, screw into wing receptacles marked HOIST POINT just outboard of each main gear. Replace these eyebolts with jack point fixtures when it is necessary to lift the aircraft with jacks. The tail tiedown point is part of the tail skid.

To tie down the aircraft:

- a. Park the airplane facing the wind.
- b. Fasten the co-pilot seat belt through the flight control wheel. Pull seat belt snug so flight controls are immobilized.
- c. Fasten strong ground-anchored chain or rope to the installed wing tiedown eyebolts, and place wheel chocks fore and aft of each wheel.
- d. Fasten a strong ground-anchored chain or rope through the tail skid.

**JACKING**

When it is necessary to raise the aircraft off the ground:

- a. Install jack points in tiedown mounting holes out board of each main gear.
- b. Use standard aircraft jacks at both wing hoist points (wing tiedown eyebolt receptacles) outboard of the main gears. While holding jack point in place, raise jack to firmly contact jack point.
- c. Raise aircraft, keeping wings as nearly level as possible.
- d. Use a yoke-frame jack under propeller to lift the nose.
- e. Secure safety locks on each jack.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Do not raise the aircraft on jacks out of doors when wind velocity is over 8 KTS. When lowering aircraft on jacks, bleed off pressure on all jacks simultaneously and evenly to keep aircraft level as it is lowered.

**| NOTE |**

Individual wheels may be raised without raising the entire aircraft. Wheels not being raised should be chocked fore and aft.

**SERVICING**

**REFUELING**

Integrally sealed tanks, in the forward inboard sections of the wing, carry the standard fuel. With aircraft standing on level ground, service each fuel tank after flight with 100 octane or 100LL aviation-grade gasoline. The visual quantity gauge located on top of each tank should be used as a reference for partial refueling only. Before filling fuel tanks when planning a maximum weight flight configuration, consult the Weight & Balance Record for loading data.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Never use aviation fuel of a lower grade than 100 octane or 100 LL.

Fuel samples from the sump drain of each tank should be taken before the first flight of the day to check for water, sediment or other contamination. Fuel samples taken immediately after refueling may not show water or sediment due to mixing action of refueling process.

//////////  
// WARNING //  
//////////

**Allow five minutes after refueling for water and sediment to settle in the tank and fuel selector valve drain before taking fuel samples or draining the gascolator.**

Tank sump drains are near each wing root forward of the wheel wells. A small plastic cup is supplied as loose equipment for obtaining fuel samples. To collect a fuel sample, insert the cup actuator prong in the sump drain receptacle; push upward to open the valve momentarily; drain fuel into the cup. If water is in fuel, a distinct line separating the water from the gasoline will be seen through the transparent cup wall. Water, being heavier, will settle to the bottom of the cup, while the colored fuel will remain on top. Continue taking fuel samples until all water is purged from the tank.

The fuel tank gascolator is on the cabin floor forward of the pilot's seat. To flush the gascolator sump and lines leading from the wing tanks to the selector valve, turn selector handle to the left, and pull fuel drain valve for about five seconds. Repeat procedure for the right tank, being sure that the fuel drain valve is returned to the closed position and that the drain valve is not leaking.

**ENGINE LUBRICATION**

Operate the new engine at full power within the limitations given in SECTION II.

**| NOTE |**

**Use recommended engine break-in procedures as published by engine manufacturer.**

Before every flight, check the engine oil level and replenish as necessary.

Check engine oil level after engine has been stopped long enough for oil to drain back into sump. The oil filler cap access door is located in top cowling. Any lubricating oil, either mineral or compounded, must conform with TEXTRON-Lycoming Specification No. 301F to be acceptable for use in engines. New or newly overhauled engines should be operated on aviation grade mineral oil during the first 50 HOURS of operation or until oil consumption has stabilized. The aircraft is delivered from Mooney with Multi-viscosity mineral oil.

The engine is equipped with an external oil filter and engine oil change intervals may be extended from 50 HOUR to 100 HOUR INTERVALS providing the external filter element is changed at 50-HOUR INTERVALS.

~~~~~  
~ CAUTION ~  
~~~~~

**If an engine has been operating on mineral oil for several hundred hours, a change to additive oil should be undertaken with caution.**

If engine is in extremely dirty condition, switching to additive oil should be deferred until after engine has been overhauled. When changing from mineral oil to additive or compounded oil after several hundred hours of operation on mineral oil, take the following precautionary steps:

- DO NOT MIX additive oil and straight mineral oil. Drain straight mineral oil from engine, change filter and fill with additive oil.
- DO NOT operate engine longer than FIVE HOURS before again changing oil.
- Check oil filter for evidence of sludge or plugging. CHANGE oil and REPLACE oil filter element every 10 HOURS if sludge is evident. Resume normal oil drain periods after sludge conditions improve.

Your Mooney Service Center will change engine oil in addition to performing all other service and inspection procedures needed when you bring your airplane in for its 50-hour, 100-hour, or annual inspections.

~~~~~  
~ CAUTION ~  
~~~~~

**Excessive oil sludge buildup indicates that the oil system needs servicing at less than 50-hour intervals.**

When changing or adding oil TEXTRON-Lycoming specifies the following grades of oil to use for various ambient air temperatures.

| VISCOSITY CHART                 |            |                              |
|---------------------------------|------------|------------------------------|
| Average Ambient Air Temperature | MIL-L-8082 | MIL-22851                    |
| Above 80° F                     | SAE 60     | SAE 60                       |
| Above 60° F                     | SAE 50     | SAE 40 or SAE 50             |
| 30° to 90° F                    | SAE 40     | SAE 40                       |
| 0° to 70° F                     | SAE 30     | SAE 30, SAE 40 or SAE 20W-40 |
| 0° to 90° F                     | _____      | SAE 20W-50                   |
| Below 10° F                     | SAE 20     | SAE 30 or SAE 20W-30         |

Refer to the latest edition of TEXTRON-Lycoming Service Instruction No. 1014.

Your Mooney Service Center has approved brands of lubricating oil and all consumable materials necessary to service your airplane.

#### INDUCTION AIR FILTER

The importance of keeping the induction air filter clean cannot be over-emphasized. A clean filter promotes fuel economy and longer engine life. The dry-type filter can usually be washed six to eight times before replacement is necessary. Replace the induction air filter every 500 HOURS or at ONE YEAR intervals, whichever occurs first.

1. To clean the dry-type induction air filter:
  - a. Remove the engine cowling.
  - b. Unbolt filter element and remove.
  - c. Direct a jet of air against down or clean side of filter (opposite to normal airflow). Keep air nozzle at least two inches from filter element. Cover entire filter area with air jet.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Do not use a compressor unit with a nozzle pressure greater than 100 PSI.

- d. After cleaning, inspect filter and gasket for damage. Discard a ruptured filter or damaged gasket.

#### | NOTE |

If filter shows an accumulation of carbon, soot, or oil, continue with cleaning steps e through h.

- e. Soak filter in nonsudsing detergent for 15 minutes; then agitate filter back and forth for two to five minutes to free filter element of deposits.

#### | NOTE |

A Donaldson D-1400 Filter Cleaner is also recommended. Do not use solvents.

- f. Rinse filter element with a stream of clear water until rinse water is clear.
- g. Dry filter thoroughly. Do not use a light bulb or air heated above 180° F (82° C) for filter drying.

### GEAR & TIRES

The aircraft is equipped with 6-ply standard-brand tires and tubes. Keep the main gear tires inflated at 30 PSI for reduced GW or 42 PSI for max. GW and the nose tire at 49 PSI for maximum service life. Proper inflation will minimize tire wear and impact damage. Visually inspect the tires at preflight for cracks and ruptures, and avoid taxi speeds that require heavy braking or fast turns. Keep the gear and exposed gear retraction system components free of mud and ice to avert retraction interference and binding.

The gear warning horn may be checked in flight by retarding the throttle with the gear up. The gear horn should sound with an intermittent note at approximately 12 inches manifold pressure.

### BATTERY

The 24 volt 10-ampere-hour electrical storage battery is located in the tailcone, aft of baggage compartment bulkhead, accessible through tailcone access panel. Check battery fluid level every 25 FLIGHT HOURS or each 30 DAYS whichever comes first.

To service the battery, remove the battery box cover and check the terminals and connectors for corrosion. Add distilled water to each battery cell as necessary; keep the fluid at one-quarter inch over the separator tops.

Check the fluid specific gravity for a reading of 1.265 to 1.275. A recharge is necessary when the specific gravity is 1.240 or lower. Start charging at four amperes and finish at two amperes; do not allow battery temperature to rise above 120°F. during recharging. Keep the battery at full charge to prevent freezing in cold weather and to prolong service life.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

**The alternator and voltage regulator operates only as a one-polarity system.  
Be sure the polarity is correct when connecting a charger or booster battery.**

If corrosion is present, flush the battery box with a solution of baking soda and water. Do not allow soda to enter the battery cells. Keep cable connections clean and tightly fastened, and keep overflow lines free of obstruction.

### HYDRAULIC BRAKE RESERVOIR SYSTEM

The brake system hydraulic reservoir is located in the tailcone above the battery. To service, remove the tailcone access panel and check fluid level every 50 HOURS of operation. Fluid level should be no higher than two (2) inches (5 cm) below the filler cap. Use only hydraulic fluid (Red) conforming to specification MIL-H-5606.

**DO NOT FILL RESERVOIR WHILE PARKING BRAKE IS SET.**

## **MAINTENANCE**

### PROPELLER CARE

The high stresses to which propeller blades are subjected makes their careful inspection and maintenance vitally important. Check the blades for nicks, cracks, or indications of other damage before each flight. Nicks tend to cause high stress concentrations in the blades which, if ignored, may result in cracks. It is very important that all nicks and scratches be polished out prior to next flight. It is not unusual for the propeller blades to have some end play or fore and aft movement as a result of manufacturing tolerances in the parts. This has no adverse effect on propeller performance or operation and is no cause for concern if the total movement at the blade tip does not exceed .12 inches (0.3 cm). With the first turn, centrifugal force firmly seats the blades, rigidly and positively against the retention bearing in the propeller hub.

Preflight inspection of the propeller blades should include, in addition to the foregoing, an occasional wiping with an oily cloth to clean off grass and bug stains.

**NEVER USE AN ALKALINE CLEANER ON THE BLADES;** remove grease and dirt with tetrachloride or Stoddard solvent. McCauley recommends the propeller be removed and

overhauled every 1500 HOURS of operation. Hartzell recommends the optional propeller be removed and overhauled every 1500 HOURS of operation.

Your Mooney Service Center will answer any questions you may have concerning blade repair and inspection.

### EXTERIOR CARE

As with any paint applied to a metal surface, an initial curing period is necessary for developing the desired qualities of durability and appearance. Therefore, DO NOT APPLY WAX TO THE NEW AIRCRAFT EXTERIOR UNTIL TWO OR THREE MONTHS AFTER DELIVERY. Wax substances will seal paint from the air and prevent curing. Wash the exterior to prevent dirt from working into the curing paint. Hold buffing to a minimum until curing is complete and there is no danger of disturbing the undercoat.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Before washing exterior, be certain brake discs are covered, a pitot cover is in place, and all static-air buttons are masked off.

Remove grease or oil from the exterior by wiping with a cotton cloth saturated in kerosene. Flush away loose dirt and mud deposits before washing the exterior with an aircraft-type washing compound mixed in warm water. Use soft cleaning cloths or a chamois, and USE ONLY MILD LIQUID TYPE DETERGENTS, avoid harsh or abrasive detergents that might scratch or corrode the surface. It is essential that ALL CLEANING COMPOUNDS AND APPLICATION CLOTHS BE FREE OF ABRASIVES, GRIT, OR OTHER FOREIGN MATTER. Use a prewax cleaner to remove a heavy oxidation film. For nonoxidized or precleaned surfaces, apply a good exterior finish wax recommended for protection of urethane enamel finishes. Carefully follow the manufacturer's instructions. A heavier coating of wax on the leading edge of the wings, empennage, and nose section will help reduce drag and abrasion in these areas.

If fuel, hydraulic fluid, or any other dye-containing substance is found on the exterior paint, wash the area at once to prevent staining. Immediately flush away spilled battery acid, and treat the area with a baking soda-and-water solution, followed by a thorough washing with a mild aircraft detergent and warm water.

Before wiping the windows or windshield, flush the exterior with clear water to remove particles of dirt. Household window cleaning compounds should not be used as some contain abrasives or solvents which could harm acrylic. An anti-static acrylic cleaner is good for cleaning and polishing the windshield and windows.

### INTERIOR CARE

Normal household cleaning practices are recommended for routine interior care. Frequently vacuum clean the seats, rugs, upholstery panels, and headliner to remove as much surface dust and dirt as possible. Occasionally wash the leather or vinyl upholstery and kick panels with a mild soap solution to prevent dirt from working into the surface. Wipe clean with a slightly damp cloth and dry with a soft cloth. NEVER APPLY FURNITURE POLISHES. Foam-type shampoos and cleaners for vinyl, leather, textiles, and plastic materials are good for removing stains and reconditioning the entire interior. Spray dry cleaners are also recommended. Grease spots on fabric should be removed with a jelly-type spot lifter.

~ ~ ~ ~ ~  
~ CAUTION ~  
~ ~ ~ ~ ~

Never use denatured alcohol, benzene, carbon tetrachloride, acetone, or gasoline for cleaning acrylics or interior plastics. Carefully follow manufacturer's instructions when using commercial cleaning and finishing compounds.

Do not saturate fabrics with a solvent which could damage the backing and padding materials. To minimize carpet wetting, keep foam type cleaners as dry as possible and gently rub in circles. Use a vacuum cleaner to remove foam and to dry the materials.

## SECTION VIII HANDLING, SERVICE AND MAINTENANCE

MOONEY  
M20J

Use a damp cloth or a mild soap solution to clean interior plastic, vinyl trim and metal surfaces.

### **AIRPLANE FILE**

Certain miscellaneous data, information and licenses are a part of the airplane file. The following is a checklist of documents that must either be carried in the airplane or available on request of the proper authority.

1. To be displayed in the airplane at all times:
  - a. Aircraft Airworthiness Certificate (FAA Form 8100-2).
  - b. Aircraft Registration Certificate (FAA Form 8050-3).
  - c. Aircraft Radio Station License, if transmitter installed (FCC Form 556).
2. To be carried in the airplane during all flight operations:
  - a. Pilot's Operating Handbook (including FAA Approved Flight Manual).
  - b. Weight and Balance, and associated papers (latest copy of the Repair and Alteration Form, FAA Form 337, if applicable).
  - c. Equipment List.

### **| NOTE |**

**The original weight and balance data and Equipment List are contained in SECTION VI of this manual; the manual is supplied with each new airplane purchased from Mooney Aircraft Corporation. It is recommended that copies of SECTION VI be made and stored in a safe place.**

3. To be made available upon request:
  - a. Airplane Log Book.
  - b. Engine Log Book.

Since the Regulations of other nations may require other documents and data, owners of airplanes not registered in the United States should check with their own aviation officials to determine their individual requirements.



## TABLE OF CONTENTS

| TITLE . . . . .        | PAGE |
|------------------------|------|
| INTRODUCTION . . . . . | 9-3  |

[illegible]

## SECTION IX SUPPLEMENTAL DATA

**MOONEY  
M20J**

**SUPPLEMENT INSERTED**

DATE \_\_\_\_\_

[illegible]

## **INTRODUCTION**

This Section contains **FAA APPROVED** data pertaining to Limitations, Normal Procedures, Emergency Procedures, and effects on performance for certain optional equipment installed in the airplane are contained in this section. Commonly installed items of optional equipment whose function and operation do not require detailed instructions are described in SECTION VII.

BLANK

**TABLE OF CONTENTS**

| TITLE . . . . .                                                                           | PAGE  |
|-------------------------------------------------------------------------------------------|-------|
| INTRODUCTION . . . . .                                                                    | 10-2  |
| GENERAL . . . . .                                                                         | 10-2  |
| GENERAL SOURCES OF INFORMATION . . . . .                                                  | 10-3  |
| RULES AND REGULATIONS . . . . .                                                           | 10-3  |
| FAR, PART 39, AIRWORTHINESS DIRECTIVES . . . . .                                          | 10-3  |
| AIRMAN INFORMATION, ADVISORIES, AND NOTICES, FAA AIRMAN'S<br>INFORMATION MANUAL . . . . . | 10-3  |
| ADVISORY INFORMATION . . . . .                                                            | 10-4  |
| GENERAL INFORMATION ON SPECIFIC TOPICS . . . . .                                          | 10-4  |
| FLIGHT PLANNING . . . . .                                                                 | 10-4  |
| INSPECTIONS - MAINTENANCE . . . . .                                                       | 10-4  |
| SPECIAL CONDITIONS CAUTIONARY NOTICE . . . . .                                            | 10-4  |
| WALK AROUND INSPECTIONS . . . . .                                                         | 10-5  |
| COCKPIT CHECKS . . . . .                                                                  | 10-5  |
| FLIGHT OPERATIONS . . . . .                                                               | 10-5  |
| GENERAL . . . . .                                                                         | 10-5  |
| TURBULENT WEATHER . . . . .                                                               | 10-5  |
| FLIGHT IN TURBULENT AIR . . . . .                                                         | 10-5  |
| MOUNTAIN FLYING . . . . .                                                                 | 10-6  |
| VFR - LOW CEILINGS . . . . .                                                              | 10-6  |
| VFR - AT NIGHT . . . . .                                                                  | 10-6  |
| VERTIGO - DISORIENTATION . . . . .                                                        | 10-6  |
| STALLS, SPINS AND SLOW FLIGHT . . . . .                                                   | 10-7  |
| STANDARD PROCEDURE FOR SPIN RECOVERY . . . . .                                            | 10-7  |
| VORTICES-WAKE TURBULENCE . . . . .                                                        | 10-7  |
| TAKE-OFF AND LANDING CONDITIONS . . . . .                                                 | 10-8  |
| MEDICAL FACTS FOR PILOTS . . . . .                                                        | 10-8  |
| GENERAL . . . . .                                                                         | 10-8  |
| FATIGUE . . . . .                                                                         | 10-8  |
| HYPOXIA . . . . .                                                                         | 10-8  |
| HYPERVENTILATION . . . . .                                                                | 10-9  |
| ALCOHOL . . . . .                                                                         | 10-9  |
| DRUGS . . . . .                                                                           | 10-9  |
| SCUBA DIVING . . . . .                                                                    | 10-9  |
| ADDITIONAL INFORMATION . . . . .                                                          | 10-10 |
| MANUFACTURERS INFORMATION . . . . .                                                       | 10-10 |

## INTRODUCTION

The best of engineering know-how and manufacturing craftsmanship have gone into the design and building of your Mooney Aircraft. Like any high performance airplane, it operates most efficiently and safely in the hands of a skilled pilot.

We urge you to be thoroughly familiar with the contents of your operating manuals, placards, and check list to insure maximum utilization of your airplane. When the airplane has changed ownership, some of these may have been misplaced. If any are missing, replacements should be obtained from any Mooney Service Center as soon as possible.

For your added protection and safety, we have added this special section to the Pilot's Operating Handbook to refresh your knowledge of a number of safety subjects. You should review these subjects periodically.

Topics in this section are mostly excerpts from FAA Documents and other articles pertaining to the subject of safe flying. They are not limited to any particular make or model airplane and do not replace instructions for particular types of airplanes.

Your Mooney Aircraft was designed and built to provide you with many years of safe and efficient transportation. By maintaining it properly and flying it prudently, you should realize its full potential.

## GENERAL

Flying is one of the safest modes of travel. Remarkable safety records are being established each year. As a pilot you are responsible to yourself, your relatives, to those who travel with you, to other pilots and to ground personnel to fly wisely and safely.

The following materials in this Safety section covers several subjects in limited detail. Here are some condensed Do's and Don'ts.

### DO'S

1. Be thoroughly familiar with your airplane and be current in it, or get a check ride.
2. Pre-plan all aspects of your flight-including weather. **FLY YOUR PLAN.**
3. Use services available-FSS, Weather Bureau, etc.
4. Pre-flight your airplane thoroughly.
5. Use your check lists.
6. Have more than enough fuel for takeoff, the planned trip, and adequate reserve.
7. Be sure your weight loading and C.G. are within limits.
8. Be sure articles and baggage are secured.
9. Check freedom of all controls.
10. Maintain appropriate airspeed in takeoff, climb, descent and landing.
11. Avoid other aircraft wake turbulence.
12. Switch fuel tanks before engine starvation occurs.
13. Practice engine out, emergency landing gear extension and other emergency procedures at safe altitude; preferably with a check pilot.
14. Use caution in mountainous terrain.
15. Keep your airplane in good mechanical condition.
16. Stay informed and alert, fly in a sensible manner.

### DON'TS

1. Don't take off with frost, ice or snow on the aircraft surfaces.
2. Don't take off with less than minimum recommended fuel, plus reserves.
3. Don't fly in a reckless, show off, careless manner.
4. Don't fly in thunderstorms or severe weather.
5. Don't fly in possible icing conditions. If you encounter icing conditions, alter altitude or course to minimize exposure.
6. Don't apply controls abruptly or with high forces that could exceed design loads of the airplane.
7. Don't fly when physically or mentally exhausted.
8. **DON'T RELY ON LUCK.**

## **GENERAL SOURCES OF INFORMATION**

There is a wealth of information available to the pilot created for the sole purpose of making your flying easier, faster, and safer. Take advantage of this knowledge and be prepared for an emergency in the remote event that one should occur. You as a pilot also have certain responsibilities under government regulations. These are designed for your own protection. Compliance is not only beneficial but mandatory.

## **RULES AND REGULATIONS**

Federal Aviation regulations, Part 91, General Operating and Flight Rules, is a document of law governing operation of aircraft and the owner's and pilot's responsibilities.

This document covers such subjects as:

- Responsibilities and authority of the pilot in command
- Certificates required
- Liquor and drugs
- Flight plans
- Pre-flight action
- Fuel requirements
- Flight rules
- Maintenance, preventative maintenance, alterations, inspections and maintenance records

These are only some of the topics covered. It is the owner's and pilot's responsibility to be thoroughly familiar with all items in FAR Part 91 and to follow them.

### **FEDERAL AVIATION REGULATIONS, PART 39.** **AIRWORTHINESS DIRECTIVES**

This document specifies that no person may operate a product to which an airworthiness directive issued by the FAA applies, except in accordance with the requirements of that airworthiness directive.

### **AIRMAN INFORMATION, ADVISORIES, AND NOTICES -FAA AIRMAN'S** **INFORMATION MANUAL**

This document contains a wealth of pilot information for nearly all realms of flight, navigation, ground procedures and medical information. Among the subjects are:

- Controlled Air Space
- Services Available to Pilots
- Radio Phraseology and Technique
- Airport Operations
- Clearances and Separations
- Pre-flight
- Departures - IFR
- Enroute - IFR
- Arrival - IFR
- Emergency Procedures
- Weather
- Wake Turbulence
- Medical Facts for Pilots
- Bird Hazards
- Good Operating Practices
- Airport Location Directory

We urge all pilots to be thoroughly familiar with and use the information in this manual.

## SECTION X SAFETY INFORMATION

MOONEY  
M20J

### ADVISORY INFORMATION

Airmen can subscribe to services to obtain FAA NOTAMS and Airman Advisories, and these are also available at FAA Flight Service Stations. NOTAMS are documents that have information of a time-critical nature that would affect a pilot's decision to make a flight; for example, an airport closed, terminal radar out of service, enroute navigational aids out of service, etc.

### **GENERAL INFORMATION ON SPECIFIC TOPICS**

#### FLIGHT PLANNING

FAR Part 91 requires that each pilot in command, before beginning a flight, familiarize himself with all available information concerning that flight.

All pilots are urged to obtain a complete preflight briefing. This would consist of weather; local, enroute and destination, plus alternates, enroute nav-aid information. Also airport runways active, length of runways, take off and landing distances for the airplane for conditions expected should be known.

The prudent pilot will review his planned enroute track and stations and make a list for quick reference. It is strongly recommended a flight plan be filed with Flight Service Stations even though the flight may be VFR. Also, advise Flight Service Stations of changes or delays of one hour or more and remember to close the flight plan at destination.

The pilot must be completely familiar with the performance of the airplane and performance data in the airplane manuals and placards. The resultant effect of temperature and pressure altitude must be taken into account in determining performance if not accounted for on the charts. Applicable FAA manuals must be aboard the airplane at all times including the weight and balance forms and equipment lists.

The airplane must be loaded so as not to exceed the weight and the weight and balance loading center of gravity (c.g.) limitations. Also, that at least minimum fuel for takeoff is aboard and sufficient for the trip, plus reserves. Oil in the engines should be checked and filled as required.

#### INSPECTIONS - MAINTENANCE

In addition to maintenance inspections and preflight information required by FAR Part 91, a complete pre-flight inspection is imperative. It is the responsibility of the owner and operator to assure that the airplane is maintained in an airworthy condition and proper maintenance records are kept.

While the following items cannot substitute for the pre-flight specified for each type of airplane, they will serve as reminders of general items that should be checked.

#### **SPECIAL CONDITIONS CAUTIONARY NOTICE**

Airplanes operated for Air Taxi or other than normal operation and airplanes operated in humid tropics or cold and damp climates, etc., may need more frequent inspections for wear, corrosion and/or lack of lubrication. In these areas periodic inspections should be performed until the operator can set his own inspection periods based on experience.

#### **| NOTE |**

**The required periods do not constitute a guarantee that the item will reach the period without malfunction, as the aforementioned factors cannot be controlled by the manufacturer.**

Corrosion, and its effects, must be treated at the earliest possible opportunity. A clean dry surface is virtually immune to corrosion. Make sure that all drain holes remain unobstructed. Protective films and sealants help to keep corrosive agents from contacting metallic surfaces. Corrosion inspections should be made most frequently under high-corrosion-risk operating conditions, such as in regions of heavy airborne salt concentrations (e.g., near the sea) and high-humidity areas (e.g., tropical regions).



### **WALK AROUND INSPECTIONS**

All airplane surfaces free of ice, frost or snow.  
Tires properly inflated.  
All external locks, covers and tie downs removed.  
Fuel sumps drained.  
Fuel quantity, adequate for trip, plus reserve, (visually checked) and access doors secured.  
Oil quantity checked and access doors secured.  
Check general condition of airplane, engine, propeller, exhaust stacks, etc.  
All external doors secured.

### **COCKPIT CHECKS**

Flashlight available.  
Required documents on board.  
Use the check list.  
All internal control locks removed (If installed).  
Check freedom of controls.  
Cabin and baggage door properly closed.  
Seat belts/shoulder harnesses fastened.  
Passengers briefed.  
Engine and propeller operating satisfactorily.  
All engine gauges checked for proper readings.  
Cowl flaps in proper position.  
Fuel selector in proper position.  
Fuel quantity checked by gauges.  
Altitude setting checked.

### **FLIGHT OPERATIONS**

#### **GENERAL**

The pilot should be thoroughly familiar with all information published by the manufacturer concerning the airplane and is required by FAA to operate in accordance with the FAA Approved Airplane Flight Manual and/or placards installed.

#### **TURBULENT WEATHER**

A complete weather briefing prior to beginning a flight is the start of assurance of a safe trip. Updating of weather information enroute is another assurance. However, the wise pilot also knows weather conditions change quickly at times and treats weather forecasting as professional advice rather than as absolute fact. He obtains all the advice he can, but still stays alert through knowledge of weather changes, observations, and conditions.

Plan the flight to avoid areas of severe turbulence and thunderstorms. It is not always possible to detect individual storm areas or find the in- between clear areas.

Thunderstorms, squall lines and violent turbulence should be regarded as extremely dangerous and **MUST** be avoided. Hail and tornadoic wind velocities can be encountered in thunderstorms that can destroy any airplane, just as tornados destroy nearly everything in their path on the ground.

A roll cloud ahead of a squall line or thunderstorm is visible evidence of violent turbulence, however, the absence of a roll cloud should not be interpreted as denoting the lack of turbulence.

#### **FLIGHT IN TURBULENT AIR**

Even though flight in severe turbulence is to be avoided, flight in turbulent air may be encountered under certain conditions.

Flying through turbulent air presents two basic problems, to both of which the answer is **PROPER AIRSPEED**. On the one hand, if you maintain an excessive airspeed, you run the risk of structural damage or failure; on the other hand, if your airspeed is too low, you may stall.

## **SECTION X SAFETY INFORMATION**

**MOONEY  
M20J**

If turbulence encountered in cruise or descent becomes uncomfortable to the pilot or passengers, the best procedure is to reduce speed to the maneuvering speed, which is listed in the Limitations Section of the FAA Approved Airplane Flight Manual and Pilots Operating Handbook. This speed gives the best assurance of avoiding excessive stress loads, and at the same time providing margin against inadvertent stalls due to gusts.

Beware of overcontrolling in attempting to correct for changes in altitude; applying control pressure abruptly will build up G-forces rapidly and could cause damaging structural stress loads. You should watch particularly your angle of bank, making turns as wide and shallow as possible, and be equally cautious in applying forward or back pressure to keep the nose level. Maintain straight and level attitude in either up or down drafts. Use trim sparingly to avoid being grossly mistrimmed as the vertical air columns change velocity and direction.

### **MOUNTAIN FLYING**

Avoid flight at low altitudes over mountainous terrain, particularly near the lee slopes. **OBSERVE PUBLISHED MINIMUM ENROUTE ALTITUDES (MEA).** If the wind velocity near the level of the ridge is in excess of 25 knots and approximately perpendicular to the ridge, mountain wave conditions are likely over and near the lee slopes. If the wind velocity at the level of the ridge exceeds 50 knots, a strong mountain wave is probable with strong up and down drafts and severe or extreme turbulence. The worst turbulence will be encountered in and below the rotor zone which is usually 8 to 10 miles downwind from the ridge. This zone is characterized by the presence of "roll clouds" if sufficient moisture is present; alto cumulus standing lenticular clouds are also visible signs that a mountain wave exists, but their presence is likewise dependent on moisture. Mountain wave turbulence can, of course, occur in dry air and the absence of such clouds should not be taken as any assurance that mountain wave turbulence will not be encountered. A mountain wave downdraft may exceed the climb capability of your airplane.

### **— AVOID MOUNTAIN WAVE DOWNDRAFTS. —**

### **VFR - LOW CEILINGS**

If you are not instrument rated, avoid "VFR On Top" and "Special VFR". Being caught above an undercast when an emergency descent is required (or at destination) is an extremely hazardous position for the VFR pilot. Accepting a clearance out of certain airport control zones with no minimum ceiling and one-mile visibility as permitted with "Special VFR" is not a recommended practice for VFR pilots.

Avoid areas of low ceilings and restricted visibility unless you are instrument proficient and have an instrument equipped airplane. Then proceed with caution and have planned alternates.

### **VFR - AT NIGHT**

When flying VFR at night, in addition to the altitude appropriate for the direction of flight, pilots should maintain a safe minimum altitude as dictated by terrain, obstacles such as TV towers, or communities in the area flown. This is especially true in mountainous terrain, where there is usually very little ground reference and absolute minimum clearance is 2,000 feet. Don't depend on your being able to see obstacles in time to miss them. Flight on dark nights over sparsely populated country can be almost the same as IFR and should be avoided by untrained pilots.

### **VERTIGO - DISORIENTATION**

Disorientation can occur in a variety of ways. During flight, inner ear balancing mechanisms are subjected to varied forces not normally experienced on the ground. This combined with loss of outside visual reference can cause vertigo. False interpretations (illusions) result and may confuse the pilot's conception of the attitude and position of his airplane.

Under VFR conditions the visual sense, using the horizon as a reference, can override the illusions. Under low visibility conditions (night, fog, clouds, haze, etc.) the illusions predominate. Only through awareness of these illusions, and proficiency in instrument flight procedures, can an airplane be operated safely in a low visibility environment.

Flying in fog, dense haze or dust, cloud banks, or very low visibility, with strobe lights, and particularly rotating beacons turned on frequently causes vertigo. They should be turned off in these conditions, particularly at night.

All pilots should check the weather and use good judgement in planning flights. The VFR pilot should use extra caution in avoiding low visibility conditions.

Motion sickness often precedes or accompanies disorientation and may further jeopardize the flight.

### STALLS, SPINS AND SLOW FLIGHT

Stalls, and slow flight should be practiced at safe altitudes to allow for recovery. Any of these maneuvers should be performed at an altitude in excess of 6,000 feet above ground level.

Spins may be dangerous and should be avoided. In fact, most airplanes are placarded against intentional spins. Spins are preceded by stalls. A prompt and decisive stall recovery protects against inadvertent spins. All airplanes are required to have flight characteristics that give adequate advance warning of an impending stall or they must be equipped with an artificial stall warning device. Keep the artificial system in good working order. Do not operate the airplane with the device made inoperative by the use of circuit breakers or other means.

Stalls should be practiced at safe altitudes for ample recovery. Should a spin be encountered inadvertently, spin recovery should be initiated immediately. As stall attitude is approached, be alert. Take prompt corrective action to avoid the stall or if you are practicing stalls, react the moment the stall occurs. The following is suggested:

1. Do not carry passengers. Be certain that the airplane's center of gravity is as far forward as possible. Forward CG aids spin recovery.
2. Be certain that both student pilot and instructor pilot have a full set of operable controls.
3. Conduct such practicing at altitudes in excess of 6,000 feet above ground level.

Remember that an airplane at or near traffic pattern altitude probably will not recover from a spin before impact with the ground. When descending to traffic pattern altitude and during operation in the traffic pattern and approach, maintain a safe margin above stall speed. During takeoff or go-around, be especially careful to avoid departure stalls associated with turns at low speed. Maintain speeds recommended in the handbook.

### STANDARD PROCEDURE FOR SPIN RECOVERY

In the event of an inadvertent spin, the following recovery procedure should be used:

|               |                                                                                    |
|---------------|------------------------------------------------------------------------------------|
| Rudder        | Apply FULL RUDDER opposite the direction of spin                                   |
| Control Wheel | FORWARD of neutral in a brisk motion.                                              |
|               | Additional FORWARD elevator control may be required if the rotation does not stop. |

|                          |                                                                                           |
|--------------------------|-------------------------------------------------------------------------------------------|
| Ailerons                 | NEUTRAL                                                                                   |
| Throttle                 | RETARD to IDLE                                                                            |
| Wing Flaps (If extended) | RETRACT as soon as possible                                                               |
| Rudder                   | NEUTRALIZE                                                                                |
| Control Wheel            | Smoothly move aft to bring the nose up to a level flight attitude after spin has stopped. |

### VORTICES - WAKE TURBULENCE

Every airplane generates wakes of turbulence while in flight. Part of this is from the propeller or jet engine and part from the wing tip vortices. The larger and heavier the airplane the more pronounced wake turbulence will be. Wing tip vortices from large heavy airplanes are very severe at close range, degenerating with time, wind and space. These are rolling in nature from each wing tip. In tests, vortex velocities of 133 knots have been recorded. Exhaust velocities from large airplanes at takeoff have been measured at 25 mph, 2100 feet behind medium large airplanes.

Encountering the rolling effect of wing tip vortices within two minutes or less after passage of large airplanes is hazardous to light airplanes. This roll effect can exceed the maximum counter roll obtainable in an airplane.

The turbulent areas may remain for as long as three minutes or more, depending on wind conditions, and may extend several miles behind the airplane. Plan to fly slightly above or to the upwind side of the other airplane's flight path.

Because of the wide variety of conditions that can be encountered, there is no set rule to follow to avoid wake turbulence in all situations. However, the Airman's Information Manual goes into considerable detail for a number of wake turbulence avoidance procedures. Use prudent judgment and allow ample clearance time and space following or crossing the wake turbulence of other airplanes in all takeoff, climb out, approach and landing operations. Be observant of wake turbulence from all aircraft, regardless of size.

The Airman's Information Manual contains a section on wake turbulence. FAA Advisory Circular AC 90-230 is also recommended reading.

### TAKE-OFF AND LANDING CONDITIONS

When taking off on runways covered with water or freezing slush, the landing gear should remain extended for approximately ten seconds longer than normal, allowing the wheels to spin and dissipate the freezing moisture. The landing gear should then be cycled up, then down, wait approximately five seconds and then retract again. Caution must be exercised to insure that the entire operation is performed below Maximum Landing Gear Operating Airspeed.

Use caution when landing on runways that are covered by water or slush which cause hydroplaning (aquaplaning), a phenomenon that renders braking and steering ineffective because of the lack of sufficient surface friction. Snow and ice covered runways are also hazardous. The pilot should also be alert to the possibility of the brakes freezing.

Use caution when taking off or landing during gusty wind conditions. Also be aware of the special wind conditions caused by buildings or other obstructions located near the runway in a crosswind pattern.

## **MEDICAL FACTS FOR PILOTS**

### GENERAL

Modern industry's record in providing reliable equipment is very good. When the pilot enters the airplane, he becomes an integral part of the man-machine system. He is just as essential to a successful flight as the control surfaces. To ignore the pilot in pre-flight planning would be as senseless as failing to inspect the integrity of the control surfaces or any other vital part of the machine. The pilot himself has the responsibility for determining his reliability prior to entering the airplane for flight.

While piloting an airplane, an individual should be free of conditions which are harmful to alertness, ability to make correct decisions, and rapid reaction time.

### FATIGUE

Fatigue generally slows reaction times and causes foolish errors due to inattention. In addition to the most common cause of fatigue, insufficient rest and loss of sleep, the pressure of business, financial worries and family problems, can be important contributing factors. If your fatigue is a factor prior to a given flight, don't fly. To prevent fatigue effects during long flights, keep mentally active by making ground checks and radio navigation position plots.

### HYPOXIA

Hypoxia in simple terms is a lack of sufficient oxygen to keep the brain and other body tissues functioning properly. There is wide individual variation in susceptibility to hypoxia. In addition to progressively insufficient oxygen at higher altitudes, anything interfering with the blood's ability to carry oxygen can contribute to hypoxia (anemias, carbon monoxide, and certain drugs). Also, alcohol and various drugs decrease the brain's tolerance to hypoxia.

Your body has no built in alarm system to let you know when you are not getting enough oxygen. It is impossible to predict when or where hypoxia will occur during a given flight, or how it will manifest itself. A major early symptom of hypoxia is an increased sense of well-being (referred to as euphoria). This progresses to slow reactions, impaired thinking ability, unusual fatigue, and dull headache feeling.

The symptoms are slow but progressive, insidious in onset, and are most marked at altitudes starting above 10,000 feet. Night vision, however, can be impaired starting at altitudes lower than 10,000 feet. Heavy smokers may experience early symptoms of hypoxia at altitudes lower than nonsmokers. Use oxygen on flights above 10,000 feet and at any time when symptoms appear.

### HYPERVENTILATION

Hyperventilation or overbreathing, is a disturbance of respiration that may occur in individuals as a result of emotional tension or anxiety. Under conditions of emotional stress, fright, or pain, breathing rate may increase, causing increased lung ventilation, although the carbon dioxide output of the body cells does not increase. As a result, carbon dioxide is "washed out" of the blood. The most common symptoms of hyperventilation are: dizziness; hot and cold sensations; tingling of the hands, legs and feet; tetany; nausea; sleepiness; and finally unconsciousness.

Should symptoms occur that cannot definitely be identified as either hypoxia or hyperventilation try three or four deep breaths of oxygen. The symptoms should improve markedly if the condition was hypoxia (recovery from hypoxia is rapid). If the symptoms persist, discontinue use of oxygen and consciously slow your breathing rate until symptoms clear and then resume normal breathing rate. Normal breathing can be aided by talking aloud.

### ALCOHOL

Common sense and scientific evidence dictate that you not fly as a crew member while under the influence of alcohol. Even small amounts of alcohol in the human system can adversely affect judgment and decision making abilities. FAR 91.11 states "(a) No person may act as a crew member - (1) within 8 hours after the consumption of any alcoholic beverage."

Tests indicate that as a general rule, 2 ounces (.06 LITERS) of alcohol at 15,000 feet produce the same adverse effects as 6 ounces (.18 LITERS) at sea level. In other words, the higher you get, "the higher you get".

### DRUGS

Self-medication or taking medicine in any form when you are flying can be extremely hazardous. Even simple home or over-the-counter remedies and drugs such as aspirin, antihistamines, cold tablets, cough mixtures, laxatives, tranquilizers, and appetite suppressors, may seriously impair the judgment and coordination needed while flying. The safest rule is to TAKE NO MEDICINE before or while flying, except on the advice of your Aviation Medical Examiner.

**SECTION X**  
**SAFETY INFORMATION**

**MOONEY**  
**M20J**

**SCUBA DIVING**

Flying shortly after any prolonged scuba diving could be dangerous. Under the increased pressure of the water, excess nitrogen is absorbed into your system. If sufficient time has not elapsed prior to takeoff for your system to rid itself of this excess gas, you may experience the bends at altitudes even under 10,000 feet, where most light planes fly.

**ADDITIONAL INFORMATION**

In addition to the coverage of subjects in this section, the National Transportation Safety Board and the Federal Aviation Administration periodically issue general aviation pamphlets concerning aviation safety in greater detail. These can be obtained at FAA Offices, Weather Stations, Flight Service Stations, or Airport Facilities. These are very good sources of information and are highly recommended for study. Some of these are titled:

Airman's Information Manual  
12 Golden Rules for Pilots  
Weather or Not  
Disorientation  
Plane Sense  
Weather Info Guide for Pilots  
Wake Turbulence  
Don't Trust to Luck, Trust to Safety  
Thunderstorm - TRW  
IFR-VFR Either Way Disorientation Can be Fatal

**MANUFACTURERS INFORMATION**

See following pages (if included)